


# Rouen Storage Bed

Double

Thank you for purchasing this Rouen Storage Bed. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

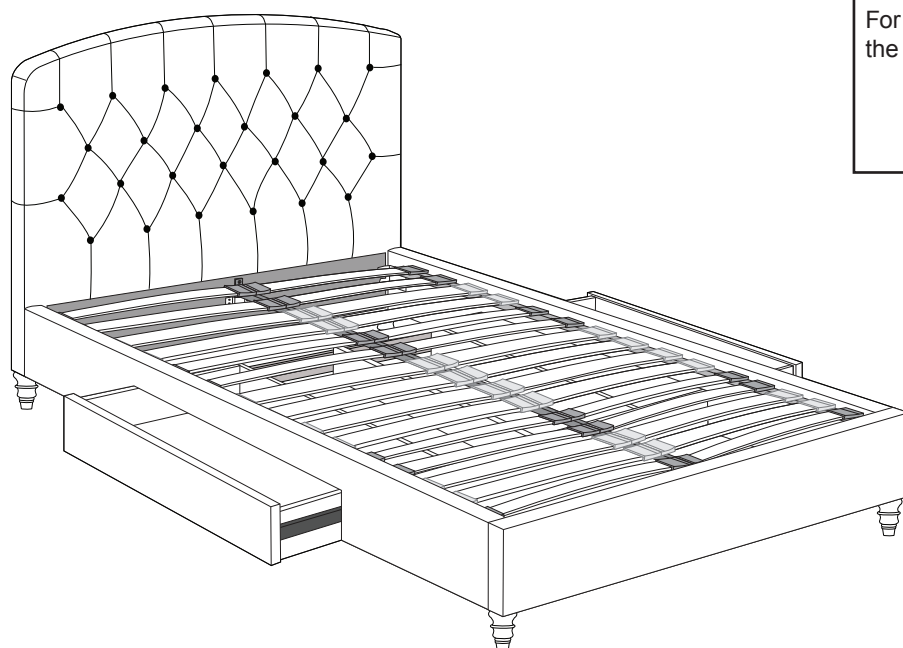

For product support or spare parts please call the John Lewis Helpline;


T: 01244 689949

E: [mail@fwgroup-uk.com](mailto:mail@fwgroup-uk.com)

## PRE-ASSEMBLY PREPARATION

Please ensure instructions are read in full before attempting to assemble this product.

### Necessary Tools



Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the John Lewis Helpline.

This product is **HEAVY**. It should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.

This product takes approximately **90 MINUTES** to assemble with **2 PEOPLE**.  
Do not use power tools to assemble.
















The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

Read this leaflet in full before commencing assembly.










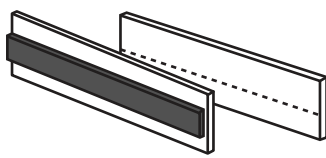
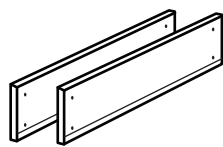
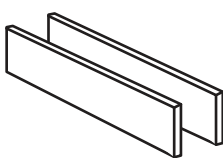
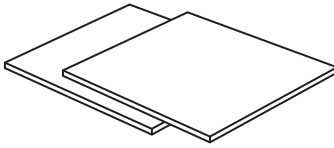
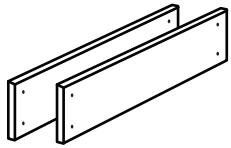

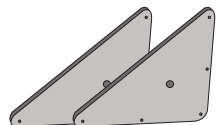
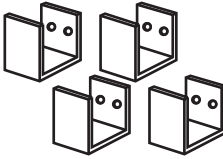
If you require any additional information or have any issues with this product please call the John Lewis Helpline on 01244 689949 or email [mail@fwgroup-uk.com](mailto:mail@fwgroup-uk.com)

# Fittings and parts checklist

## Fittings


<b>A</b>	M4 Allen Key x 1 pcs		<b>I</b>		M6 x 25mm Bolt x 6 pcs
<b>B</b>	M5 Allen Key x 1 pcs		<b>J</b>		M6 x 40mm Bolt x 8 pcs
<b>C</b>	Centre Caps x 7 pcs		<b>K</b>		Screw 4 x 50mm x 4pcs
<b>D</b>	Side Caps x 14 pcs		<b>L</b>		Screw 3.5 x 30mm x 42pcs
<b>E</b>	Wide Centre Caps x 8		<b>M</b>		M8 Nut x 2 pcs
<b>F</b>	Wide Side Caps x 16		<b>N</b>		M13 Spanner x 1 pcs
<b>G</b>	M8 Spring Washer x 10 pcs		<b>O</b>		Screw 4 x 18mm x 8pcs
<b>H</b>	M8 x 16mm Bolt x 8 pcs				

Parts
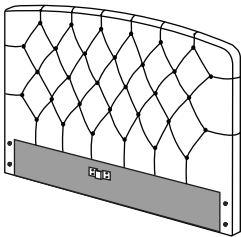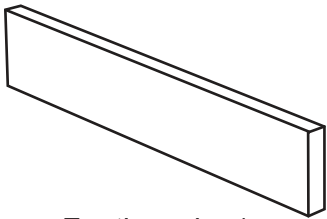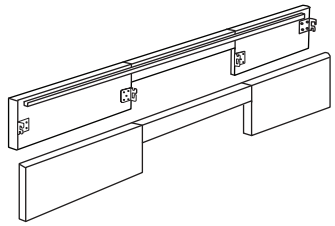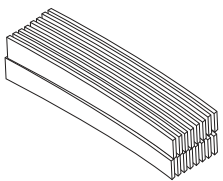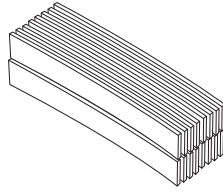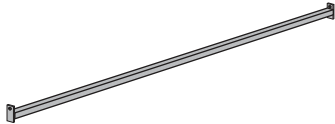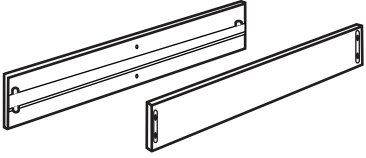
<div>1</div> <div></div> <div>Headboard x 1</div>	<div>2</div> <div></div> <div>Footboard x 1</div>	<div>3</div> <div></div> <div>Side Rails x 2</div>
<div>4</div> <div></div> <div>Slats x 14</div>	<div>5</div> <div></div> <div>Wide Slats x 16</div>	<div>6</div> <div></div> <div>Centre Rail x 1</div>
<div>7</div> <div></div> <div>Wooden Legs x 4</div>	<div>8</div> <div></div> <div>Drawer Runner Base x 2</div>	<div>9</div> <div></div> <div>Drawer Centre Support x 1</div>
<div>10</div> <div></div> <div>Drawer Sides x 4</div>	<div>11</div> <div></div> <div>Drawer Fronts x 2</div>	<div>12</div> <div></div> <div>Drawer Backs x 2</div>
<div>13</div> <div></div> <div>Drawer Bottoms x 2</div>	<div>14</div> <div></div> <div>Upholstered Drawer Panels x 2</div>	<div>15</div> <div></div> <div>Drawer Bottom Supports x 6</div>
<div>16</div> <div></div> <div>Metal plates x 2</div>	<div>17</div> <div></div> <div>Metal Stopper x 4</div>	


# Step One

Place metal bracket on Side Rails (3) over pre-inserted bolts in Headboard (1) and Footboard (2) and hand-tighten to loosely secure parts together. Do not tighten bolts with M5 Allen Key (B) until you have inserted the Centre Rail in Step Four.

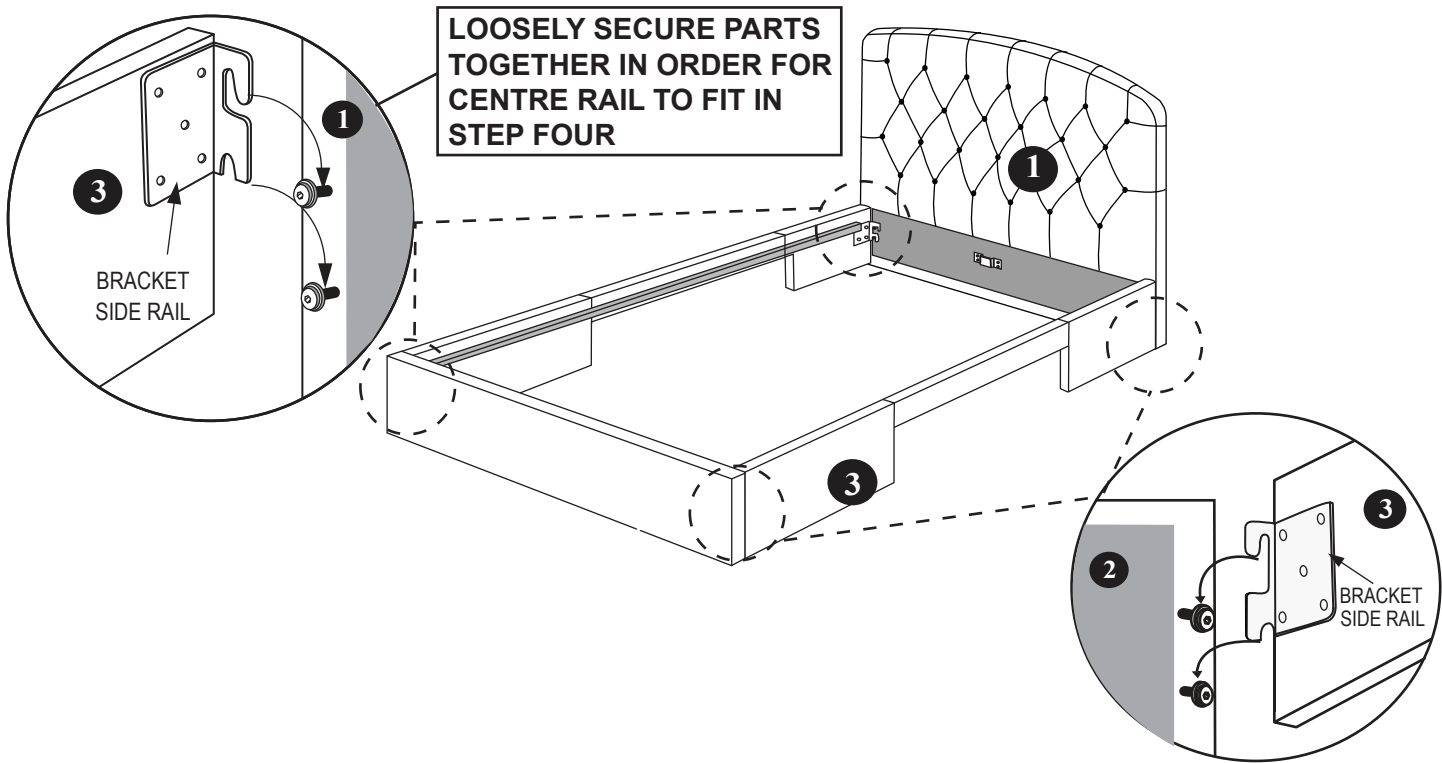


# Step Two

Attach M8 Spring Washer (G) and M8 x 16mm Bolts (H) into the metal fixings onto both Drawer Runner Base (8) (**only for the top side**). Insert the Drawer Runner Base (8) inside the bed frame as shown in step 2. Next, attach the M8 Spring Washer (G) and M8 x 16mm Bolts (H) into the bottom side of metal fixing on the bottom supports. Loosely tighten the bolts using M5 Allen Key (B).

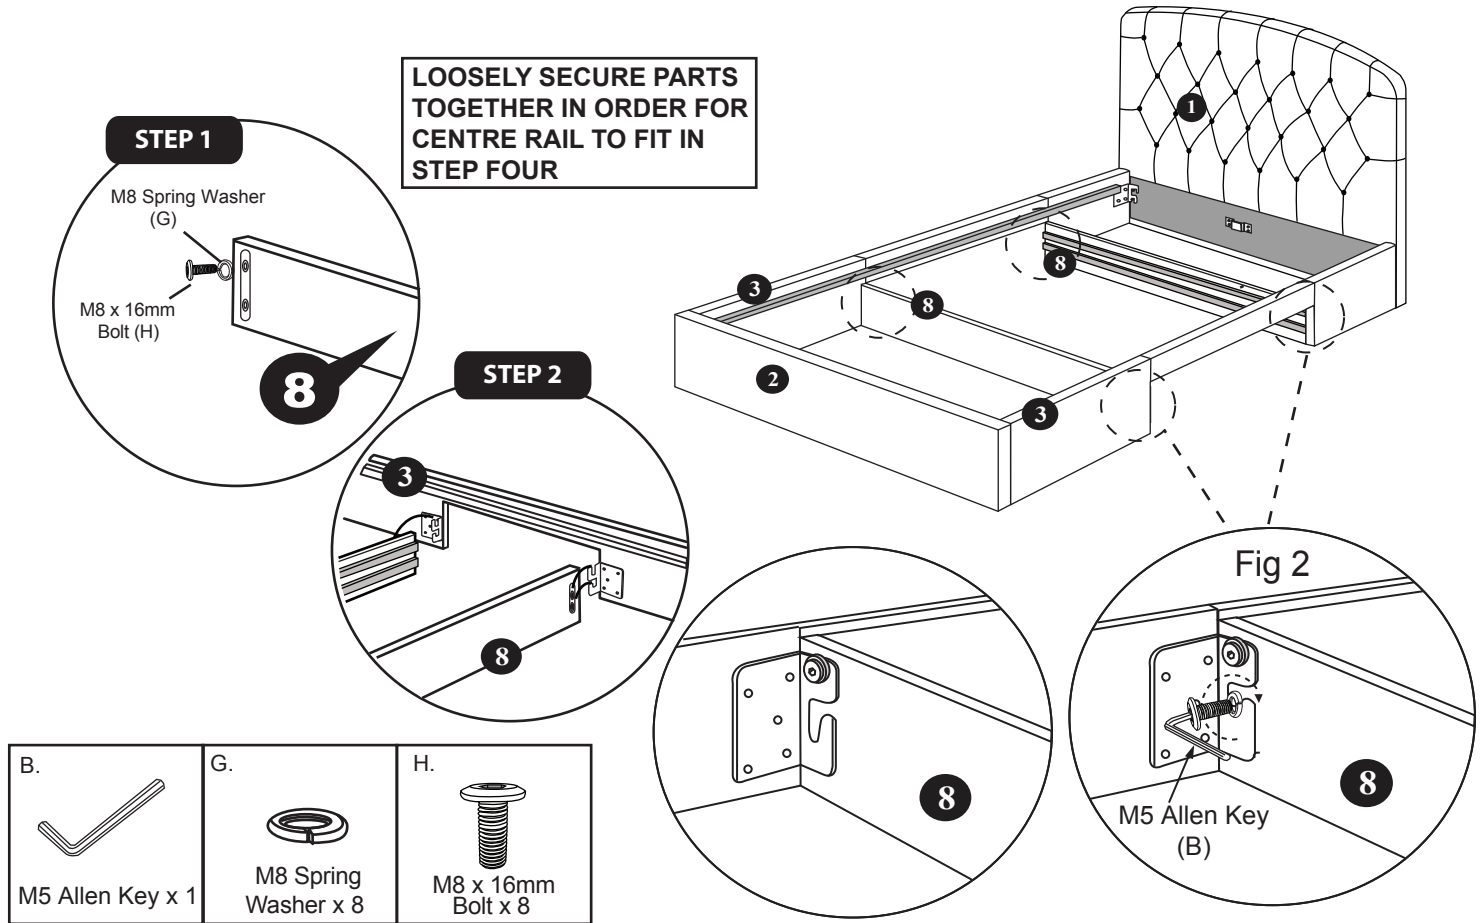


Step Three

Attach Drawer Centre Support (9) to Drawer Runner Base (8) and secure into place using Screws 4 x 50mm (K) as shown in the diagram below.

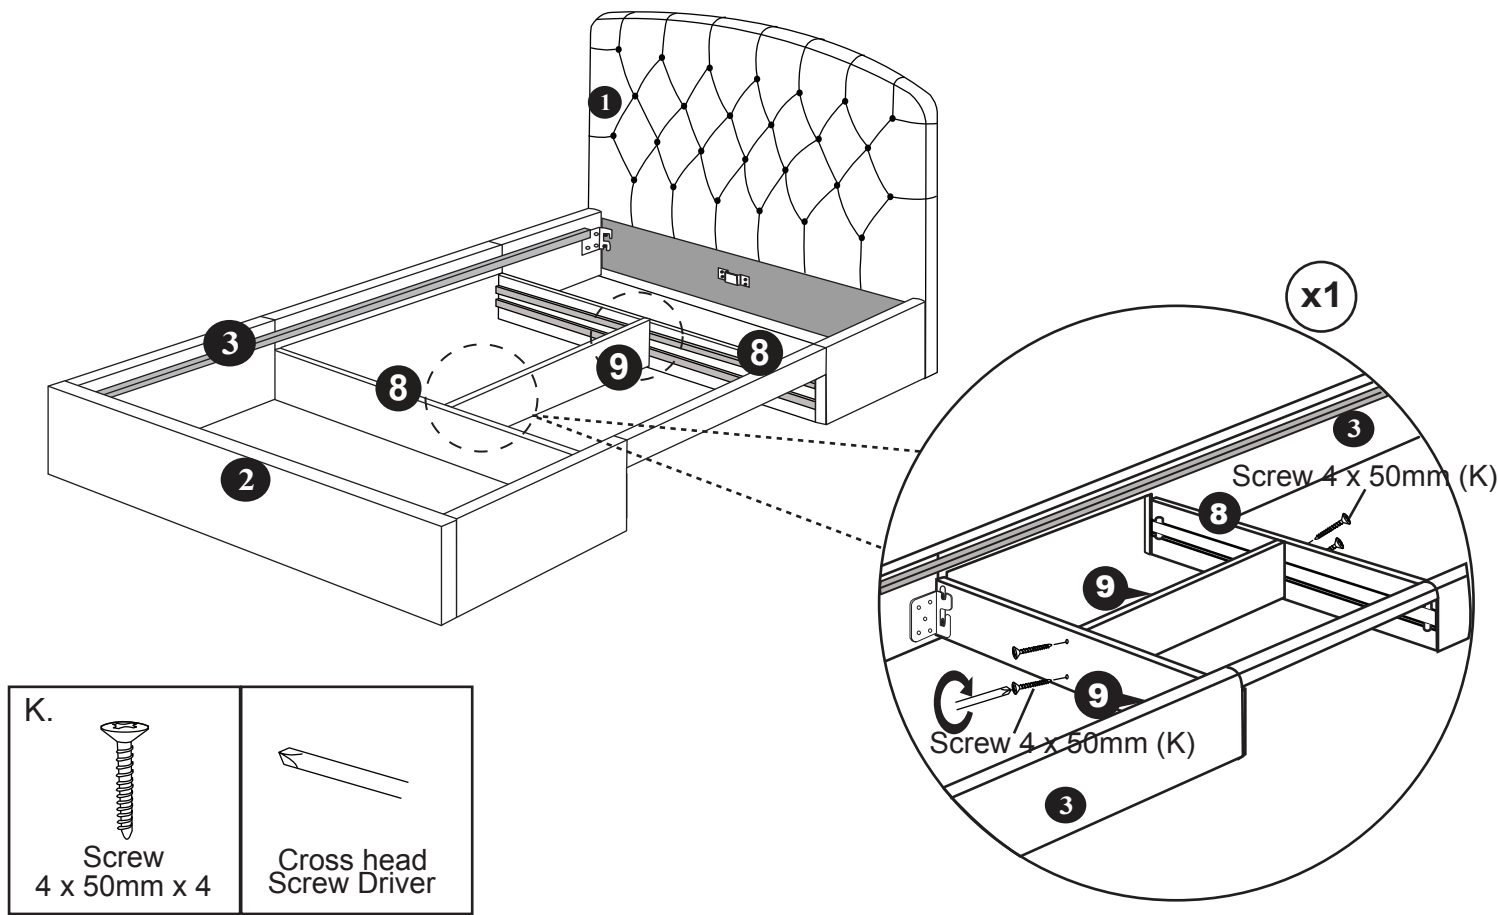



Step Four

Insert Centre Rail (6) into the brackets on the Headboard (1) and Footboard (2). Push down fully and secure in place using M6 x 25mm Bolts (I). Tighten using M4 Allen Key (A). You can now tighten the bolts with M5 Allen Key (B) at the Side Rails from Step One so all fastenings are now tightened.

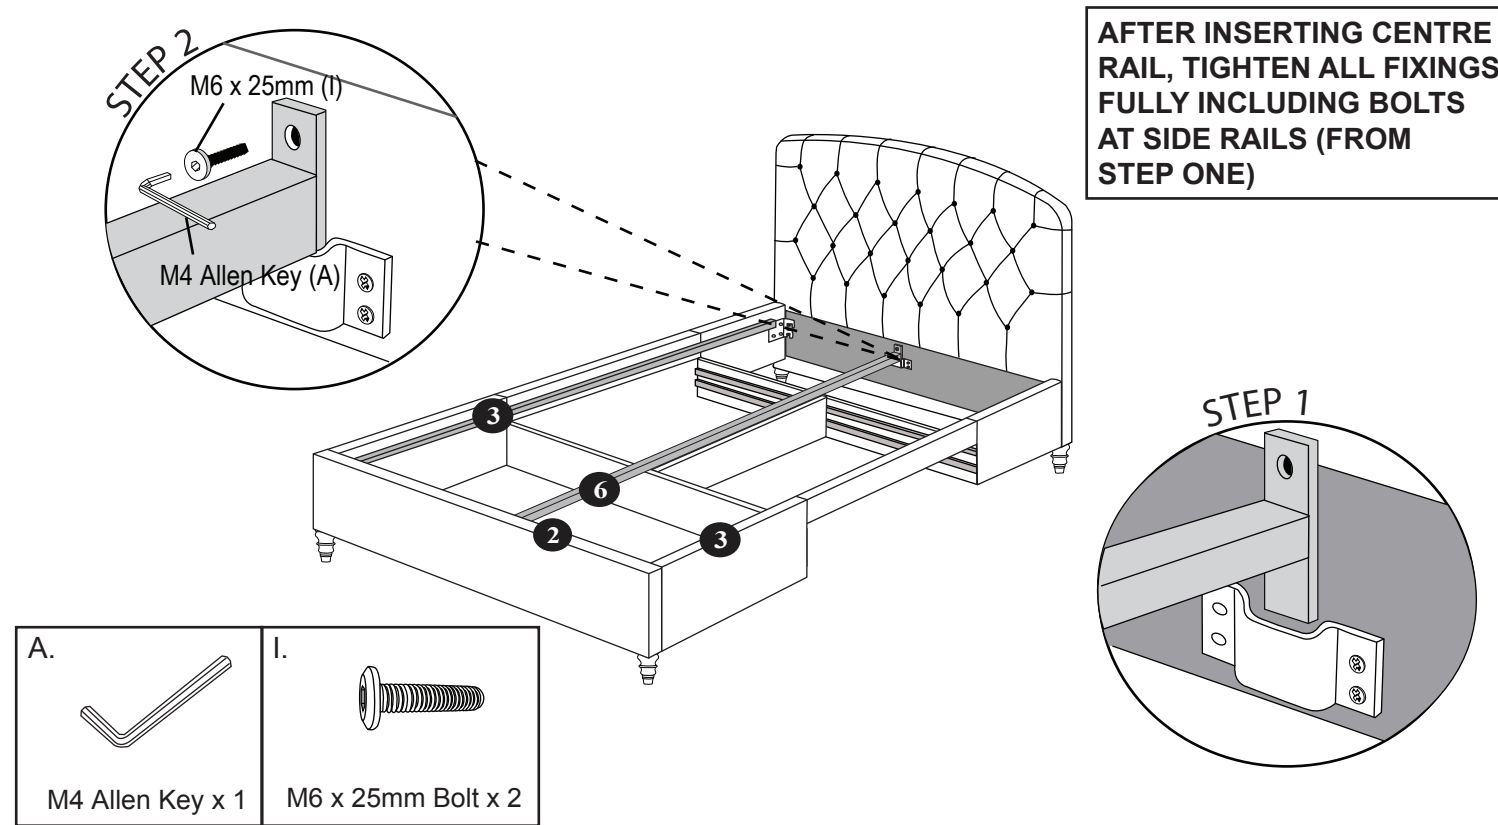

Step Five


Insert the Front Legs (7)x2 into the pre-drilled holes on the underside of the Headboard (1) and twist to secure, as shown in the diagram below.

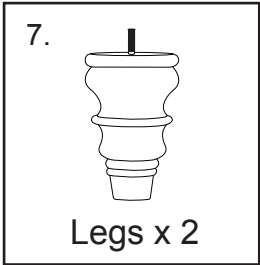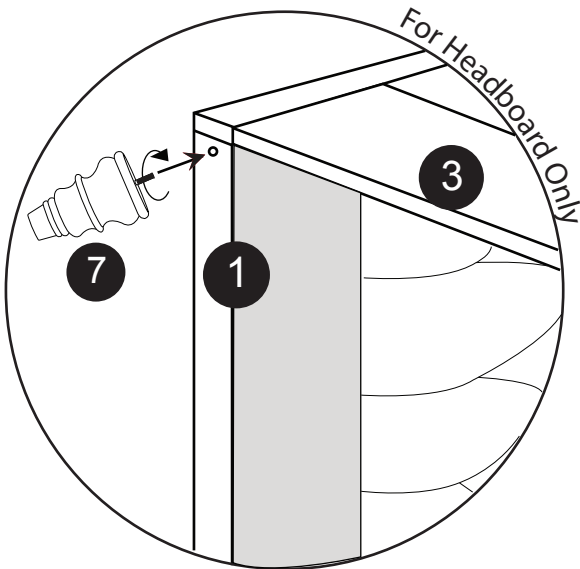

Step Six


Attach the Metal Plate (16) to the bottom of the Footboard (2) using Bolts M6 X 25mm (I) x2. Do not tighten the bolts until you make adjustment for the screw hole at the Side Rail (3). Insert Wooden Leg (7) into the bottom of the Metal Plate (16) using M8 Spring Washer (G) and M8 Nut (M). Hold the M8 Nut (M) using M13 Spanner (N) and twist the Wooden Leg (7) to secure in place. Repeat for other leg.

For Footboard Only

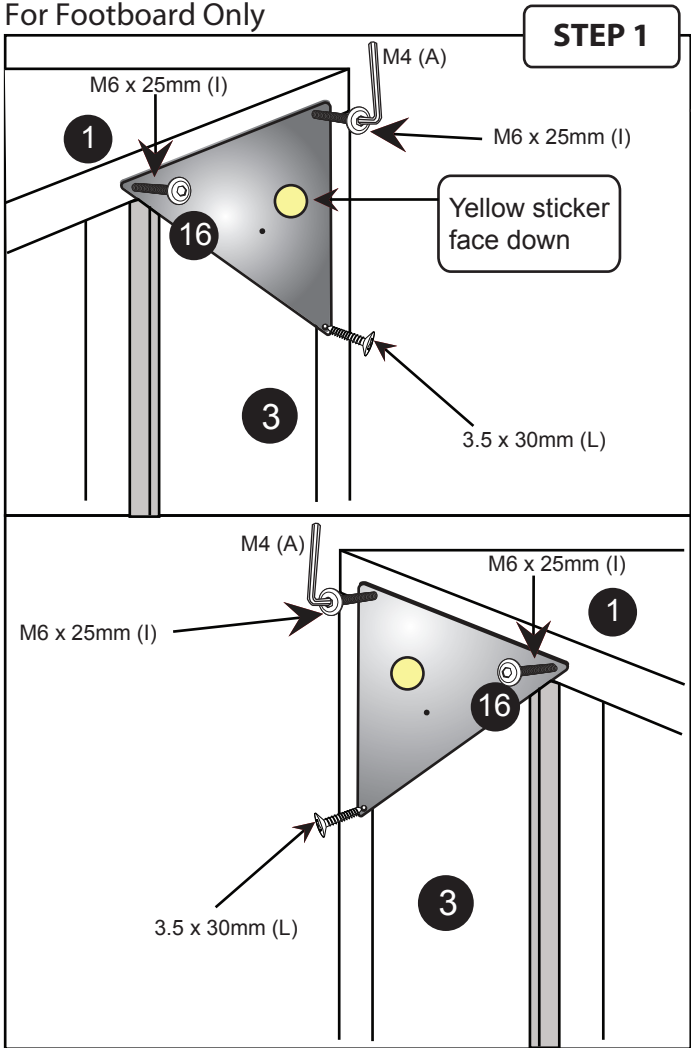

AFTER INSERTING BOLT M6 x 25MM, MAKE ADJUSTMENT FOR SCREW HOLE, THEN INSERT THE SCREW 3.5 X 30MM. TIGHTEN THE BOLT M6 x 25MM FIXINGS FULLY.


TWIST WOODEN LEG ONLY WITHOUT MOVING THE M8 NUT, SPRING WASHER AND SPANNER

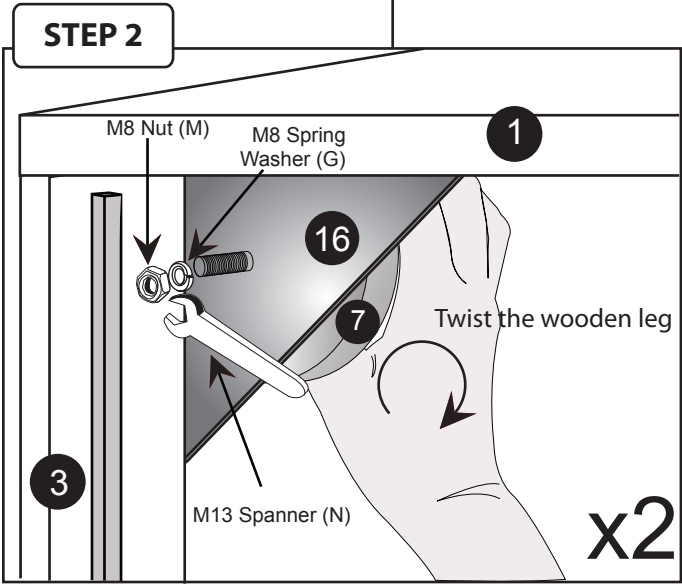


G.	7.	16.	N.	M.	L.	I.	A.
M8 Spring Washer x 2	Legs x 2	Metal plates x 2	M13 Spanner x 1	M8 Nut x 2	Screw 3.5 x 30mm x 2	M6 X 25mm Bolt x 4	M4 Allen Key x 1

# Step Seven


To construct the drawers, fix Drawer Front (11) with one end of each Drawer Bottom Support (15) using Screws 3.5 x 30mm (L) as shown in Fig.1, then fix the Drawer Sides (10) to the Drawer Front (11). Next, insert Drawer Bottom (13) and then fix Drawer Back (12) using Screws 3.5 x 30mm (L) as shown in Fig.2. Finally, secure the other end of the Drawer Bottom Supports (15) to the other side of the drawer and tighten using a cross head screw driver.

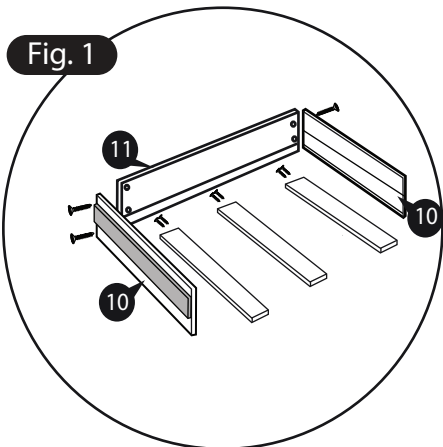


(x2)

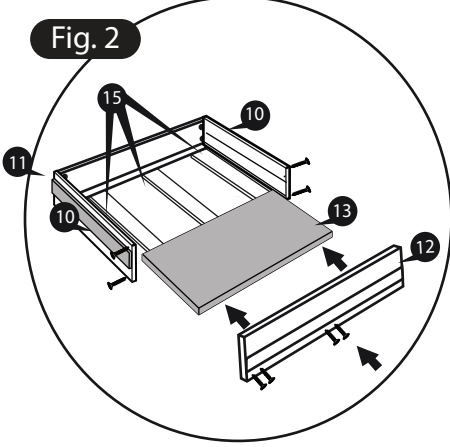

(x2)



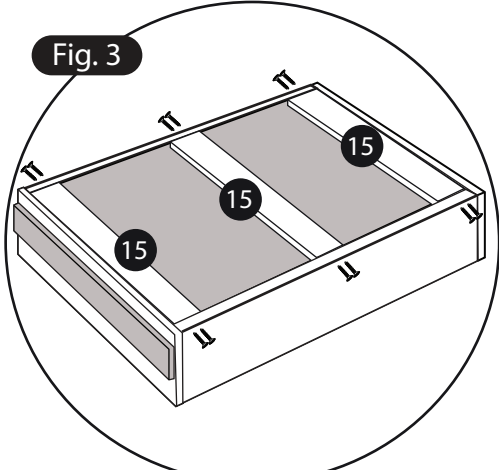


(x2)

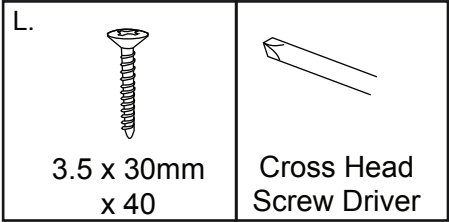


# Step Eight

Attach Upholstered Front Panel (14) to drawer and tighten together using M6 x 40mm Bolt (J). Tighten with M4 Allen Key (A). Slide drawers into both sides of the bed frame. The bed is now ready for use.

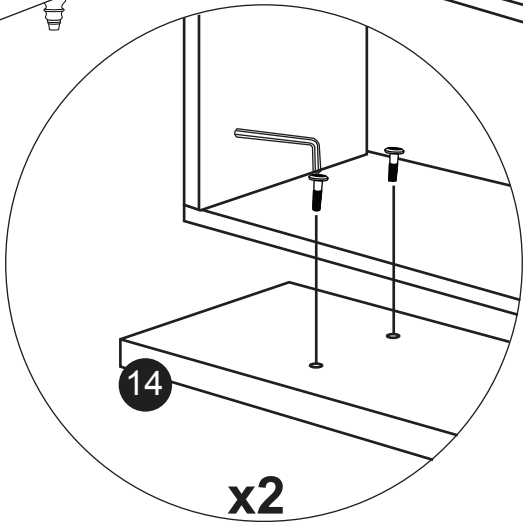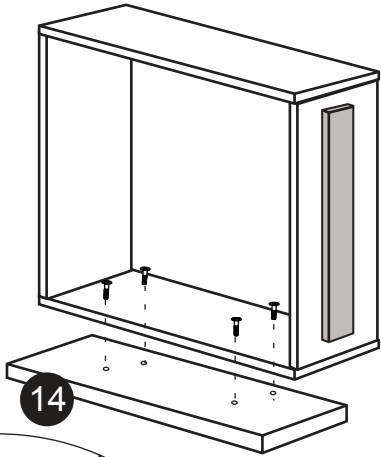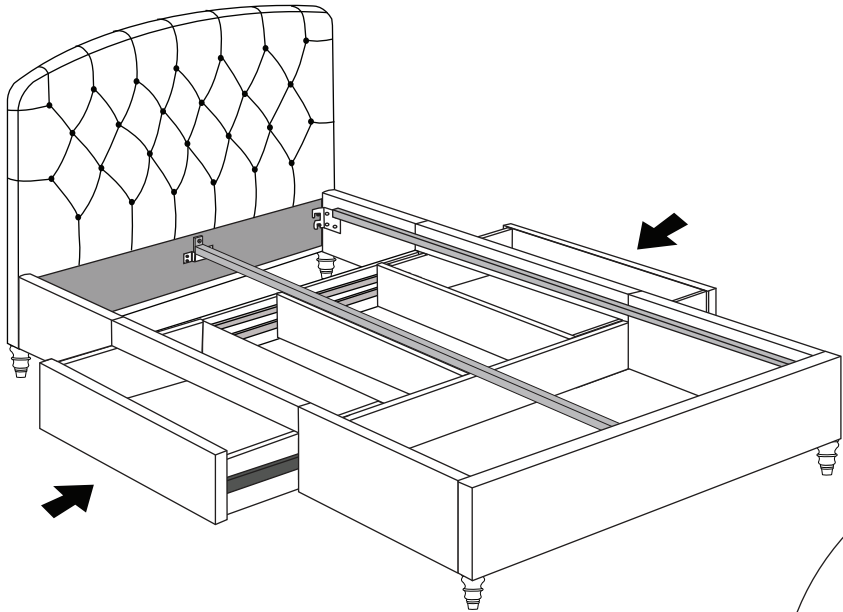


x2

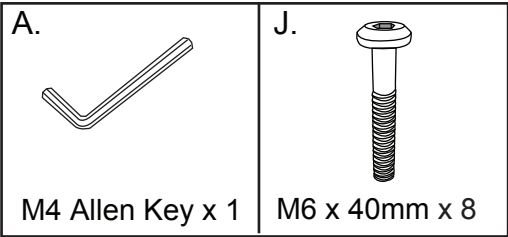



Step Nine


Attach Metal Stopper (16) to the Drawer Runner Base (8) using Screw 4 x 18mm (O).

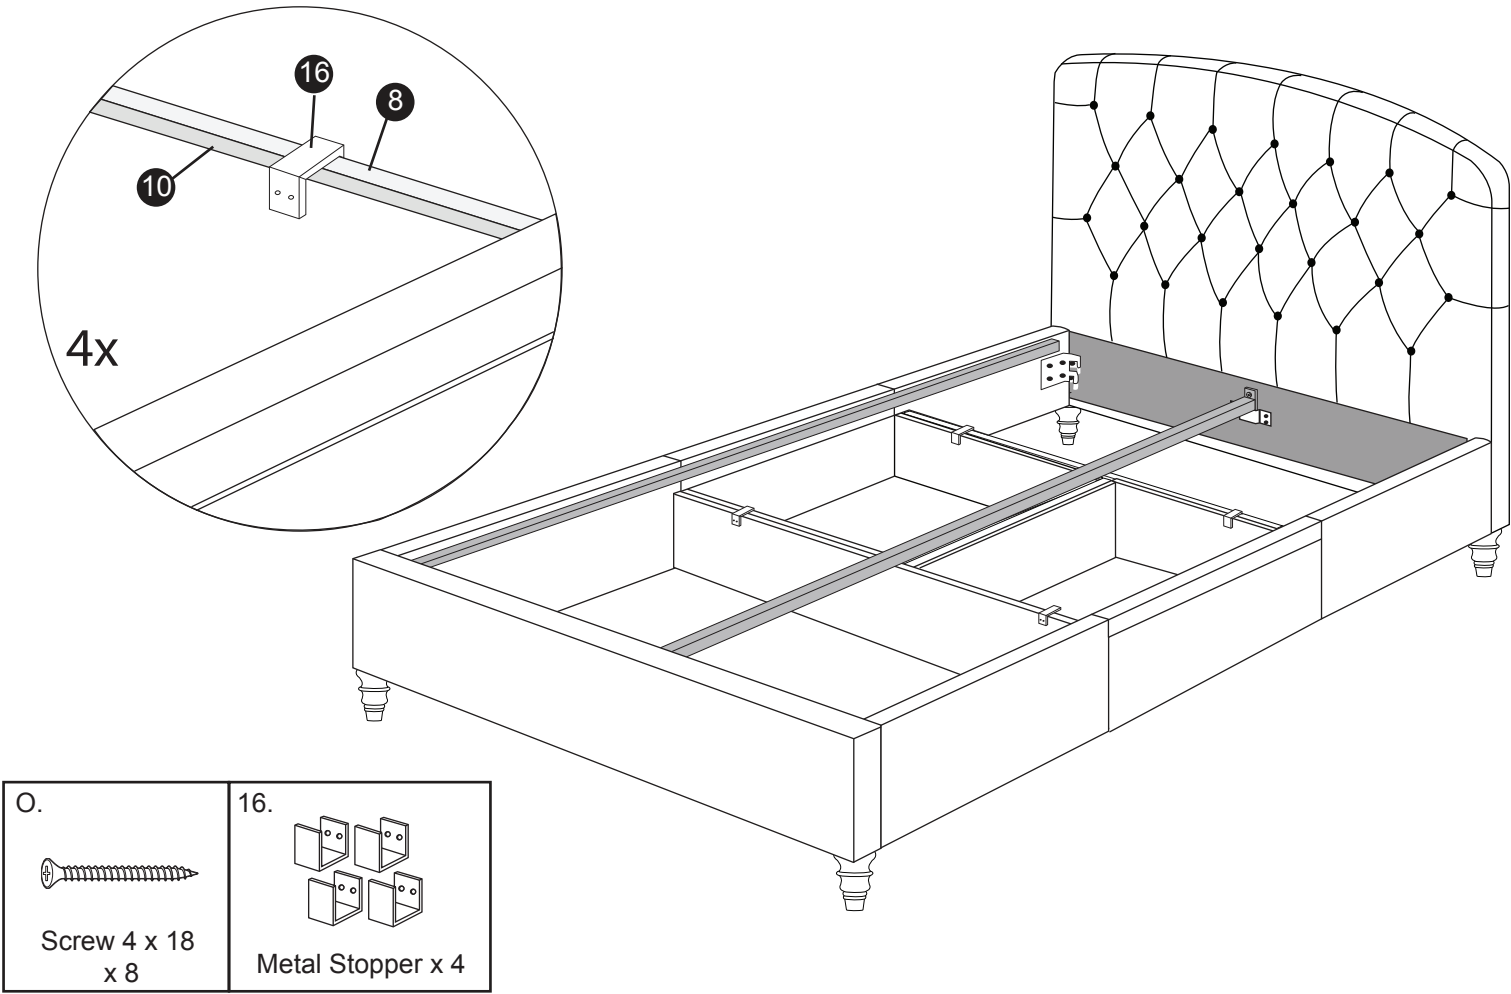



# Step Ten

With the curved side facing upwards, insert 2 slats into a centre cap then into 2 side caps on either end(x15). (Please note the Wide Slats (5) must be inserted with the Wide Centre Caps (E) and Wide Side Caps (F)). Repeat this process for all slats.  
Note: Please see the Diagram 1 below to arrange the slat with the correct system).

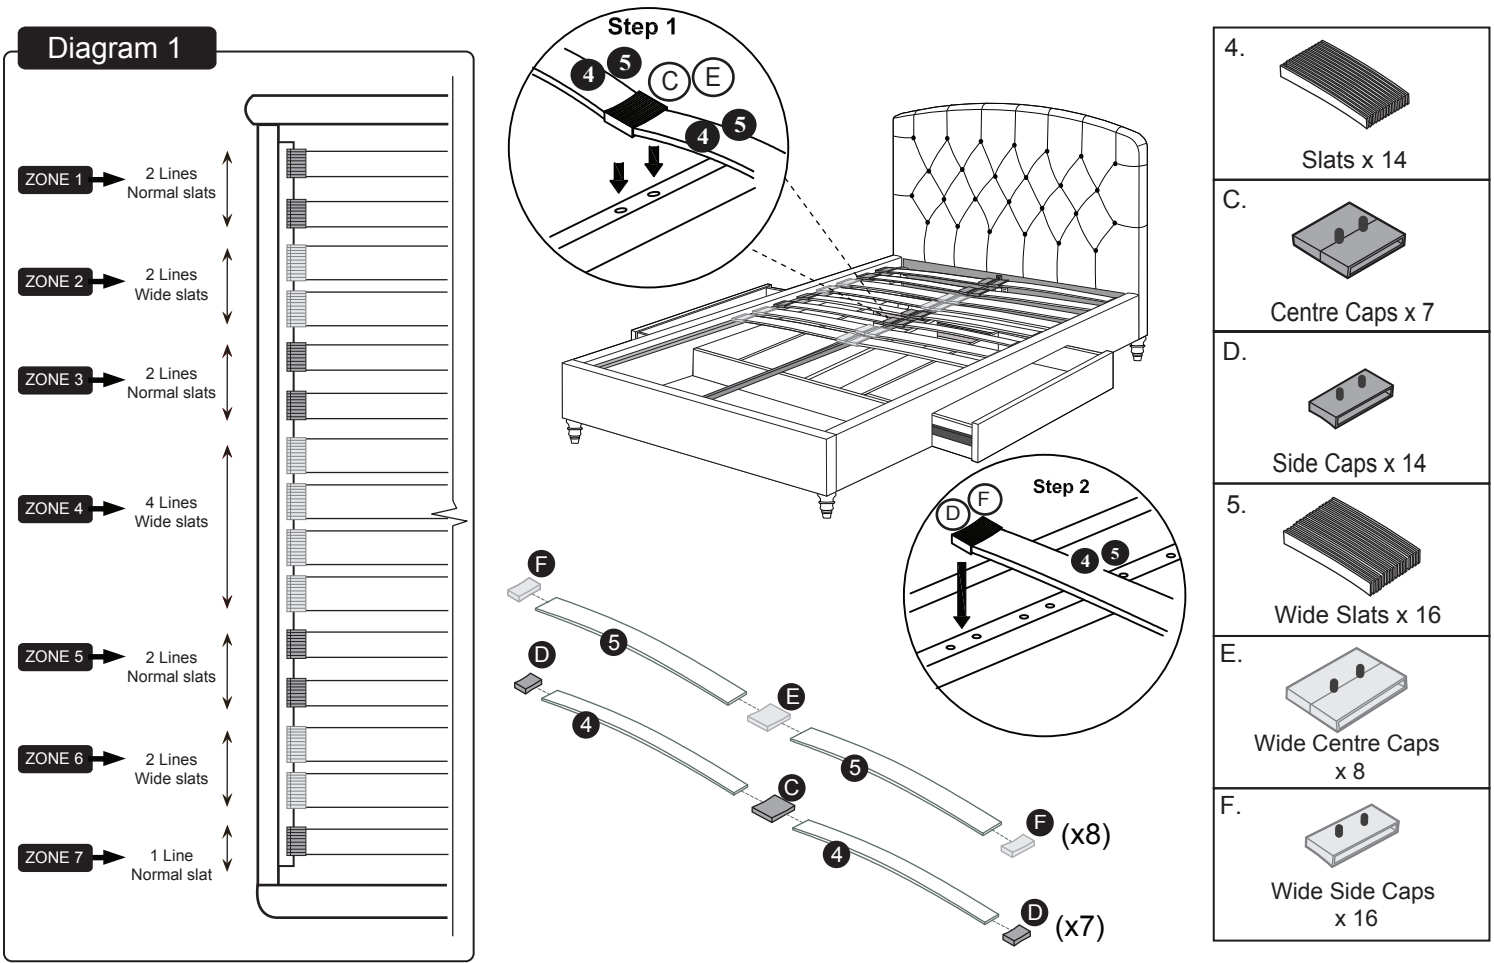

# Step Eleven

The bed is now ready for use.



---

## Care and Maintenance

---

This Rouen Storage Bed should be cleaned using a soft damp cloth and dried immediately.

Do not use a very wet cloth or allow any liquid contact for a long period of time as this can permanently damage the surface.

Do not use detergents and do not rub as this can cause permanent damage.

Always protect your bed from direct sunlight as this may accelerate the natural ongoing discolouration process.

Bolts holding together the bed frame should be tightened regularly.

Please retain this information leaflet for future reference.

This product complies with BS EN 1725:1998.

---

## Safety Instructions

---

Never drag furniture when moving it. Always lift it.

Periodically check all fixings to ensure none have come loose and re-tighten where necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly installed. Any assembly should be carried out by a competent adult.

No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

During assembly, children should be kept away from the product due to possible risk of injury.

Do not use this item if any components are missing or damaged.

It is recommended that care is taken when moving heavy objects to a new location to avoid personal injury or damage to the furniture. Please be careful to retain all fittings when doing this.

**If you require any additional information or have any issues with this product please call the John Lewis Helpline on 01244 689949 or email [mail@fwgroup-uk.com](mailto:mail@fwgroup-uk.com)**

John Lewis Partnership 171 Victoria Street, London, SW1E 5NN.  
[www.johnlewis.com](http://www.johnlewis.com)