

Showwood Bed

King
Superking


Thank you for purchasing this Showwood Bed. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.



PRE-ASSEMBLY PREPARATION

Please ensure instructions are read in full before attempting to assemble this product.

Necessary Tools

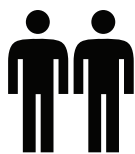

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact customer services on 01244 689949 or email mail@fwgroup-uk.com.

This product is **HEAVY**. It should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.




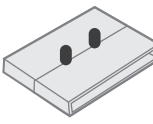








This product takes approximately **40 MINUTES** to assemble with **2 PEOPLE**.

The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.









Read this leaflet in full before commencing assembly.

Fitting and parts checklist

Fittings


A	M5 Allen Key x 1		G		M6 x 55mm Bolt x 4
B	M4 Allen Key x 1		H		Wide Centre Caps x 8
C	Centre Caps x 8		I		Wide Side Caps x 16
D	Side Caps x 16		J		M8 Washer x 2
E	M6 X 40mm Bolt x 8		K		M8 Spring Washer x 4
F	M6 Washer x 10		L		M8 x 50mm Bolt x 4

Parts

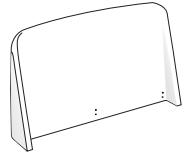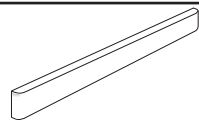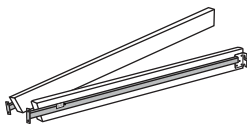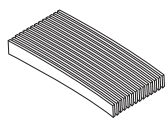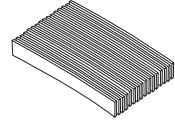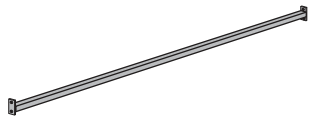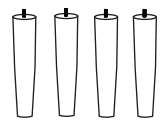1	Headboard x 1	
2	Footboard x 1	
3	Side Rails x 2	
4	Slats x 16	
5	Wide Slats x 16	
6	Centre Rail x 1	
7	Legs x 4	
8	Wooden Base (Headboard) x 2	

Step One

Attach the Wooden Base (8) into the side on the Headboard (1) using the M6 x 55mm Bolt (G), and M8 Washer (J). Do not tighten the bolt until all part attached.

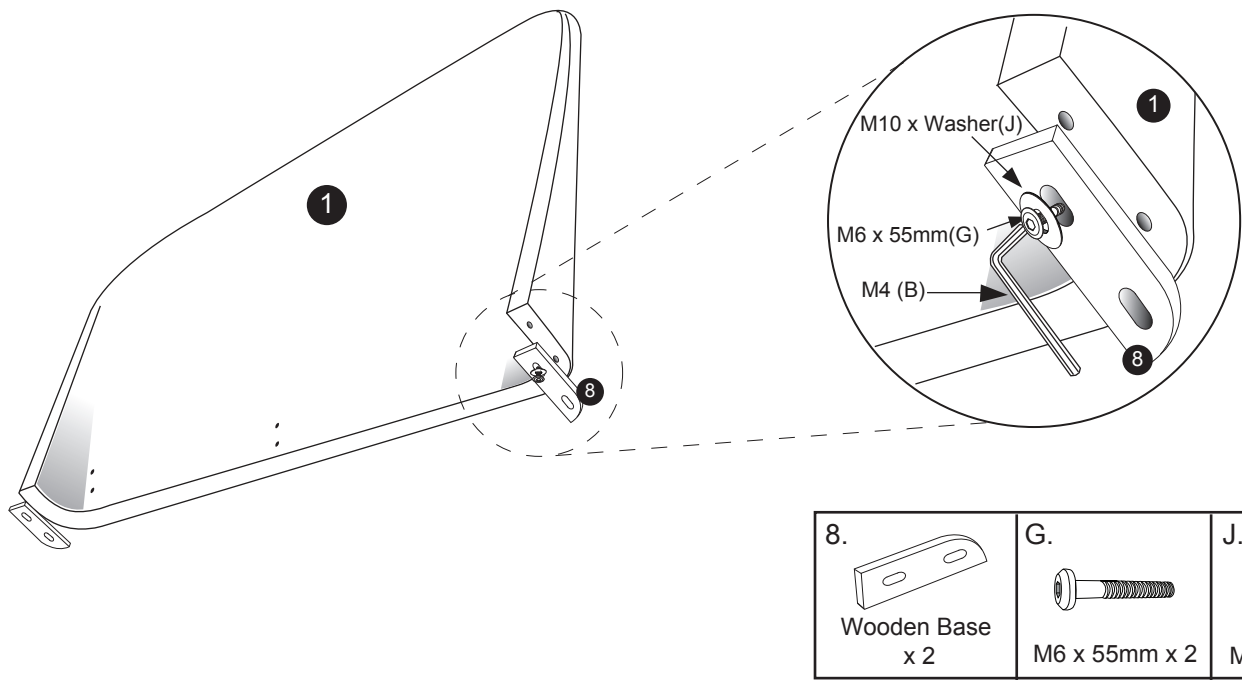

Step Two

Before attach the Side Rails (3) with the side of Headboard (1), rest the headboard down to the carpeted or soft flooring as shown in Fig 1. Only then you can attach both using M6 x 55mm Bolt(G) and M6 Washer (F) as shown in Fig.2.

Continue attach the Side Rails (3) to the Front Headboard (1) using M6 x 40mm Bolt (E) and M6 Washer (F). Adjust the Side Rails (3) with the Headboard (1) and make sure the edges align perfectly. Tighten M6 x 55mm Bolt(G) first using M4 Allen Key (B), and then continue to tighten the M6 x 40mm Bolt (E) to secure in place

Note: Make sure the Side Rail (3) which has sticker (HEAD) is attach on Headboard

Fig.1

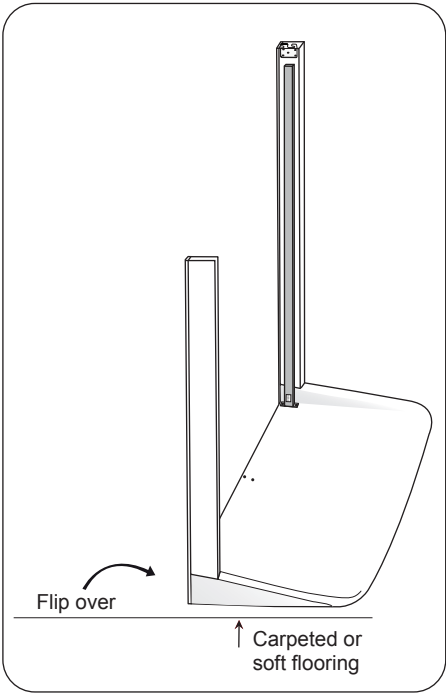


Fig.2


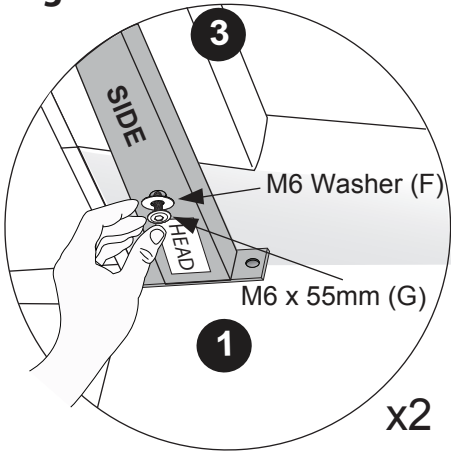



Fig.3

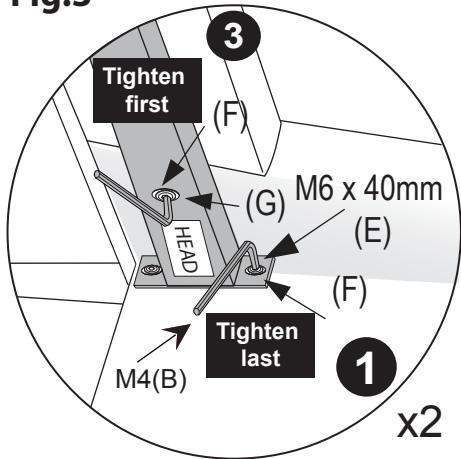

B.	G.	E.	F.
M4 Allen Key x 1	M6 x 55mm Bolt x 2	M6 x 40mm Bolt x 4	M6 Washer x 6

Step Three


Now attach the Footboard (2) to the Side Rails (3) using M8 x 50mm (L) with M8 Spring Washer (K) and hand-tighten to loosely secure parts together as shown in Fig.4. Do not tighten bolts with M5 Allen Key (A) until you have inserted the Centre Rail in the next step.

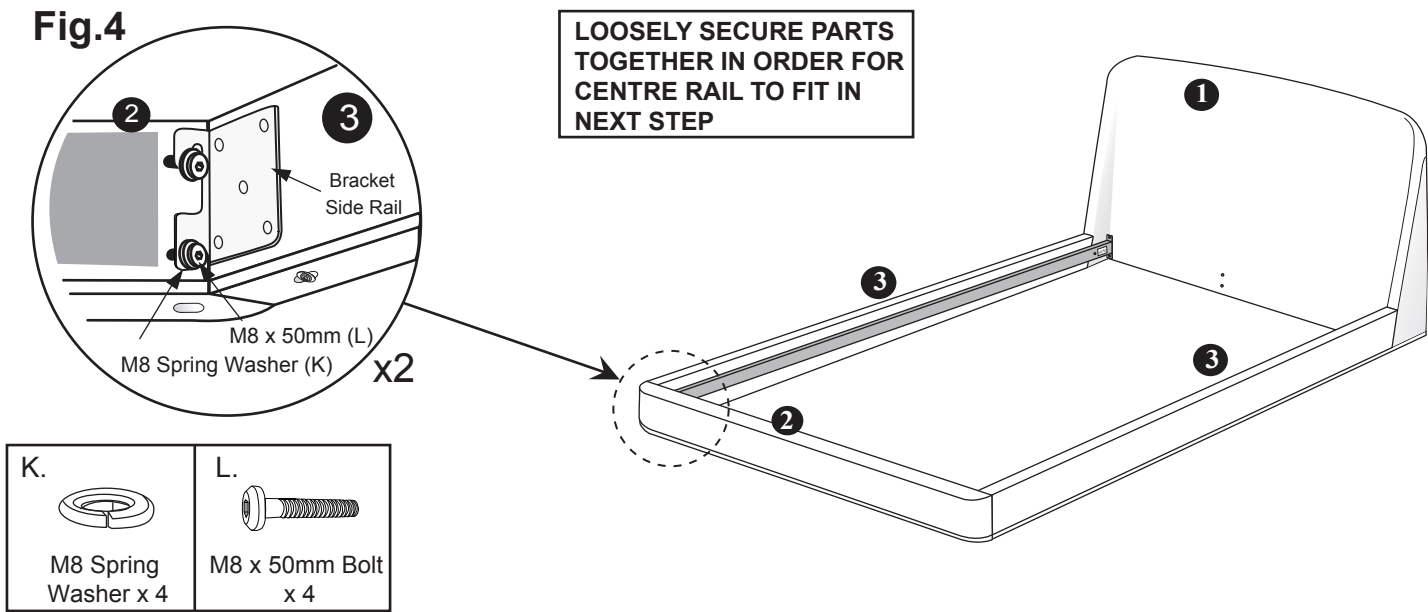

Step Four

Lower the Centre Rail (6) into the pre-drilled holes of the Headboard (1) and Footboard (2) and attach with M6 x 40mm Bolt (E) and M6 Washer(F) and fully tighten bolts with M4 Allen Key (A) as shown in Fig.4.


You can now tighten the bolts at the Footboard using M5 Allen Key (A) for the Footboard(2) so all fastenings are now tightened.

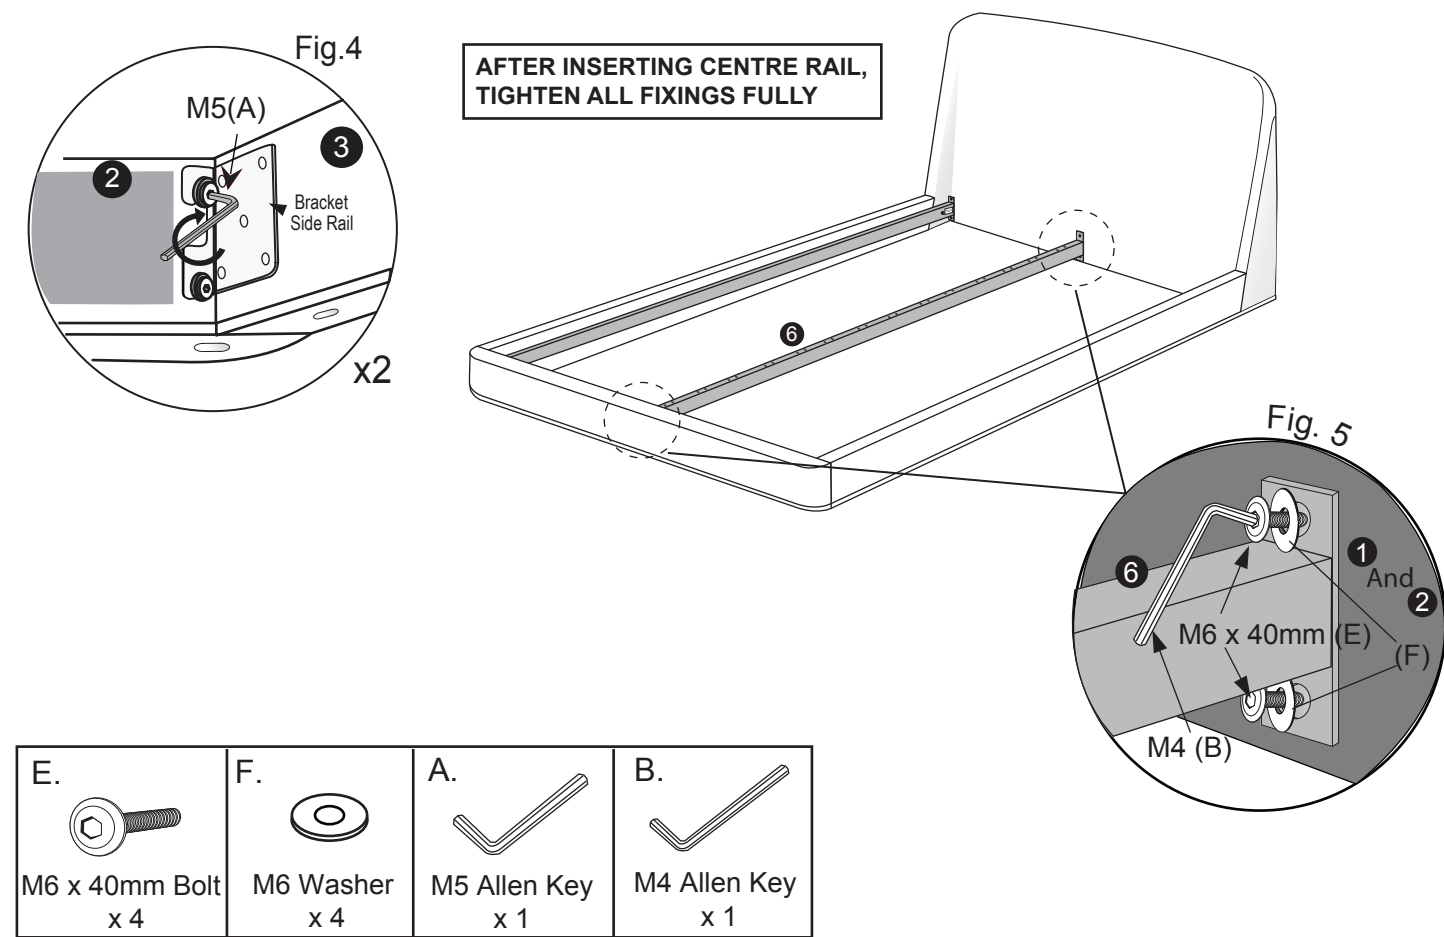

Step Five

Starting with the Headboard (1), insert the Legs (7) into the pre-drilled holes on the underside of the Headboard (1) and twist to secure, as shown in the diagram below.


Note: Before proceed to the next step, ensure the wooden base on each part are parallel towards each other by adjusting the bolt on the bottom.

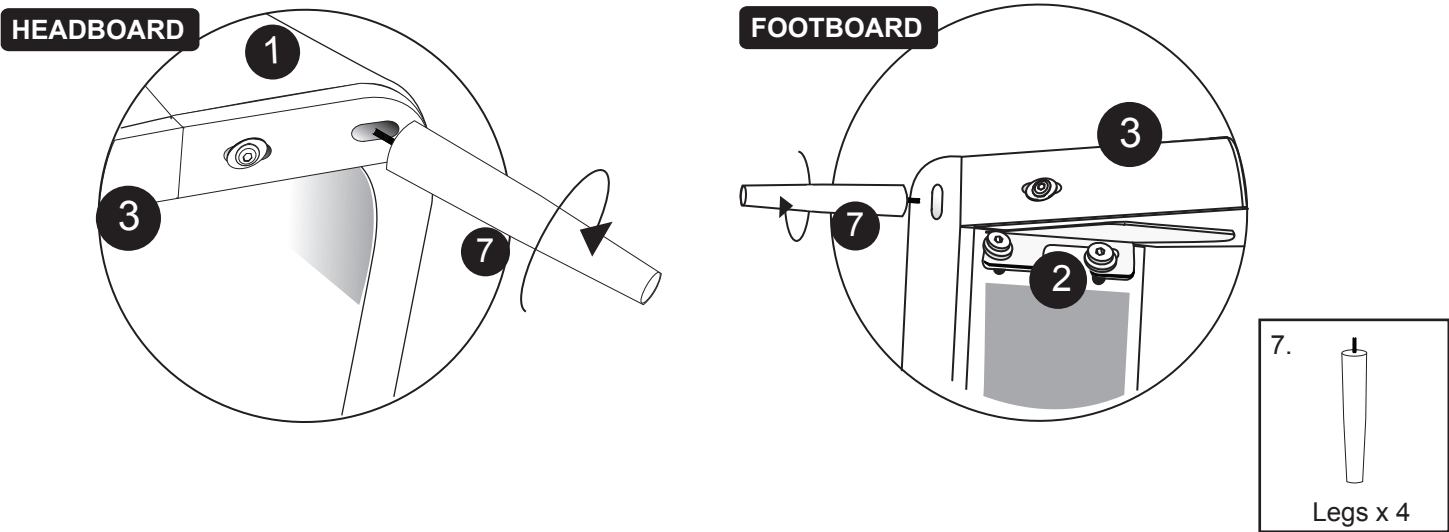

Step Six

With the curved side facing upwards, insert 2 slats into a centre cap then into 2 side caps on either end(x16). (Please note the Wide Slats must be inserted with the Wide Centre Caps (H) and Wide Side Caps (I)). Repeat this process for all slats.

Note: Please see the Diagram 1 below to arrange the slat with the correct system).

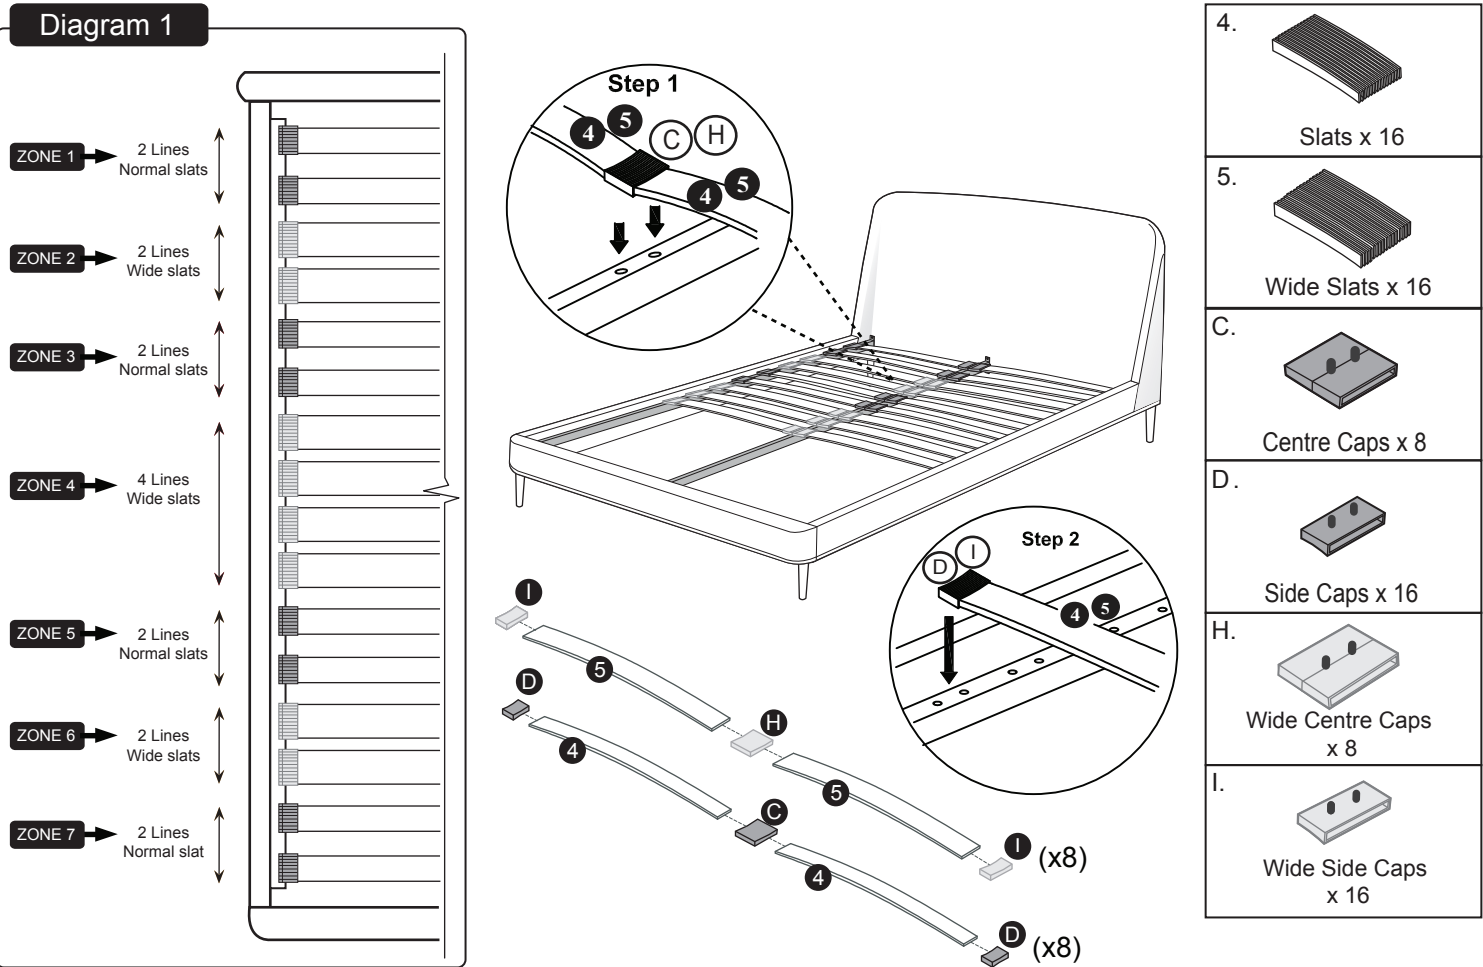

Step Seven

This bed is now ready to use.



Care and Maintenance

This bed should be cleaned using a soft, damp cloth and dried immediately.

Do not use a very wet cloth or allow any liquid contact for a long period of time as this can permanently damage the surface.

Do not use detergents and do not rub as this can cause permanent damage.

Always protect your bed from direct sunlight as this may accelerate the natural ongoing discolouration process.

Bolts holding together the bed frame should be tightened regularly.

Please retain this information leaflet for future reference.

This product complies with BS EN 1725:1998.

Safety Instructions

Never drag furniture when moving it. Always lift it.

Periodically check all fixings to ensure none have come loose and re-tighten where necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly installed. Any assembly should be carried out by a competent adult.

No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

During assembly, children should be kept away from the product due to possible risk of injury.

Do not use this item if any components are missing or damaged.

It is recommended that care is taken when moving heavy objects to a new location to avoid personal injury or damage to the furniture. Please be careful to retain all fittings when doing this.

If you require any additional information or have any issues with this product please call the customer services helpline on 01244 689949 or email mail@fwgroup-uk.com.