


Skye Bed

King
Superking

Thank you for purchasing this Skye Bed. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

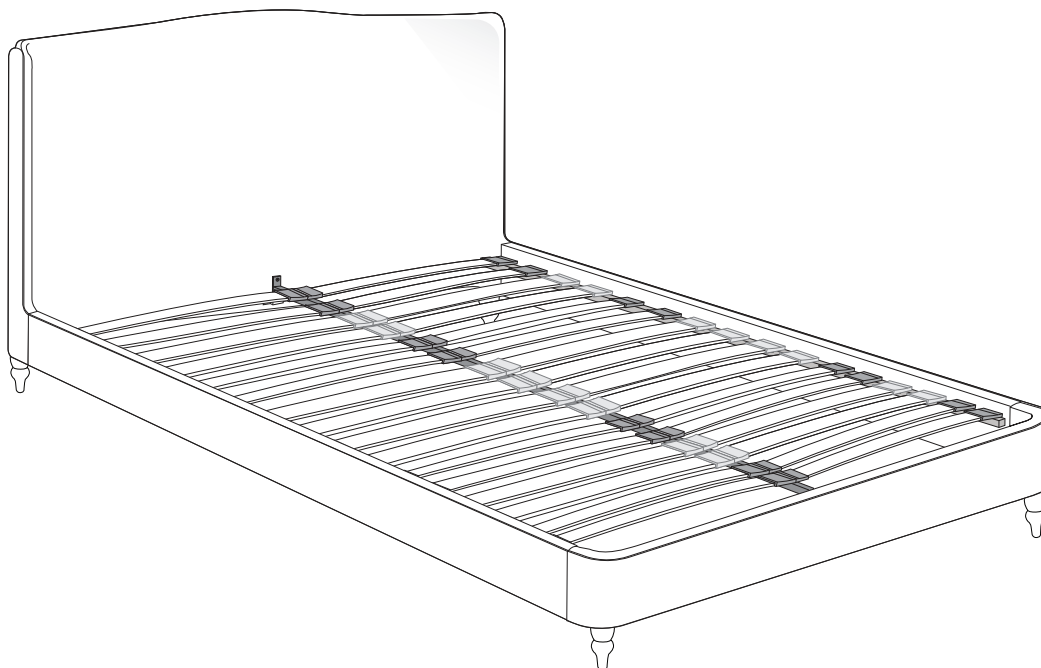

PRE-ASSEMBLY PREPARATION

Please ensure instructions are read in full before attempting to assemble this product.

Necessary Tools



(NOT INCLUDED)

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact customer services on 01244 689949 or email mail@fwgroup-uk.com.

This product is **HEAVY**. It should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.













This product takes approximately **40 MINUTES** to assemble with **2 PEOPLE**.
Do not use power tools to assemble.

The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.








Read this leaflet in full before commencing assembly.

Fitting and parts checklist

Fittings


A	M4 Allen Key x 1		G		M8 Spring Washer x 8
B	M5 Allen Key x 1		H		M8 Washer x 8
C	Centre Caps x 8		I		Screw 3.5 x 18mm x 4
D	Side Caps x 16		J		M6 X 25mm Bolt x 2
E	M8 X 35mm Bolt x 8		K		Wide Centre Caps x 8
F	Screw 4 x 25mm x 2		L		Wide Side Caps x 16

Parts

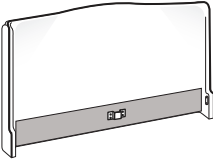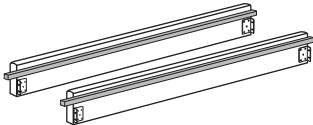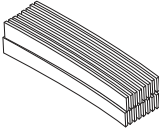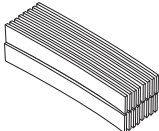1	Headboard x 1	
2	Footboard x 1	
3	Side Rails x 2	
4	Slats x 16	
5	Wide Slats x 16	
6	Centre Rail x 1	
7	Legs x 4	


Step One

Starting with the Headboard (1) attach the Side Rails (3) using the inserted M8 x 35mm Bolt (E), M8 Spring Washer (G) and M8 Washer (H). Please do not tighten the bolts yet. Now attach the Footboard (2) to the Side Rails(3) using M8 x 35mm Bolt (E), M8 Spring Washer (G) and M8 Washer (H). Do not tighten with M5 Allen Key (B) until you have inserted the Centre Rail in the next step.

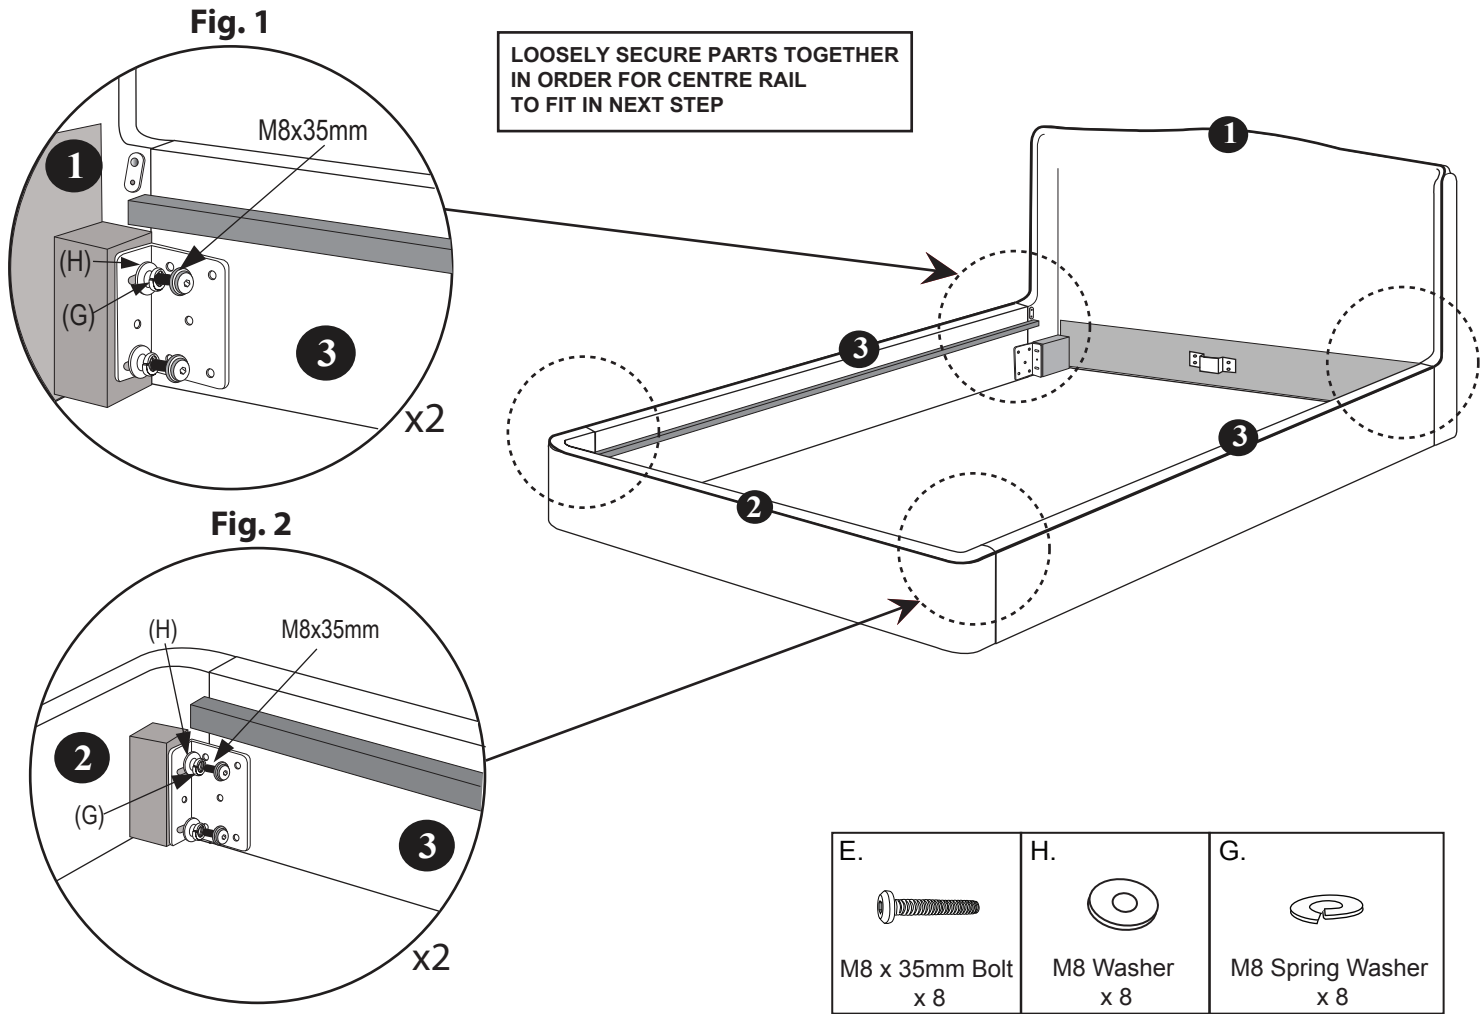

Step Two

Lower the Centre Rail (6) into the brackets in the centre of the Headboard (1) and Footboard (2) as shown in fig.3. Now secure the Centre Rail (6) using M6 x 25mm Bolts (J) and tighten with M4 Allen Key (A) as shown in fig.4. You can now tighten the bolts at the Side Rails from previous step (Step One) with the M5 Allen Key (B) so all fastenings are now tightened.

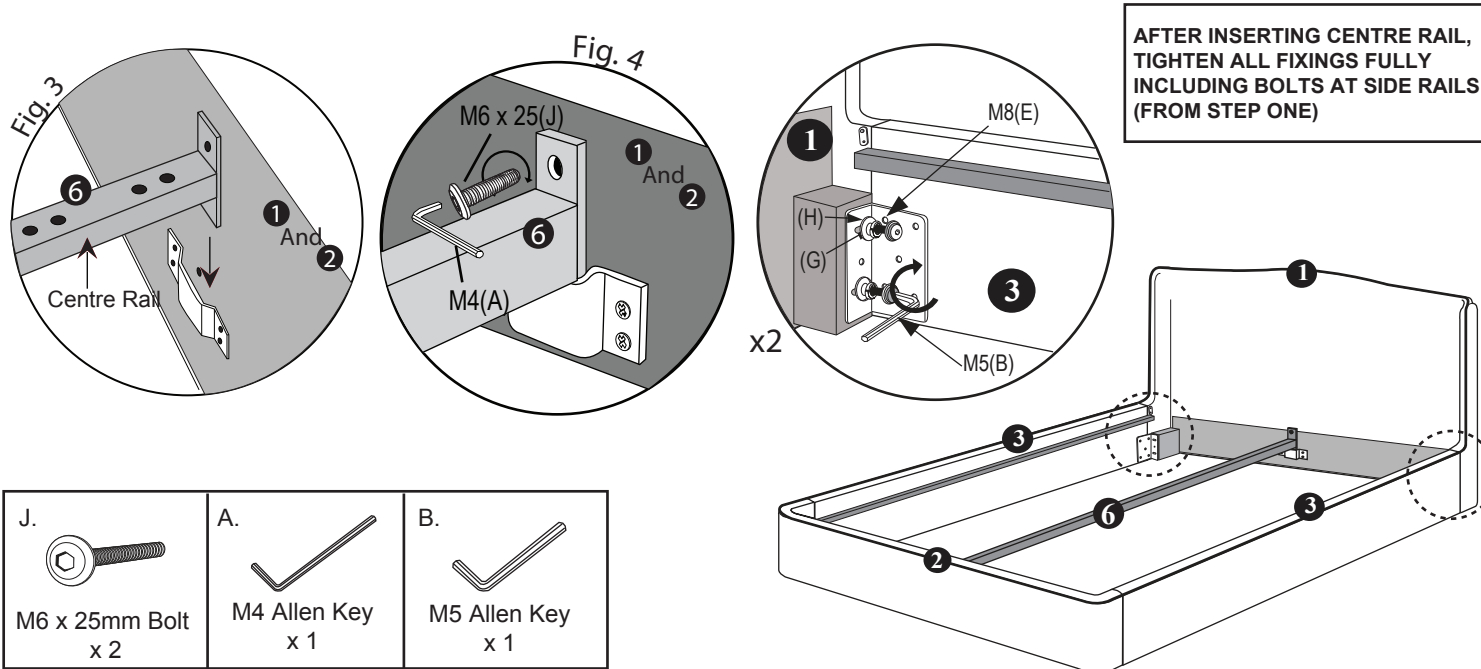

Step Three

Next secure the bracket with Screw 3.5x18mm (I) on the Headboard (1) and Footboard (2) as shown in fig. 5. Attach the metal clip on the Headboard (1) to the Side Rail (3) and make any adjustment needed. Ensure all parts align together and secure with Screw 4x25mm (F) as shown in fig. 6.

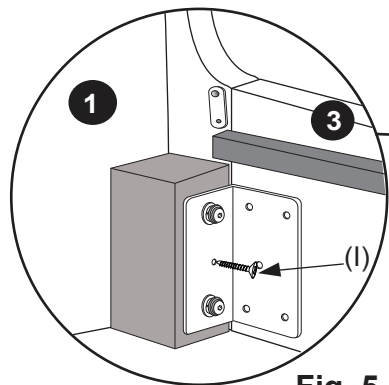


Fig. 5



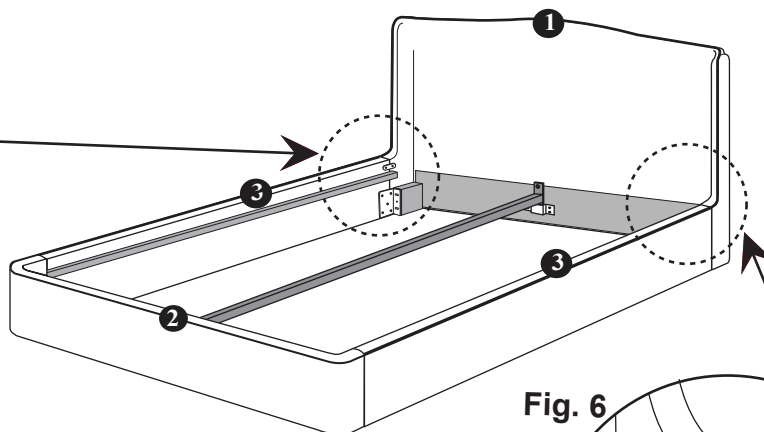



Fig. 6

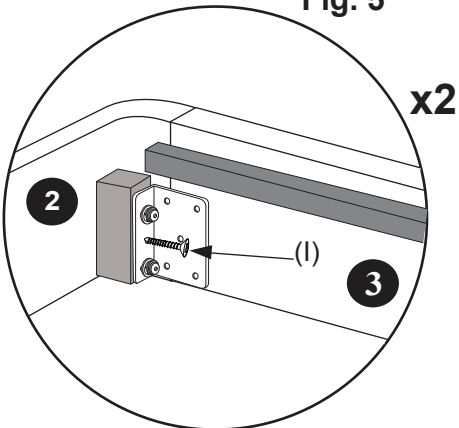

x2

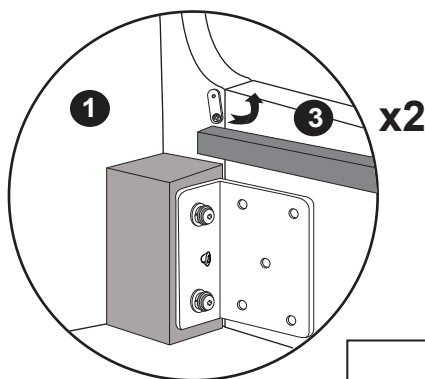

x2

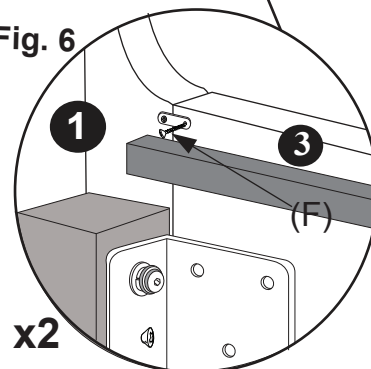


x2



	<p>F.</p> <p>Screw 4 x 25mm x 2</p>	<p>I.</p> <p>Screw 3.5 x 18mm x 4</p>
--	---	---

Step Four

Insert the Legs (7) into the pre-drilled holes on the underside of Headboard (1) and Footboard (2). Twist the legs (7) to secure in place.

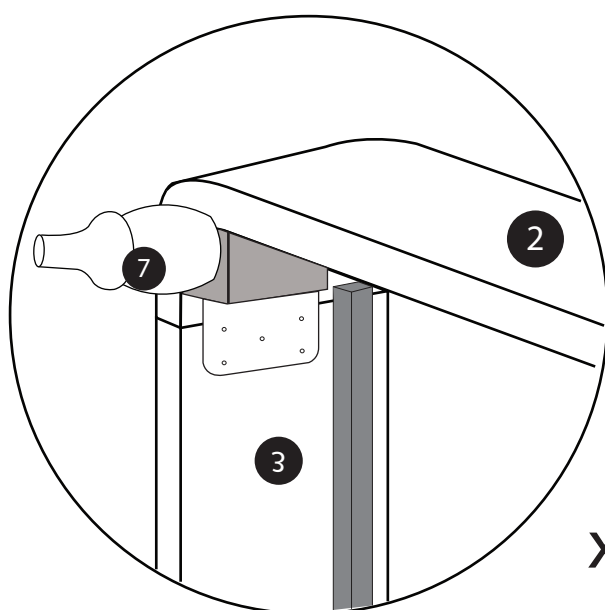


x2

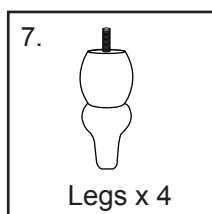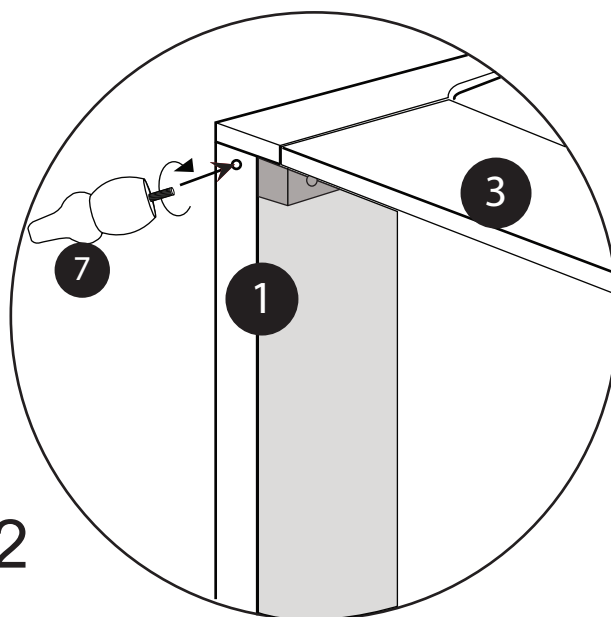

Step Five

With the curved side facing upwards, insert 2 slats into a centre cap then into 2 side caps on either end(x16). (Please note the Wide Slats (5) must be inserted with the Wide Centre Caps (K) and Wide Side Caps (L)). Repeat this process for all slats.

Note: Please see the Diagram 1 below to arrange the slat with the correct system).

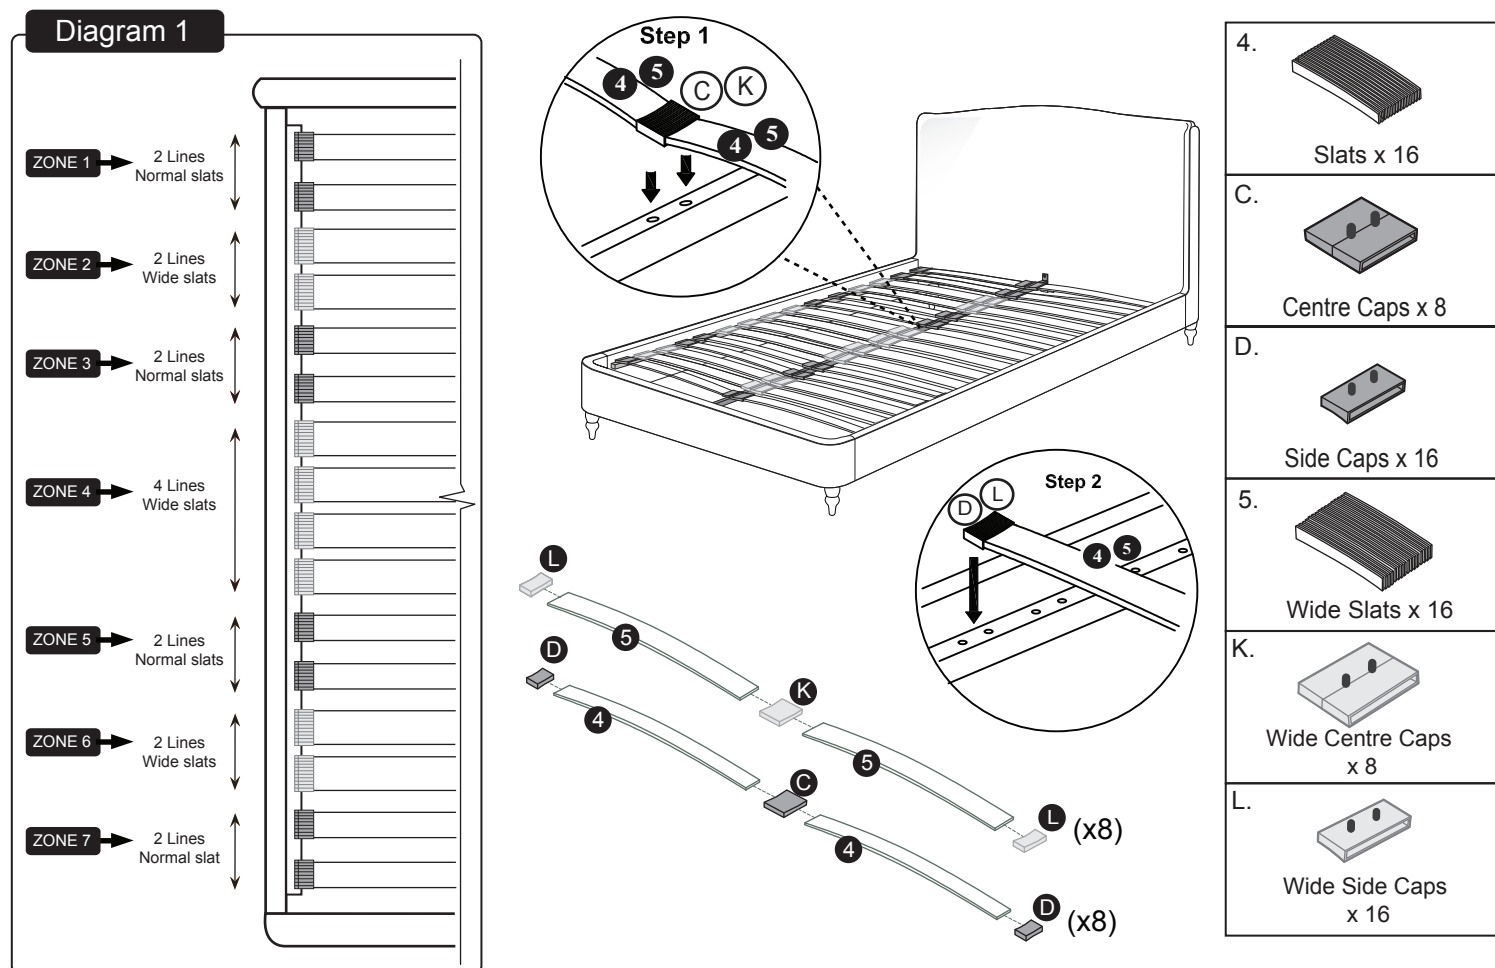

Step Six

This bed is now ready to use.



Care and Maintenance

This bed should be cleaned using a soft damp cloth and dried immediately.

Do not use a very wet cloth or allow any liquid contact for a long period of time as this can permanently damage the surface.

Do not use detergents and do not rub as this can cause permanent damage.

Always protect your bed from direct sunlight as this may accelerate the natural on-going discolouration process.

Screws holding together the bed frame should be tightened regularly.

Please retain this information leaflet for future reference.

This product complies with BS EN 1725:1998.

Safety Instructions

Never drag furniture when moving it. Always lift it.

Periodically check all fixings to ensure none have come loose and re-tighten where necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly installed. Any assembly should be carried out by a competent adult.

No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

During assembly, children should be kept away from the product due to possible risk of injury.

Do not use this item if any components are missing or damaged.

It is recommended that care is taken when moving heavy objects to a new location to avoid personal injury or damage to the furniture. Please be careful to retain all fittings when doing this.

If you require any additional information or have any issues with this product please call the customer service helpline on 01244 689949 or email mail@fwgroup-uk.com