

2. The appliance is guaranteed against any defects arising from manufacture during this period. Should this be evident we will repair or replace it.
3. The guarantee does not apply to instances of customer misuse/abuse.
4. The guarantee does not apply in professional / commercial usage situations.
5. The guarantee does not affect your statutory rights.

SERVICING

For repair / replacement under the terms of our guarantee, the appliance must be returned to the Service Centre accompanied by a valid proof of purchase.

CUSTOMER SERVICE

UNIT 7 Holly House Estate - Middlewich Road - Cranage - Cheshire - CW10 9LT - Tel: 01606 837222 E-mail: customerservice@imetec.co.uk - www.dreamlanduk.co.uk


Dreamland

M1001301
0614 (MMYY)



INTELLIHEAT HEATPAD

TYPE E0801 E0802
E0804



Operating instructions

GB

page

1



ILLUSTRATIVE GUIDE

E0801
INTELLIHEAT HEATPAD



E0802
INTELLIHEAT LARGE HEATPAD



[A]




E0804 **INTELLIHEAT NECK AND BACK** **HEATED WRAP**



[B]




[C]

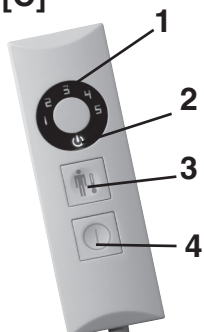

- 1 - LED Display
- 2 - Stand by light
- 3 - Temperature selector
- 4 - Power On/Off switch


5

6

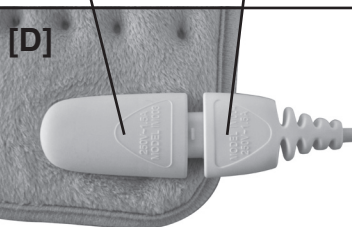

Connecting the heatpad

TECHNICAL DATA





TYPE E0801


220-240 V


50 Hz


15 W (max. 115 W)








































TYPE E0802


220-240 V


50 Hz


15 W (max. 115 W)








































TYPE E0804


220-240 V


50 Hz


15 W (max. 115 W)





































HEATPAD INSTRUCTIONS FOR USE

Dear customer, DREAMLAND thanks you for purchasing this product. We are certain you will appreciate the quality and reliability of this heatpad, designed and manufactured with customer satisfaction in mind. These instructions for use have been drawn up in accordance with European standard EN 62079.

IMPORTANT INSTRUCTIONS KEEP FOR FUTURE USE



ATTENTION!

Instructions and warnings for a safe use.



Please read the operating instructions and safety warnings in particular before using the appliance and follow these at all times. Keep this manual and illustrative guide with the appliance for future consultation. Should you pass the appliance on to another user, make sure to also include this documentation.




NOTE: should certain parts of this booklet be difficult to understand or should doubts arise, contact the company before using the product, at the address indicated on the last page.

CONTENTS

SAFETY WARNINGS	page 1
SYMBOLS	page 3
DESCRIPTION OF THE HEATPAD CONTROL	page 3
USING THE HEATPAD	page 3
USE	page 3
CLEANING AND MAINTENANCE	page 4
DISPOSAL	page 4
ASSISTANCE AND WARRANTY	page 4
ILLUSTRATIVE GUIDE	page I-II
TECHNICAL DATA	page III

SAFETY WARNINGS




- After having removed the heatpad from its packaging, verify its integrity based on the drawing and check for any damage caused during transport. If in doubt, do not use the appliance and contact the authorised service centre.
- Do not let children play with the packaging! Keep the plastic wrapping out of the reach of children; risk of suffocation!

- **Before connecting the appliance, please make sure that the voltage data indicated on the identification technical data correspond to those of the mains voltage. The identification technical data are found on the appliance.**
- **This appliance must be used only for the purpose for which it was designed, namely as a heatpad for home use. Any other use is considered not compliant and therefore dangerous.**
- **This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.**
- **The appliance is not to be used by people who are insensitive to heat or vulnerable and unable to react to overheating.**
- **This appliance must not be used by children aged from 3 years and above if the control devices have not been set beforehand by a parent or guardian or if the child has not been properly instructed on how to use the device safely.**
-  **WARNING – NOT suitable for children under the age of 3. Children under the age of 3 must not use the heatpad as they are unable to react in the event of overheating.**
-  **DO NOT activate the temperature control with wet hands.**
-  **DO NOT pull the power cord or the heatpad itself to remove the plug from the socket.**
- **Always disconnect the heatpad from the mains before cleaning or performing maintenance and when the heatpad is not in use.**
- **If the appliance is faulty or malfunctions, switch it off and do not tamper with it. Any repairs must only be carried out by an authorised technical service centre.**
- **If the power cable is damaged it must be replaced by an authorised technical service centre, so as to prevent all risks.**
- **The appliance must be used solely with the types of control indicated on the label.**
- **Inspect the appliance frequently to check for signs of wear and tear. If such signs are found or if the appliance has been**







used incorrectly, contact an authorised technical assistance centre before continuing to use it.



ATTENTION! It is recommended that people with pacemakers do not use the heatpad. Please check with your cardiologist.

- This appliance is not intended for medical use inside of hospitals.
-  **DO NOT** use the appliance if it is wet.
-  **DO NOT** use the appliance to keep animals warm
- **DO NOT** leave the appliance running while you sleep.
- Application of the appliance for a long time at high temperature can burn the skin.
-  **DO NOT** INSERT PINS OR NEEDLES.

SYMBOLS

	Protection class II.		Prohibited actions.
	Warning.		Temperature selector (3).
	Power ON/OFF (4).		STAND-BY light (2).

DESCRIPTION OF THE HEATPAD CONTROL

- | | | |
|--------------------------|---------------------------|--------------------|
| 1 - Temperature display. | 3 - Temperature selector. | 5 - Control socket |
| 2 - Stand-by Display. | 4 - ON/OFF selector. | 6 - Plug |

USING THE HEATPAD

The heatpad is designed to warm the human body. It allows for targeted application of heat. The heatpad can be placed on parts of the body, such as: neck, shoulders, back, abdomen and joints, depending on the relative model.

USE


CONNECTING AND REMOVING THE INTELLIHEAT CONTROL




ATTENTION! The heatpad can only be used with the control supplied. The relative model is specified on the label sewn on the heatpad.

- Insert the control connector (6) to the heatpad connector (5), to connect the intelliheat control to the connector on the heatpad.
- Insert the plug in the socket.


SWITCHING THE HEATPAD ON AND SELECTING THE TEMPERATURE

- Push down on the ON/OFF  switch (4) to turn the heatpad on.
- The display (1) will light up and the temperature will be automatically set to position 5 which is fast heat.


GB

- Select the desired temperature (from 1 = low, 5 = high. For fast heat up select 5) by pressing the temperature button  (3) until your chosen temperature lights up on the display (1).

AUTOMATIC SHUTDOWN






- The heatpad will provide a 3 hour heat treatment, then it will automatically shut off. The standby light  (2), will be blue, after the 3 hours of operating to indicate that the product has switched off automatically.
- Switch the heatpad back on by pressing the On/Off switch twice, and select your preferred temperature setting. 1 = low heat, 5 = High heat.

SWITCH-OFF

- Switch the heatpad off by pressing the ON/OFF  switch (4).
- Remove the plug from the socket.

CLEANING AND MAINTENANCE

The heatpad is washable. The washing symbols are also on the heatpad care label.

 Wash at 30°C.	 Do not bleach.
 Tumble-dry at less than 40°C.	 Do not iron.
 Do not dry-clean.	

WASHING INSTRUCTIONS

Always disconnect the heatpad before washing.

MACHINE WASHING

- The heatpad can be machine washed at 30°C with a normal cycle.
- Only the gentle spin cycle is to be used. DO NOT set an additional spin cycle.

DRYING

- Set the dryer at a low temperature.
- Do not apply pegs on the electrical parts when hanging the heatpad to dry in order not to damage them.
- DO NOT use the heatpad until it is completely dry.

DISPOSAL



The product is packaged in recyclable materials. Dispose of it in compliance with the environmental protection standards.



The product must be disposed of appropriately, in compliance with European standard 2002/96/EC. The recyclable materials contained in the appliance must be recovered so as to prevent environmental pollution. For further information, contact the local disposal body or the appliance dealer.

ASSISTANCE AND WARRANTY

GUARANTEE

1. The appliance is guaranteed for a period of three years from purchase. Your receipt / invoice is your proof of purchase.