

Operating and installation instructions

Ceramic hobs with induction



To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed and used for the first time.

Contents

Warning and Safety instructions	4
Caring for the environment	13
Guide to the appliance	14
Hob.....	14
KM 6322 / KM 6323	14
KM 6347 / KM 6348	15
Controls / Indicators.....	16
Cooking zones.....	18
Before using for the first time	20
Cleaning the hob for the first time	20
Switching on the hob for the first time	20
Induction	21
How it works.....	21
Noises.....	22
Pans.....	23
Tips on saving energy	24
Setting range	25
Operation	26
Operation.....	26
Switching on the hob	27
Selecting/changing the power level	27
Switching off.....	27
Residual heat indicator.....	27
Power level setting - Extended setting range.....	28
PowerFlex cooking area	28
Auto heat-up	29
Booster	30
Keeping warm	32
Timer	33
Minute minder	33
Switching a cooking zone off automatically	34
Using both timer functions at the same time	35
Additional functions	36
Stop&Go.....	36
Safety features	37
System lock / Safety lock.....	37

Safety switch-off	38
Overheating protection.....	39
Cleaning and care	40
Programming	42
Problem solving guide	45
Optional accessories	48
Miele@home / Con@ctivity	49
Safety instructions for installation	51
Safety distances	52
Hob with frame or bevelled edge	56
Installation notes	56
Building-in dimensions	57
KM 6322	57
KM 6347	58
Installation	59
Flush-fitted hobs	60
Installation notes	60
Building-in dimensions	61
KM 6323	61
KM 6348	62
Installation	63
Electrical connection	65
After sales service	68
Contact in case of malfunction	68
Data plate	68
Warranty	68
Product data sheets	69

Warning and Safety instructions

This hob complies with all relevant safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the hob, please read these instructions carefully before installation and before using it for the first time. They contain important notes on installation, safety, use and maintenance.

Miele cannot be held liable for damage caused by non-compliance with these instructions.

Keep these instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner.

Correct application

- ▶ This hob is intended for domestic use and use in other similar environments.
- ▶ This hob is not intended for outdoor use.
- ▶ It is intended for domestic use only to cook food and keep it warm. Any other use is not supported by the manufacturer and could be dangerous.
- ▶ People with reduced physical, sensory or mental capabilities, or lack of experience and knowledge who are not able to use the hob safely on their own must be supervised whilst using it. They may only use it unsupervised if they have been shown how to use it safely and recognise and understand the consequences of incorrect operation.

Warning and Safety instructions

Safety with children

- ▶ Children under 8 years of age must be kept away from the hob unless they are constantly supervised.
- ▶ Children 8 years and older may only use the hob unsupervised if they have been shown how to use it in a safe way and can recognise and understand the consequences of incorrect operation.
- ▶ Children must not be allowed to clean the hob unsupervised.
- ▶ Please supervise children in the vicinity of the hob and do not let them play with it.
- ▶ The hob gets hot when in use and remains hot for a while after being switched off. Keep children well away from the hob until it has cooled down and there is no danger of burning.
- ▶ Danger of burning.
Do not store anything which might arouse a child's interest in storage areas above or next to the hob. Otherwise they could be tempted into climbing onto the appliance.
- ▶ Danger of burning or scalding.
Place pots and pans on the cooking zone in such a way that children cannot pull them down and burn themselves.
- ▶ Danger of suffocation. Packaging, e.g. plastic wrappings, must be kept out of the reach of babies and children. Whilst playing, children could become entangled in packaging or pull it over their head and suffocate.
- ▶ Activate the system lock to ensure that children cannot switch on the hob inadvertently. Use the safety lock when the hob is in use to prevent children from altering the settings selected.

Technical safety

- ▶ Unauthorised installation, maintenance and repairs can cause considerable danger for the user. Installation, maintenance and repairs must only be carried out by a Miele authorised technician.
- ▶ Do not use a damaged appliance. It could be dangerous. Check the hob for visible signs of damage.
- ▶ Reliable and safe operation of this hob can only be assured if it has been connected to the mains electricity supply.
- ▶ The electrical safety of this hob can only be guaranteed when correctly earthed. It is essential that this standard safety requirement is met. If in any doubt please have the electrical installation tested by a qualified electrician.
- ▶ To avoid the risk of damage to the hob, make sure that the connection data on the data plate (voltage and frequency) match the mains electricity supply before connecting it to the mains. Consult a qualified electrician if in doubt.
- ▶ Do not connect the hob to the mains electrical supply by a multi-socket adapter or extension lead. These are a fire hazard and do not guarantee the required safety of the appliance.
- ▶ For safety reasons, this hob may only be used after it has been built in.
- ▶ This hob must not be used in a non-stationary location (e.g. on a ship).
- ▶ Never open the casing of the hob.
Touching or tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operational faults.
- ▶ While the hob is under warranty, repairs should only be undertaken by a Miele authorised service technician. Otherwise the warranty is invalidated.

Warning and Safety instructions

- ▶ Miele can only guarantee the safety of the appliance when genuine original Miele replacement parts are used. Faulty components must only be replaced by Miele spare parts.
- ▶ The hob is not intended for use with an external timer switch or a remote control system.
- ▶ The hob must be connected to the electricity supply by a qualified electrician (see "Electrical connection").
- ▶ If the connection cable is damaged, it must be replaced by a suitably qualified electrician with a special connection cable of type H 05 VV-F (pvc insulated). See "Electrical connection".
- ▶ The hob must be disconnected from the mains electricity supply during installation, maintenance and repair work. Ensure that power is not supplied to the appliance until after it has been installed or until any maintenance or repair work has been carried out.
- ▶ If the hob is fitted with a communication module, in addition to disconnecting the hob, this module must also be disconnected from the mains electricity during installation and maintenance of the hob as well as while any repair work is being carried out.
- ▶ **Danger of electric shock.**
Do not use the hob if it is faulty, or if the ceramic surface is cracked, chipped or damaged in any way. Switch it off immediately, disconnect it from the mains electricity supply and contact Miele.
- ▶ If the hob is installed behind a furniture panel (e.g. a door), ensure that the door is never closed whilst the hob is in use. Heat and moisture can build up behind a closed furniture panel and cause subsequent damage to the hob, the housing unit and the floor. Do not close the door until the residual heat indicators have gone out.
- ▶ In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings clean at all times. Any damage caused by cockroaches or other vermin will not be covered by the warranty.

Correct use

- ▶ The hob gets hot when in use and remains hot for a while after being switched off. There is a danger of burning until the residual heat indicators go out.
- ▶ Oil and fat can overheat and catch fire. Do not leave the hob unattended when cooking with oil and fat. If it does ignite do not attempt to put the flames out with water.
Disconnect the hob from the mains and use a suitable fire blanket, saucepan lid, damp towel or similar to smother the flames.
- ▶ Flames could set the grease filters of a cooker hood on fire. Do not flambé under a cooker hood.
- ▶ Spray canisters, aerosols and other inflammable substances can ignite when heated. Therefore do not store such items or substances in a drawer under the hob. Cutlery inserts must be heat-resistant.
- ▶ Do not heat an empty pan.
- ▶ Do not heat up food in closed containers e.g. tins or sealed jars on the hob, as pressure can build up in the container, causing it to explode.
- ▶ Do not cover the hob, e.g. with a hob cover, a cloth or protective foil. The material could catch fire, shatter or melt if the hob is switched on by mistake or if residual heat is still present.
- ▶ When the appliance is switched on either deliberately or by mistake, or when there is residual heat present, there is the risk of any metal items left on the hob heating up, with the danger of burning. Depending on the material, other items left on the hob could also melt or catch fire. Damp pan lids might adhere to the ceramic surface and be difficult to dislodge. Do not use the appliance as a resting place. Switch the cooking zones off after use.

Warning and Safety instructions

- ▶ You could burn yourself on the hot hob. Protect your hands with heat-resistant pot holders or gloves when handling hot pots and pans. Do not let them get wet or damp, as this causes heat to transfer through the material more quickly with the risk of scalding or burning yourself.
- ▶ When using an electrical appliance, e.g. a hand-held food blender, near the hob, ensure that the cable of the electrical appliance cannot come into contact with the hot hob. The insulation on the cable could become damaged.
- ▶ Grains of salt, sugar and sand (e.g. from cleaning vegetables) can cause scratches if they get under pan bases. Make sure that the ceramic surface is clean before placing pans on it.
- ▶ Even a light object can cause damage in certain circumstances. Do not drop anything on the ceramic surface.
- ▶ Placing hot pans on the sensors and indicators could damage the electronics underneath. Do not place hot pans on the sensors or indicators.
- ▶ Do not allow solid or liquid sugar, or pieces of plastic or aluminium foil to get onto the cooking zones when they are hot, as they can damage the ceramic surface when it cools down. If this should occur, switch off the appliance and scrape off all the sugar, plastic or aluminium residues whilst still hot, using a shielded scraper blade. Wear oven gloves. Allow the cooking zones to cool down and clean them with a suitable ceramic hob cleaning agent.
- ▶ Pans which boil dry can cause damage to the ceramic glass. Do not leave the hob unattended whilst it is being used.
- ▶ Only use pots and pans with smooth bases. Rough bases will scratch the ceramic glass.
- ▶ Lift pans into position on the hob. Sliding them into place can cause scuffs and scratches.

Warning and Safety instructions

- ▶ Induction heating works extremely quickly and so the base of the pan could heat up to the temperature at which oil or fat self-ignites within a very short time. Do not leave the hob unattended whilst it is being used.
- ▶ Heat oil or fat for a maximum of one minute. Do not use the Booster function to heat oil or fat.
- ▶ For people fitted with a heart pacemaker: Please note that the area immediately surrounding the hob is electromagnetically charged. It is very unlikely to affect a pacemaker. However, if in any doubt, consult the manufacturer of the pacemaker or your doctor.
- ▶ To prevent damage to items which are susceptible to electromagnetic fields, e.g. credit cards, digital storage devices, pocket calculators, etc, do not leave them in the immediate vicinity of the hob.
- ▶ Metal utensils stored in a drawer under the hob can become hot if the appliance is used intensively for a long time. Do not store any metal items or utensils in a drawer under the hob.
- ▶ This hob is fitted with a cooling fan. If a drawer is fitted directly underneath the hob, ensure that there is sufficient space between the drawer and its contents and the underside of the appliance in order to ensure sufficient ventilation of the hob. Do not store pointed or small items or paper in the drawer. They could get in through the ventilation slots or be sucked into the housing by the fan and damage the fan or impair cooling.
- ▶ Do not use two pans on a cooking zone, extended zone or PowerFlex zone at the same time.
- ▶ If the pan only partially covers the cooking zone, the handle could become very hot.
Ensure that you always place the pan in the middle of the cooking zone.

Warning and Safety instructions

Cleaning and care

- ▶ Do not use a steam cleaning appliance to clean this hob. The steam could reach electrical components and cause a short circuit.
- ▶ If the hob is built in over a pyrolytic oven, the hob should not be used whilst the pyrolytic process is being carried out, as this could trigger the overheating protection mechanism on the hob (see relevant section).

Disposal of the packing material

The packaging is designed to protect the appliance from damage during transportation. The packaging materials used are selected from materials which are environmentally friendly for disposal and should be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.

Disposing of your old appliance

Electrical and electronic appliances often contain valuable materials. They also contain specific materials, compounds and components, which were essential for their correct function and safety. These could be hazardous to human health and to the environment if disposed of with your domestic waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with your household waste.




Please dispose of it at your local community waste collection / recycling centre for electrical and electronic appliances, or contact your dealer or Miele for advice. You are also responsible (by law, depending on country) for deleting any personal data that may be stored on the appliance being disposed of. Please ensure that your old appliance poses no risk to children while being stored prior to disposal.

Guide to the appliance


Hob

KM 6322 / KM 6323

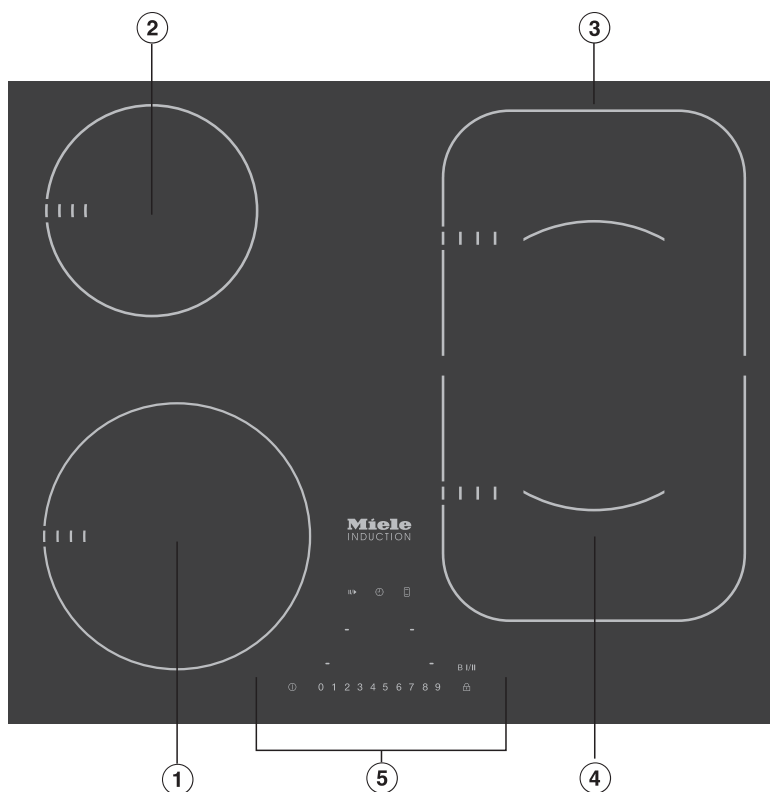

- ① Cooking zone with Booster
- ② Cooking zone with Booster
- ③ PowerFlex cooking zone with TwinBooster
- ④ PowerFlex cooking zone with TwinBooster
- ③④ can be combined to form a PowerFlex cooking area
- ⑤ Controls / Indicators


KM 6347 / KM 6348

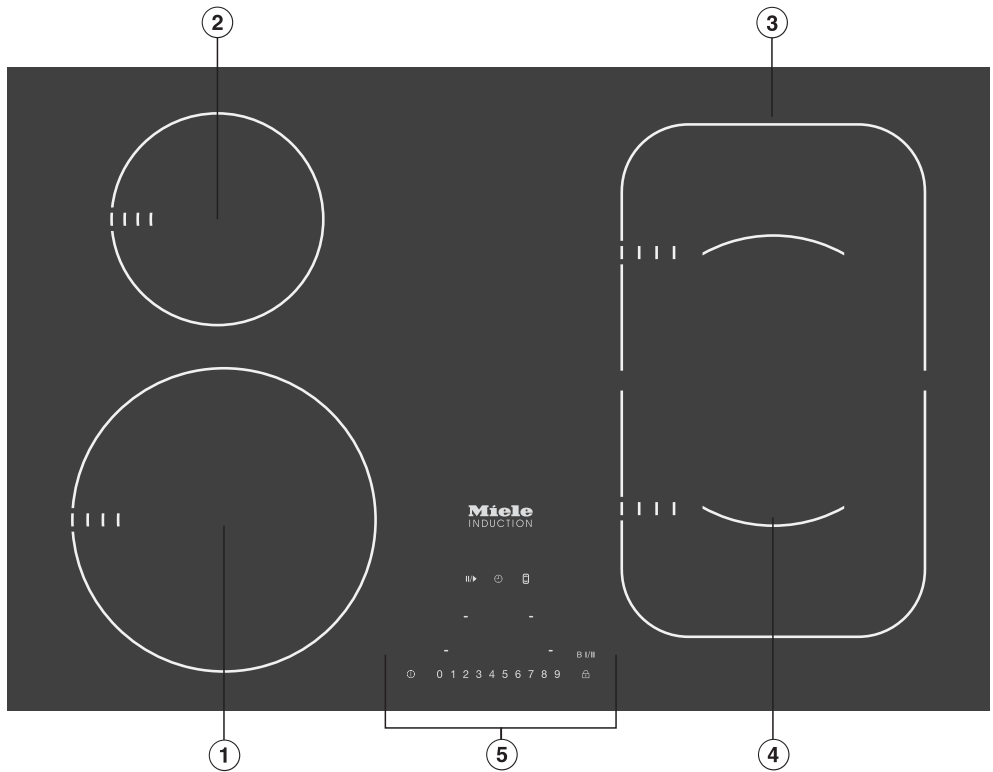

- ① Cooking zone with Booster
- ② Cooking zone with Booster
- ③ PowerFlex cooking zone with TwinBooster
- ④ PowerFlex cooking zone with TwinBooster
- ③④ can be combined to form a PowerFlex cooking area
- ⑤ Controls / Indicators

Guide to the appliance

Controls / Indicators

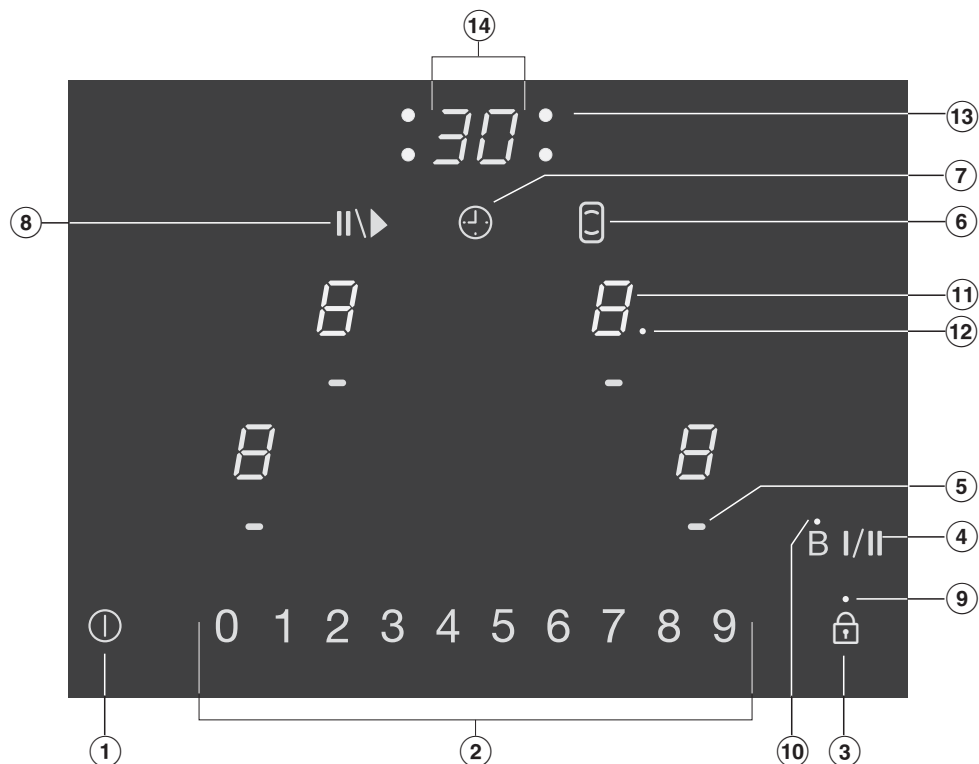

Sensor controls

- ① For switching the hob on and off
- ② Number sensors
 - For setting the power level
 - For setting the timer
- ③ For activating/deactivating the system lock/safety lock
- ④ For switching the Booster / TwinBooster On/Off
- ⑤ For selecting the cooking zone
- ⑥ For switching the PowerFlex cooking area on and off

⑦ Timer

- For switching on/off
- For switching between timer functions
- For selecting a cooking zone (see "Switching a cooking zone off automatically")

⑧ For activating/deactivating Stop&Go

Indicator lights

⑨ System lock/safety lock activated

⑩ Booster/TwinBooster activated

⑫ Auto heat-up or extended power setting (see "Programming")

⑬ Shows cooking zone selection, e.g. rear right cooking zone

⑪ Cooking zone display

<i>0</i>	Cooking zone ready for use
<i>h</i>	Keeping warm setting
<i>1 to 9</i>	Power level
<i>,</i>	TwinBooster level 1
<i>,,</i>	Booster / TwinBooster level 2
<i>-</i>	PowerFlex cooking area activated
<i>u</i>	No pan on cooking zone or pan unsuitable (see "Induction")
<i>≡</i>	Residual heat
<i>R</i>	Auto heat-up

Timer display






⑭ Duration in minutes

LL System lock/safety lock activated

dE Demonstration mode activated

Guide to the appliance






Cooking zones

Cooking zone	KM 6322 / KM 6323		
	Ø in cm*	Rating in watts for 230 V**	
	14–20	Normal Booster	1850 3000
	10–16	Normal Booster	1400 2200
	15–23	Normal TwinBooster, level 1 TwinBooster, level 2	2100 3000 3700
	15–23	Normal TwinBooster, level 1 TwinBooster, level 2	2100 3000 3700
	22–23 / 15x23–23x39	Normal TwinBooster, level 1 TwinBooster, level 2	3400 4800 7400
		Total	7400

* Pans with a base diameter within the given range may be used.

** The wattage quoted may vary depending on the size and material of pans used.

Guide to the appliance

Cooking zone	KM 6347 / KM 6348	
	Ø in cm*	Rating in watts for 230 V**
	16–23	Normal 2300 TwinBooster, level 1 3000 TwinBooster, level 2 3700
	10–16	Normal 1400 Booster 2200
	15–23	Normal 2100 TwinBooster, level 1 3000 TwinBooster, level 2 3700
	15–23	Normal 2100 TwinBooster, level 1 3000 TwinBooster, level 2 3700
	22–23 / 15x23–23x39	Normal 3400 TwinBooster, level 1 4800 TwinBooster, level 2 7400
		Total 7400

* Pans with a base diameter within the given range may be used.

** The wattage quoted may vary depending on the size and material of the pans used.

Before using for the first time

- Please stick the extra data plate for the appliance supplied with this documentation in the space provided in the "After sales service" section of this booklet.
- Remove any protective wrapping and stickers.

Cleaning the hob for the first time

- Before using for the first time, clean the hob with a damp cloth only and then wipe dry.

Switching on the hob for the first time

The metal components have a protective coating which may give off a slight smell when heated up for the first time. The induction coils may also give off a slight smell for the first few hours of operation. This smell will be less noticeable with each subsequent use before dissipating completely.


The smell and any vapours given off do not indicate a faulty connection or appliance and they are not hazardous to health.

Please note that the heating up time on induction hobs is very much shorter than on conventional hobs.


How it works

An induction coil is located under each cooking zone. When a cooking zone is switched on, this coil creates a magnetic field which impacts directly on the base of the pan and heats it up. The cooking zone itself is heated up indirectly by the heat given off by the pan.


An induction cooking zone only works when a pan with a magnetic base is placed on it (see "Pans"). Induction automatically recognises the size of the pan.

The  symbol flashes alternately with the power setting selected in one of the cooking zone displays

- if the zone has been switched on without a pan in place, or if the pan is unsuitable (non-magnetic base),
- if the diameter of the base of the pan is too small,
- if the pan is taken off the cooking zone when it is switched on.

If a suitable pan is placed on the cooking zone within 3 minutes, the  will go out and you can continue as normal.

If no pan or an unsuitable pan is placed on the cooking zone, the cooking zone will switch off automatically after 3 minutes.

 When the appliance is switched on either deliberately or by mistake, or when there is residual heat present, there is the risk of any metal items placed on the hob (e.g. cutlery) heating up.

Danger of burning.

Do not use the appliance as a resting place for anything else. Switch the cooking zones off after use with the appropriate sensor control.

Induction

Noises

When using an induction cooking zone, the following noises can occur in the pan, depending on what it is made of and how it has been constructed.

On the higher power settings, it might buzz. This will decrease or cease altogether when the power setting is reduced.

If the pan base is made of layers of different materials (e.g. in a sandwiched base), it might emit a cracking sound.

Whistling might occur if linked zones (see "Booster") are being used at the same time, and the pans also have bases made of layers of different materials.

You might hear a clicking sound from the electronic switches, especially on lower power settings.

You might hear a whirring sound when the cooling fan switches on. It switches on to protect the electronics when the hob is being used intensively. The fan may continue to run after the appliance has been switched off.

Pans

The following pan types are **suitable**:

- Stainless steel with a base that can be magnetised,
- enamelled steel,
- cast iron.

The following pan types are **not suitable**:


- Stainless steel pans without a magnetic base,
- aluminium and copper pans,
- glass, ceramic or earthenware pots and pans.

To test whether a pot or pan is suitable for use on an induction hob, hold a magnet to the base of the pan. If the magnet sticks, the pan is suitable. If an unsuitable pan is used, the 'U' symbol will flash alternately with the power level set.

The composition of the pan base can affect the evenness of the cooking results (e.g. when browning pancakes).

- To make optimum use of the cooking zones, choose a pan with a suitable base diameter (see "Guide to the appliance - Cooking zones"). If the pan is too small, it will not be recognised and the 'U' symbol will flash alternately with the power level set.
- Only use pots and pans with smooth bases. Rough bases will scratch the ceramic glass.
- Lift pans into position on the hob. Sliding them into place can cause scuffs and scratches.

- Often the maximum diameter quoted by manufacturers refers to the diameter of the top rim of the pot or pan. The diameter of the base (generally smaller) is more important.

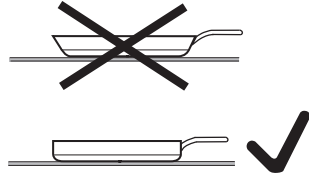

- Where possible, use pans with vertically straight sides. If a pan has angular sides, induction also acts on the sides of the pan. The sides of the pan may discolour or the coating may peel off.

Tips on saving energy

- Use a lid whenever possible to minimise heat loss.
- Select a smaller pan when cooking small quantities. A smaller pan uses less energy than a larger pan with very little in it.
- Cook with as little water as possible.
- Once food has come to the boil or the oil in the pan is hot enough for frying, reduce the heat to a lower setting.
- Use a pressure cooker to reduce cooking times.

Setting range

The hob is programmed with 9 power levels at the factory. If you wish to fine-tune a setting, you can extend the power setting range to 17 power levels (see "Programming").

	Setting range	
	Default setting (9 power levels)	Extended settings (17 power levels)
Keeping warm	h	h
Melting butter Dissolving gelatine Melting chocolate	1–2	1–2.
Making milk puddings	2	2–2.
Warming small quantities of liquid Cooking rice	3	3–3.
Defrosting frozen vegetables	3	2.–3
Making porridge	3	2.–3.
Warming liquid and semi-solid foods Making omelettes or lightly frying eggs Steaming fruit	4	4–4.
Cooking dumplings	4	4–5.
Steaming vegetables and fish	5	5
Defrosting and reheating frozen food	5	5–5.
Gently frying eggs (without overheating the fat)	6	5.–6.
Bringing large quantities of food to the boil, e.g. casseroles. Thickening custard and sauces, e.g. hollandaise	6–7	6.–7
Gently braising meat, fish and sausages (without overheating the fat)	6–7	6.–7.
Frying pancakes, potato fritters etc.	7	6.–7
Cooking stew	8	8–8.
Boiling large quantities of water Bringing to the boil	9	9

These settings should only be taken as a guide. The power of the induction coils will vary depending on the size and material of the pan. For this reason, it is possible that the settings will need to be adjusted slightly to suit your pans. As you use the hob, you will get to know which settings suit your pans best. When using new pans that you are not familiar with, set the power level below the one specified.

Operation

Operation

This glass ceramic hob is equipped with electronic sensor controls which react to finger contact. For safety reasons, in order to switch the hob on, the On/Off ① sensor needs to be touched for a little longer than the other sensors. A tone sounds each time a sensor is touched.

In order to set or alter a power level or a duration, the cooking zones and the timer must be "active". To activate a cooking zone or the timer, touch the sensor for selecting the relevant cooking zone or the timer. After you have touched the sensor, the relevant cooking zone or the timer display will start to flash. The cooking zone or the timer is "active" whilst the display is flashing and you can set a power level or a duration.

Exception: if only one of the cooking zones is in use, you can alter the power level without activating the cooking zone.

Malfunction due to dirty and/or covered sensors

If the sensors are dirty or covered this could cause them to fail to react, to activate a function or even to switch the hob off automatically (see "Safety switch-off"). Placing hot pans on the sensors/indicators can damage the electronic unit underneath.

Keep the sensors and indicators clean and do not place anything on top of them. Do not place hot pans on them.



Fire hazard.

Do not leave the hob unattended whilst it is being used.

Please note that the heating up time on induction hobs is very much shorter than on conventional hobs.

Switching on the hob

- Touch the ① sensor.

① will appear in each of the cooking zone displays. If there is no further input, the hob will switch itself off after a few seconds for safety reasons.

Selecting/changing the power level

- Touch the sensor for selecting the cooking zone you want briefly.

① or the selected power level will flash in the cooking zone display.

- Touch the appropriate number sensor for the power level you want.

The power level selected will flash in the display for a few seconds to start with and then light up constantly.

Switching off

- To switch a cooking zone off, touch the sensor for that cooking zone twice.
- To switch off the hob and all the cooking zones, touch the ① sensor.

Residual heat indicator

If the cooking zone is still hot, the residual heat indicator will light up after it has been switched off.

The lines of the residual heat indicator go out one after another as the cooking zone cools down. The last horizontal line only goes out when the cooking zone is safe to touch.

The residual heat indicators will flash if there is a power cut during use or while residual heat is still present or if you have opened the programming function while residual heat is still present.



Danger of burning. Do not touch the cooking zones whilst the residual heat indicators are lit up.

Operation

Power level setting - Extended setting range

- Touch the numerical keybank in between two number sensors.



The power level selected will flash for a few seconds and then light up constantly. The intermediate setting will be represented by an illuminated dot next to the number.

PowerFlex cooking area

The PowerFlex cooking zones can be combined to form a PowerFlex cooking area (see "Guide to the appliance - Hob"). Settings for the cooking area are controlled by the rear or left PowerFlex cooking zone.

Switching on

- Touch the  sensor.

 will flash in the display for the rear or left cooking zone.  will appear in the display for the front or right cooking zone.

- Set the power level you want by touching the appropriate number sensor for the rear or left cooking zone.

Switching off

- Touch the  sensor.

Auto heat-up

When Auto heat-up has been activated, the cooking zone switches on automatically at the highest power setting and then switches to the continued cooking setting. The heat-up time depends on which continued cooking setting has been chosen (see chart).

Activating

- Touch the sensor for selecting the cooking zone you want briefly.
- Touch the sensor for the continued cooking setting you want until an audible tone sounds and the indicator light to the right of the continued cooking setting lights up in the cooking zone display.

During the Auto-heat up time (see chart) the indicator light next to the continued cooking setting selected will light up. In the extended range of power settings (see "Programming"), *H* flashes alternately with the continued cooking setting selected.

Altering the continued cooking setting while the cooking zone is heating up deactivates Auto heat-up.

Deactivating

- Touch the sensor for selecting the cooking zone you want briefly.
- Touch the continued cooking setting which has been selected until the indicator light or *H* goes out.

or

- Select a different power level.

Continued cooking setting	Heat-up time [min : sec]
1	approx. 0 : 15
1.	approx. 0 : 15
2	approx. 0 : 15
2.	approx. 0 : 15
3	approx. 0 : 25
3.	approx. 0 : 25
4	approx. 0 : 50
4.	approx. 0 : 50
5	approx. 2 : 00
5.	approx. 5 : 50
6	approx. 5 : 50
6.	approx. 2 : 50
7	approx. 2 : 50
7.	approx. 2 : 50
8	approx. 2 : 50
8.	approx. 2 : 50
9	—

The continued cooking settings with a dot after the number are only available if the power level range has been extended (see "Programming").

Operation

Booster

The cooking zones are equipped with a Booster or TwinBooster (see "Guide to the appliance – Hob"). You can use the booster function for a maximum of two cooking zones at the same time.

When activated, the power is boosted for a maximum of 15 minutes so that large quantities can be heated quickly, e.g. when boiling water for cooking pasta.

The booster function can only be used on two cooking zones at the same time.

If the booster function is switched on when

- no power level has been selected, the cooking zone will revert automatically to level 9 at the end of the booster time or if the booster function is switched off before this.
- a power level has been selected, the cooking zone will revert automatically to the power level selected at the end of the booster time or if the booster function is switched off before this.

Cooking zones are networked in pairs to supply the power for the booster function. When the booster function is selected, a proportion of energy is taken away from the linked cooking zone and the following happens within the pairs:

- Auto heat-up is deactivated
- the power level is reduced
- the linked cooking zone is switched off.

Switching the Booster / TwinBooster on and off

To switch on the Booster

- Touch the sensor for selecting the cooking zone you want.
- Select a power level if necessary.
- Touch the **B I/II** sensor.

The indicator light for the Booster lights up and the cooking zone indicator „ starts to flash. After a few seconds, „ lights up continuously and the indicator light goes out.

TwinBooster activation, level 1

- Touch the sensor for selecting the cooking zone you want.
- Select a power level if necessary.
- Touch the **B I/II** sensor.

The indicator light for the Booster lights up and the cooking zone indicator , starts to flash. After a few seconds, , lights up continuously and the indicator light goes out.

TwinBooster activation, level 2

- Touch the sensor for selecting the cooking zone you want.
- Select a power level if necessary.
- Touch the **B I/II** sensor twice.

The indicator light for the Booster lights up and the cooking zone indicator „ starts to flash. After a few seconds, „ lights up continuously and the indicator light goes out.

Switching the Booster / TwinBooster off

- Touch the sensor for selecting the cooking zone you want.
- Touch the **B I/II** sensor repeatedly until the indicator lamp for the Booster goes out and the cooking zone setting shows in the display.
- Or:
Set a different power level.

Operation

Keeping warm

This function is for keeping food warm which has just been cooked and is still hot. It is not for reheating food that has gone cold.

The maximum duration for keeping food warm is 2 hours.

- Keep food warm in the pan it was cooked in and cover with a lid.
- You do not have to stir food while it is being kept warm.
- Nutrients are lost when food is cooked, and continue to diminish when food is kept warm. The longer food is kept warm for, the greater the loss of nutrients. Try to ensure that food is kept warm for as short a time as possible.

Setting the keeping warm function

- Touch the sensor for selecting the cooking zone you want.
- Touch the area between the "0" and "1" sensors.

h will appear in the cooking zone display.

To switch off the keeping warm function

- Touch the sensor for selecting the cooking zone you want.
- Touch the "0" sensor.

The hob has to be switched on if you wish to use the timer.
You can select a time up to a maximum of 99 minutes.

- Set the time you want, as described above.

Deleting

- Touch the  sensor until  appears in the timer display.


The timer can be used for the following two different functions:



- For setting the minute minder.
- For automatically switching a cooking zone off.

Minute minder

Setting


Example: to set a time of 15 minutes

- Switch the hob on if necessary.
- Touch the  sensor.



 will appear in the timer display. The  on the right will flash.

Enter the tens first and then the units.

- Touch the number sensor which corresponds to the tens position (1 in this case).

The timer display will change and  will start flashing on the right hand side.

- Touch the number sensor which corresponds to the units position (5 in this case).

The timer display will change. The  moves to the left and  appears on the right.

The minute minder will begin to count down.

Changing

- Touch the  sensor.

Timer

Switching a cooking zone off automatically

You can set a time at the end of which a cooking zone will switch off automatically. This function can be used for all the cooking zones at the same time.

If the time programmed is longer than the maximum operational time allowed, the cooking zone will switch off after the maximum time allowed (see relevant section).

- Select a power level for the cooking zone you require.
- Keep touching the ⌚ sensor until the indicator light for this cooking zone starts flashing.

If several cooking zones are on, the indicator lights flash in a clockwise direction, starting with the front left zone.

- Set the time you want.

- If you want to set another cooking zone to switch off automatically, follow the same steps as described above.

If more than one switch-off time is programmed, the shortest time remaining will be displayed, and the corresponding indicator light will flash. The other indicator lights will light up constantly.

- If you want to show the time remaining for another zone which is counting down in the background, touch the ⌚ sensor repeatedly until the indicator light for the zone you require flashes.

Using both timer functions at the same time

The minute minder and automatic switch-off functions can be used at the same time.

If you have programmed in one or more switch-off times, and would like to use the minute minder as well:

- Touch the ⌚ sensor repeatedly until the indicator lights of the programmed cooking zones light up constantly and **00** appears in the timer display.
- Set the time as described above.

If you have set the minute minder and would like to programme in one or more switch-off times as well:

- Touch the ⌚ sensor repeatedly until the indicator light for the zone you require flashes.
- Set the time as described above.

Shortly after the last entry, the timer display switches to the function with the shortest remaining time.

If you want to show the times counting down in the background:

- Touch the ⌚ sensor repeatedly until
 - The indicator light for the desired cooking zone flashes (automatic switch-off).
 - The timer display (minute minder) starts flashing.

Starting with the shortest duration, the display will show the time left for all active cooking zones and for the minute minder in a clockwise direction.

Additional functions

Stop&Go

When Stop&Go is activated, the power of all cooking zones in use is reduced to power level 1.

The cooking zone power levels and the timer settings cannot be altered and the hob can only be switched off. A set minute minder time and the Booster time will continue to count down. Auto heat-up and automatic switch-off times set will be put on hold.

When Stop&Go is deactivated, the cooking zones will operate at the power level previously selected and the Auto heat-up and automatic switch-off times will resume running.

If the function is not deactivated within 1 hour, the hob will switch off.

Activating / Deactivating

- Touch the II/► sensor.

Use this function when the sensors need to be cleaned quickly or there is a risk of boiling over.

System lock / Safety lock

The system lock and safety lock are deactivated if there is an interruption to the power supply.

Three-finger control is the default setting. You can change the default to one-finger control (see "Programming").

Your hob is equipped with a system lock and a safety lock to prevent the hob and the cooking zones being switched on or any settings being altered.


The **system lock** is activated when the hob is switched off. When it is activated, the hob cannot be switched on and the timer cannot be used. The hob is programmed so that the system lock must be activated manually. It can be programmed to be activated automatically 5 minutes after the hob has been switched off if the system lock is not manually activated first (see "Programming").

The **safety lock** is set when the hob is switched on. When the safety lock is activated,

- the cooking zone power levels and the timer settings cannot be changed.
- the cooking zones, the hob and the timer can be switched off, but once switched off cannot be switched on again.


If a locked sensor is touched when the safety lock or the system lock is activated, the indicator light comes on and **LL** appears in the timer display for a few seconds.

Activating

- Touch the  sensor and the sensor controls for both right cooking zones until **LL** appears in the timer display and the indicator light for the safety lock lights up.

The indicator light and **LL** go out after a short while.

Deactivating

- Touch the  sensor and the sensor controls for both right cooking zones until **LL** appears in the timer display and the indicator light for the safety lock goes out.

Safety features

Safety switch-off

Safety switch-off with an overlong cooking time

The safety switch-off mechanism is triggered automatically if one of the cooking zones is heated for an unusually long period of time. This period of time depends on the power level selected. Once exceeded, the cooking zone switches off and the residual heat indicators appear. The cooking zone can be operated again after it has been switched off and back on.

Safety switch-off if the sensors are covered

Your hob will turn off automatically if one or several of the sensors remain covered for longer than 10 seconds, for example, by finger contact, food boiling over or by an object such as an oven glove or tea towel. *F* flashes in the timer display and a buzzer sounds every 30 seconds for 10 minutes.

When you remove the objects or soiling, *F* goes out, the buzzer stops, and the hob is ready for use again.

Overheating protection

All the induction coils and cooling elements for the electronics are fitted with an overheating protection mechanism. Before the induction coils or cooling elements get too hot, the overheating protection mechanism cuts in in one of the following ways:

Induction coils

- Any booster function in operation will be switched off.
- The set power level will be reduced.
- The cooking zone turns off automatically. *FE* flashes in the timer display alternating with *44*.

You can use the cooking zones again as usual when the fault message has gone out.

Cooling elements

- Any booster function in operation will be turned off.
- The set power level will be reduced.
- The cooking zones turn off automatically.

The affected cooking zones can only be used again if the cooling element has cooled down to a safe level.

The overheating protection mechanism can be triggered by:

- Heating up an empty pan.
- Fat or oil being heated on a high power level.
- Insufficient ventilation to the underside of the hob.
- A hot cooking zone being switched on after an interruption to the power supply.

If, despite removing the cause, the overheating protection mechanism triggers again, contact Miele Service.

Cleaning and care



Danger of burning.

The cooking zones must be switched off. The hob must have cooled down.



Danger of injury.

The steam from a steam cleaning appliance could reach electrical components and cause a short circuit.

Do not use a steam cleaner to clean the hob.

The use of unsuitable cleaning agents can cause the surfaces to discolour or alter.

All surfaces are susceptible to scratching.

Remove any cleaning agent residues immediately.

Allow the hob to cool down before cleaning.

- Clean the hob after every use.
- Dry the hob thoroughly after every cleaning to avoid limescale residue.

Unsuitable cleaning agents

To avoid damaging the surfaces of your appliance, do not use:

- washing-up liquid,
- cleaning agents containing soda, alkalines, ammonia, acids or chlorides,
- cleaning agents containing descaling agents,
- stain or rust removers,
- abrasive cleaning agents, e.g. powder cleaners and cream cleaners,
- solvent-based cleaning agents,
- dishwasher cleaner,
- grill and oven cleaners,
- glass cleaning agents,
- hard, abrasive brushes or sponges, e.g. pot scourers, or sponges which have been previously used with abrasive cleaning agents,
- melamine eraser blocks.

Cleaning the glass ceramic surface

Risk of damage from pointed objects!

Do not clean the area between the glass ceramic surface and the frame or the frame and the worktop with sharp, pointed objects.

Not all soiling and residues can be removed using a solution of washing-up liquid.

An invisible film can develop that can lead to discolouration of the ceramic glass. This discolouration cannot be removed.

Clean the glass ceramic surface regularly with a suitable ceramic hob cleaning agent.

- Remove any coarse soiling with a damp cloth and more stubborn soiling with a glass scraper.
- Then clean the ceramic glass surface with the Miele ceramic and stainless steel hob cleaner (see "Optional accessories") or with a proprietary ceramic glass cleaner applied with a paper towel or a clean cloth. Do not apply the cleaner while the hob is still hot, as this can result in marking. Please follow the cleaning agent manufacturer's instructions.
- Finally wipe the hob with a damp cloth and polish with a soft, dry cloth.

Residues can burn onto the hob the next time it is used and cause damage to the ceramic surface. Ensure that all cleaning agent residues are removed.

- **Spots** caused by limescale, water and aluminium residues (spots with a metallic appearance) can be removed using Miele's ceramic and stainless steel hob cleaner.



Danger of burning.

Wear oven gloves when removing residues of sugar, plastic or aluminium foil from a hot hob with a glass scraper.

- Should any **sugar, plastic or aluminium foil** spill or fall onto a hot cooking zone while it is in use, first switch off the appliance.
- Then carefully scrape off these residues **immediately** whilst they are still hot, using a shielded scraper blade.
- Afterwards, clean the glass ceramic surface in its cooled state, as described above.

Programming

You can programme certain settings on the hob to suit your personal needs. Several settings can be changed in succession.

After accessing programming mode, **P** (programme) and **5** (status) will appear in the timer display. On hobs that have 3 cooking zones, an additional display appears at the back left.

The programme is shown in the cooking zone displays at the front left and rear left.

Example:

Programme 03 =
front left 0, rear left 3
Programme 14 =
front left 1, rear left 4

The status is shown in the front right cooking zone display.

After leaving programming mode, an automatic reset will be carried out. It is completed when an indicator light lights up briefly above the ① sensor. Do not turn the cooking zone on until the reset is completed.

To access programming mode

- With **the hob switched off**, touch the ① and  sensors at the same time until the indicator light for the safety lock flashes.

To set the programme

- To set the **units position**, first touch the sensor for selecting the **rear left** cooking zone and then touch the relevant number sensor.
- To set the **tens position**, touch the sensor for selecting the **front left** cooking zone and then the relevant number sensor.


To set the status



- Touch the sensor for selecting the **front right** cooking zone and then the relevant number sensor.

To save the settings

- Touch the ① sensor until the indicators go out.

To avoid saving the settings

- Touch the  sensor until the indicators go out.

Programme ¹⁾		Status ²⁾	Settings
P00	Demonstration mode and factory default settings	S0	Demonstration mode on ³⁾
		S1	Demonstration mode off
		S9	Factory default settings reinstated
P01	Stop and Go	S0	Off
		S1	On
P02	Number of power levels	S0	9 power levels
		S1	17 power levels ⁴⁾
P03	Induction warning tone when there is no pan in place or the pan is unsuitable	S0	Off
		S1	Quiet
		S2	Medium
		S3	Loud
P04	Keypad tone when a sensor is touched	S0	Off
		S1	Quiet
		S2	Medium
		S3	Loud
P05	Audible tone for the timer	S0	Off
		S1	Quiet
		S2	Medium
		S3	Loud
P06	System lock / Safety lock	S0	One-finger control with 
		S1	Three-finger control by touching  and the sensors for selecting the right-hand cooking zones at the same time
P07	System lock	S0	System lock can only be activated manually
		S1	System lock can be activated manually and automatically
P08	Auto heat-up	S0	Off
		S1	On

Programming

Programme ¹⁾		Status ²⁾	Settings
P10	Miele@home/Con@ctivity - only on communication-enabled appliances retrofitted with a communication module	S0	Not available
		S1	Signed off
		S2	Signed on
P15	Buzzer tone if the sensors are covered	S0	Off
		S1	On
P16	Sensor reaction speed	S0	Slow
		S1	Normal
		S2	Rapid

¹⁾ Unlisted programmes are not assigned.

²⁾ The factory setting is shown in bold.




³⁾ After the hob has been switched on *dE* appears in the timer display for a few seconds.

⁴⁾ The intermediate levels are shown on the cooking zone display by a dot after the power level. Auto heat-up is indicated by *H* flashing alternately with the continued cooking setting.

Problem solving guide

Many malfunctions and faults that can occur in daily operation can be easily remedied. Time and money will be saved because a service call will not be needed.

The following guide may help you to find the reason for a malfunction or a fault, and to correct it.

Problem	Cause and remedy
The hob or cooking zones cannot be switched on.	There is no power to the hob. ■ Check if the mains fuse has tripped. If it has, contact a qualified electrician or Miele (minimum fuse rating - see data plate).
	There may be a technical fault. ■ Disconnect the appliance from the electricity supply for approx. 1 minute. To do this: – switch off at the isolator, or – disconnect the mains fuse. ■ If, after resetting the trip switch in the mains fuse box and switching the appliance back on, the appliance will still not heat up, contact a qualified electrician or Miele.
A smell and vapours are given off when the new appliance is being used.	The metal components have a protective coating. When the appliance is used for the first time, this causes a smell and possibly also vapour. The material from which the induction coils are made also gives off a smell in the first few hours of operation. This smell will be less noticeable with each subsequent use before dissipating completely. The smell and any vapour given off do not indicate a faulty connection or appliance and they are not hazardous to health.
The  symbol flashes alternately with the power level selected or  in the display for one of the cooking zones.	There is no pan on the cooking zone, or the pan is unsuitable. ■ Use a suitable pan (see "Pans").
After the hob has been switched on  appears in the timer display for a few seconds.	The system lock or safety lock is activated. ■ Deactivate the system lock or safety lock (see "System lock / Safety lock").

Problem solving guide

Problem	Cause and remedy
F flashes in the timer display and the hob switches off automatically.	One or more of the sensors are covered, e.g. by finger contact, food boiling over or an object. ■ Clean off any dirt or remove the object (see "Safety switch-off").
After the hob has been switched on dE appears in the timer display for a few seconds. The cooking zones do not heat up.	The hob is in demonstration mode. ■ Deactivate demo mode (see "Programming").
A cooking zone switches off automatically.	It has been operated for too long. ■ You can use the cooking zone again by switching it back on (see "Safety switch-off").
A cooking zone or the whole hob switches off automatically.	The overheating protection mechanism has been activated. ■ See "Overheating protection".
The Booster has deactivated early automatically.	The overheating protection mechanism has been activated. ■ See "Overheating protection".
The cooking zone is not working in the usual way on the power setting selected.	The overheating protection mechanism has been activated. ■ See "Overheating protection".
Power level 9 is automatically reduced if you select power level 9 on two linked cooking zones at the same time.	Operating both zones at power level 9 would exceed the permitted maximum power for the two zones. ■ Use a different cooking zone.
The food in the pan does not heat up when the Auto heat-up function is switched on.	A large amount of food is being heated up. ■ Start cooking at the highest power level and then turn down to a lower one manually later on.
	The pan is not conducting heat properly. ■ Use a different pot or pan which conducts heat properly.

Problem solving guide

Problem	Cause and remedy
An operating noise can be heard after the appliance has been switched off.	The fan will continue running until the appliance has cooled down. It will then switch itself off automatically.
One or more residual heat indicators are flashing.	There was an interruption to the power supply during operation or when residual heat was present. You accessed the programming function while residual heat was still present.
The sensors show increased sensitivity or fail to react.	<p>The sensitivity level of the sensors has changed.</p> <ul style="list-style-type: none"> ■ Make sure that there is no direct light (from the sun or from an artificial source) falling onto the hob. The area surrounding the hob must not be too dark. ■ Make sure that there is nothing covering the sensors or the hob. Take any pans off the hob and wipe away any food deposits. ■ Interrupt the power supply to the hob for approx. 1 minute. ■ If the problem persists after power has been restored, please contact Miele.
FE alternating with a number flashes in the timer display.	<p><i>FE44</i></p> <p>The overheating protection mechanism has been activated.</p> <ul style="list-style-type: none"> ■ See "Overheating protection".
	<p><i>FE47 or FE48</i></p> <p>The fan is blocked or defective.</p> <ul style="list-style-type: none"> ■ Make sure it has not been blocked by something like a fork. Remove the cause of the blockage. ■ If this fault message continues to appear in the display, contact Miele Service.
	<p><i>FE</i> and other numbers</p> <p>There is a fault in the electronic module.</p> <ul style="list-style-type: none"> ■ Interrupt the power supply to the hob for approx. 1 minute. ■ If the problem persists after power has been restored, please contact Miele.

Optional accessories

Miele offer a comprehensive range of useful accessories as well as cleaning and conditioning products for your Miele appliances.

These products can be ordered through the Miele Webshop.

These can also be ordered from Miele (see end of this booklet for contact details) or from your Miele dealer.

Pans

Miele offer a wide range of pans which are perfect for Miele hobs. Please refer to the Miele website for more details on individual products.

- Pans in various sizes
- Frying pan with lid
- Anti-stick pans
- Wok
- Gourmet oven dishes


Cleaning and care products

Ceramic and stainless steel hob cleaner 250 ml



Removes heavy soiling, limescale deposits and aluminium residues

Microfibre cloth



Removes finger marks and light soiling

Your hob is communication enabled and can

- be integrated into the Miele@home system using an optional **communication module** or
- communicate with your Miele cooker hood via the **stick** supplied with your cooker hood (Con@ctivity).

Miele@home system

Communication-enabled appliances send operating status information to a master appliance (SuperVision appliance, Notebook, tablet etc.). The system also enables integration into a household bus system (Miele Gateway or QIVICON Smart Home Platform).


Con@ctivity

The hob sends information on its operating status to the cooker hood. Operation of the cooker hood occurs automatically in conjunction with the hob.

Further information regarding Miele@home and Con@ctivity is available on the internet and in the instruction manuals of the various components.

- To sign on to the **Miele@home** system, first prepare the signing on procedure on the master (display) appliance.
- To sign on to **Con@ctivity**, you must first sign the cooker hood on.

Signing on the hob

- With the hob **switched off**, touch the ① and  sensors at the same time until the indicator light for the safety lock flashes.

In the timer display *P* (programme) and 5 (status) will appear. On hobs that have 3 cooking zones, an additional display appears at the back left.

- Touch the sensor for selecting the **front left** cooking zone and then the power level 1 number sensor (Set Programme 10).
- Touch the sensor for selecting the **front right** cooking zone and then the power level 2 number sensor (Set Status 2 = Sign on).

The signing on process starts and the number 2 flashes in the cooking zone display. The signing on process takes a few minutes. The number 2 will light up constantly when the process has been completely successful.

- To save the setting, touch the ① sensor until the displays go out.
- Finish signing on the cooker hood/master appliance (see the relevant instructions).

Signing off the hob

If you want to sign off the hob from Miele@home, first carry out the signing off procedure on the master (display) appliance.

- With **the hob switched off**, touch the ① and  sensors at the same time until the indicator light for the safety lock flashes.


In the timer display *P* (programme) and 5 (status) will appear. On hobs that have 3 cooking zones, an additional display appears at the back left.

- Touch the sensor for selecting the **front left** cooking zone and then the power level 1 number sensor (Set Programme 10).
- Touch the sensor for selecting the **front right** cooking zone and then the power level 1 number sensor (Set Status 1 = Sign off).

The signing off process starts and the number 1 flashes. The signing off process takes a few minutes. The number 1 will light up constantly when the process has been completed.

- To save the setting, touch the ① sensor until the displays go out.

Safety instructions for installation

 The appliance must only be installed and connected to the electricity supply by a suitably qualified and competent person in strict accordance with current national and local safety regulations.


Fit the wall units and cooker hood before fitting the hob to avoid damaging the hob.

- ▶ The veneer or laminate coatings of worktops (or adjacent kitchen units) must be treated with 100 °C heat-resistant adhesive which will not dissolve or distort. Any backmoulds must be of heat-resistant material.
- ▶ The hob must not be installed over a fridge, fridge-freezer, freezer, dishwasher, washing machine, washer-dryer or tumble dryer.
- ▶ This hob must not be installed above ovens or cookers unless these have a built-in cooling down fan.
- ▶ After installation, ensure that nothing can come into contact with the connection cable and that it is without hindrance.
- ▶ The electrical cable may not come into contact with any moving kitchen component (e.g. a drawer) or be subject to mechanical obstruction which could damage it.
- ▶ Observe carefully the safety clearances listed on the following pages.

All dimensions are given in mm.

Safety distances

Safety distance above the hob

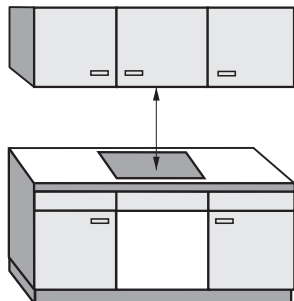

A minimum safety distance must be maintained between the appliance and the cooker hood above it. See the cooker hood manufacturer's operating and installation instructions for details. If the manufacturer's instructions are not available for the cooker hood or if any flammable objects (e.g. utensil rails, wall units etc) are installed above the hob a minimum safety distance of at least 760 mm must be maintained between them and the appliance below.

When two or more appliances which have different safety distances are installed together below a cooker hood, you should observe the greatest safety distance.

Safety distances to the sides and back of the hob

Ideally the hob should be installed with plenty of space on either side. There may be a wall at the rear or a tall unit or wall on one side (right **or** left) (see illustrations).

① Minimum distance between the **back** of the worktop cut-out and the rear edge of the worktop:


50 mm

② Minimum distance between the worktop cut-out and a wall or tall unit to the **right** of it:


50 mm.

③ Minimum distance between the worktop cut-out and a wall or tall unit to the **left** of it:


50 mm.

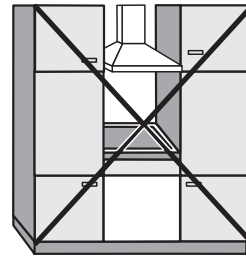


Not allowed

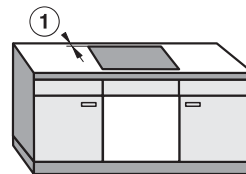

Recommended

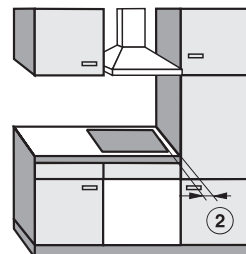

Not recommended

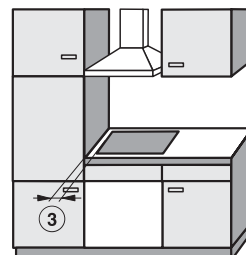

Not recommended

Safety distances

Minimum safety distances underneath the hob

To ensure sufficient ventilation to the hob, a certain gap must be left between the underside of the hob and any oven, interim shelf or drawer.

The minimum gap between the underside of the hob and

- the top of an **oven** is **15 mm**.
- the top of an **interim shelf** is **15 mm**.
- the base of a **drawer** is **75 mm**.

Interim shelf

It is not necessary to fit an interim shelf underneath the hob but one may be fitted if you wish.

Leave a gap of 10 mm at the back of the shelf to accommodate the cable.

We recommend a gap at the front of the shelf of 20 mm to ensure good ventilation.

Safety distance when installing the appliance near a wall with additional niche cladding

A minimum safety distance must be maintained between the worktop cut-out and any niche cladding to protect it from heat damage.


If the niche cladding is made from a combustible material (e.g. wood) a minimum safety distance ⑤ of 50 mm must be maintained between the cut-out and the cladding.

If the niche cladding is made from a non-combustible material (e.g. metal, natural stone, ceramic tiles) the minimum safety distance ⑤ between the cut-out and the cladding will be 50 mm less the thickness of the cladding.


Example: 15 mm niche cladding

50 mm - 15 mm = minimum safety distance of 35 mm

Flush-fitted hobs

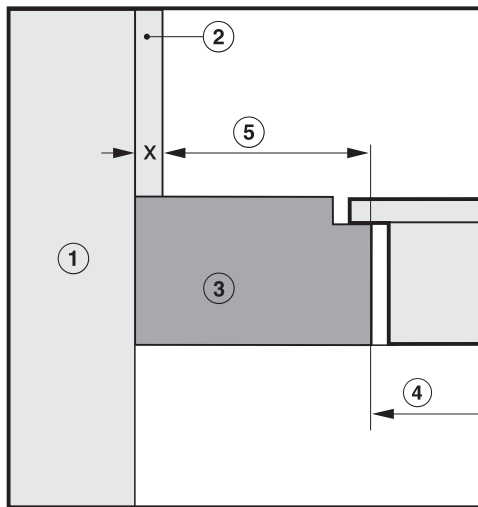

Hob with frame or bevelled edge

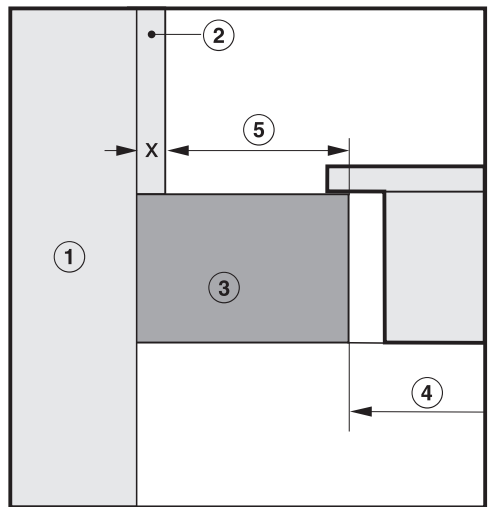


- ① Masonry
- ② Niche cladding dimension x = thickness of the niche cladding material
- ③ Worktop
- ④ Worktop cut-out
- ⑤ Minimum distance to
 - combustible** materials 50 mm
 - non-combustible** materials 50 mm - dimension x

Hob with frame or bevelled edge

Installation notes


Seal between the hob and the worktop

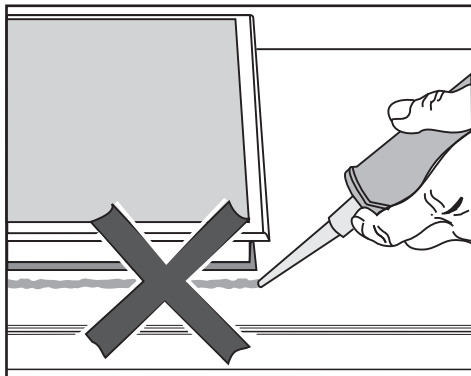


Do not use sealant between the hob and the worktop. This could result in damage to the hob or the worktop if the hob ever needs to be removed for servicing.

The sealing strip under the edge of the top part of the appliance provides a sufficient seal for the worktop.

Tiled worktop

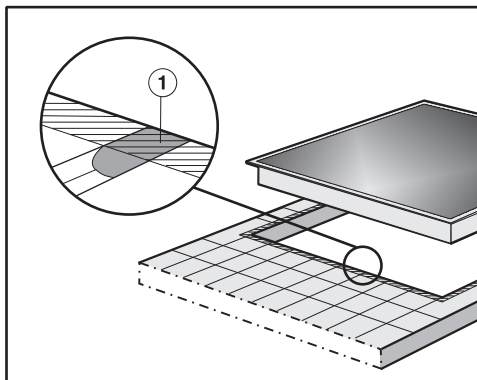


Grout lines ① and the hatched area underneath the hob frame must be smooth and even. If they are not the hob will not sit flush with the worktop and the sealing strip underneath the hob will not provide a good seal between the hob and the worktop.

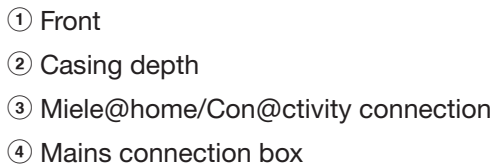KM 6322

57

Hob with frame or bevelled edge

KM 6347

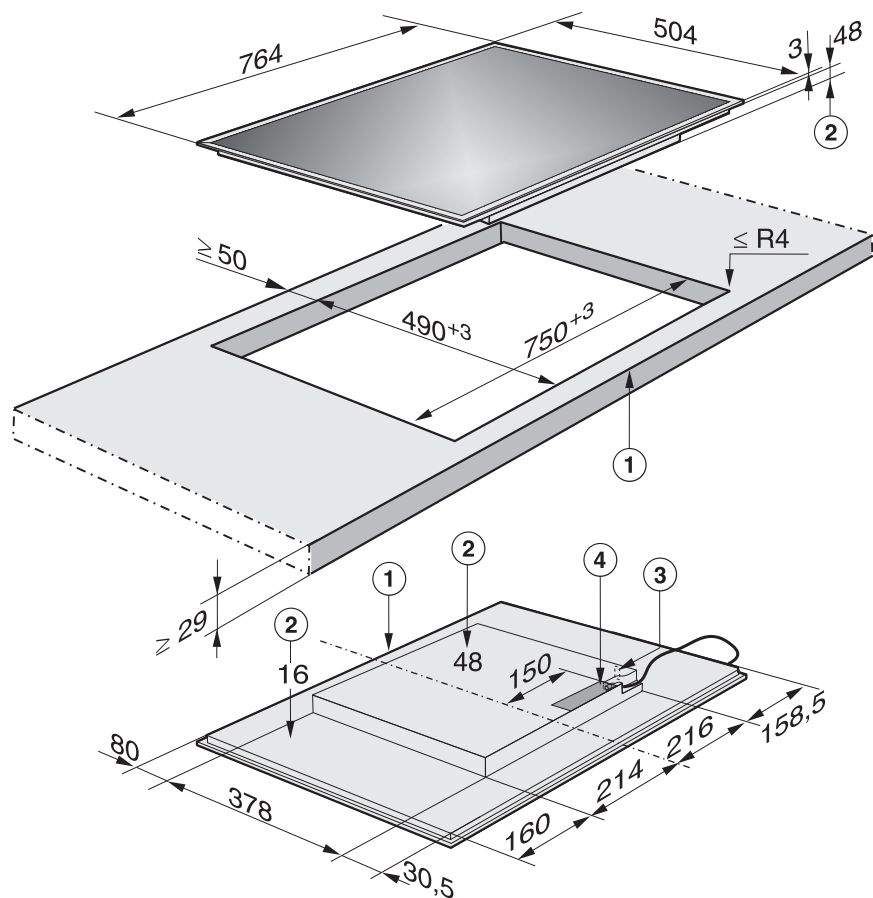

- ① Front
- ② Casing depth
- ③ Miele@home/Con@ctivity connection
- ④ Mains connection box

Mains connection cable (1440 mm long), supplied separately

Installation

Prepare the worktop

- Create the worktop cut-out as shown in the building-in diagram. Remember to maintain the minimum safety distances (see "Safety distances").
- Seal the cut surfaces with a suitable heat-resistant sealant to avoid swelling caused by moisture. The sealant must be temperature-resistant.

Make sure that the sealant does not come into contact with the top of the worktop.

The seal under the appliance ensures that the hob will sit securely in the cut-out without slipping. Any gap between the appliance frame and worktop will become smaller over time.

Connect the mains connection cable to the appliance

The mains connection cable must only be connected by a suitably qualified and competent person.

- Follow the instructions in the wiring diagram (see "Electrical connection - Wiring diagram").

Install the hob

- Feed the mains connection cable down through the cut-out.
- Place the hob centrally in the cut-out. When doing this make sure that the seal of the appliance sits flush with the worktop on all sides. This is important to ensure an effective seal all round.

Do not use any additional sealant (e.g. silicone) on the hob.

If the seal does not meet the worktop correctly on the corners, the corner radius ($\leq R4$) can be carefully scribed to suit.

- Connect the hob to the mains.
- Check that the hob works.

Flush-fitted hobs

Installation notes

Flush fit hobs are only suitable for installation in natural stone (granite, marble), tiled or solid wood worktops. Certain models are suitable for building into glass worktops - please see advice under "Building-in dimensions". When using a worktop made from any other material, please check first with the worktop manufacturer that it is suitable for installing a flush fit hob.


The internal width of the base unit must be at least as wide as the internal cut-out width for the hob (see "Building-in dimensions"). This is to ensure that the casing can be easily removed for maintenance. If the underside of the hob is not freely accessible after installation, any sealant used to plug the gaps around the appliance must be removed to enable the hob to be lifted out of the cut-out should this be necessary.

The hob can be installed

- in a suitable cut-out in a natural stone worktop.
- in a suitable cut-out in a tiled or solid wood worktop or a glass worktop with a wooden support frame. The frame must be provided on site, and is not supplied with the appliance.

Building-in dimensions

KM 6323

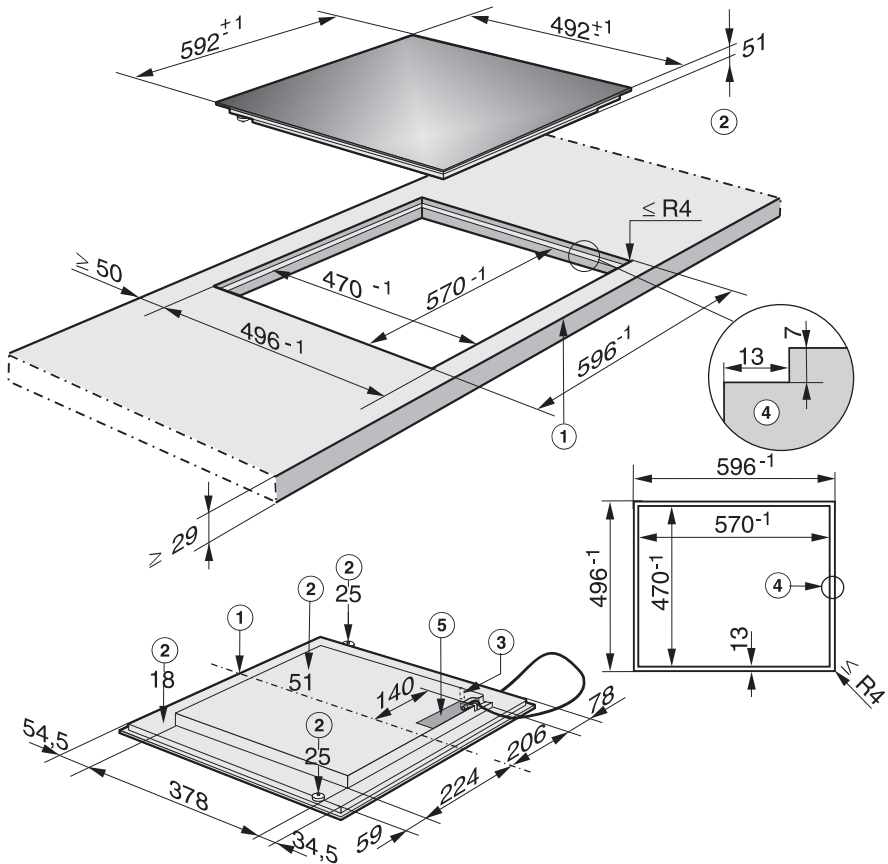


- ① Front
- ② Casing depth
- ③ Miele@home/Con@ctivity connection
- ④ Stepped cut-out for natural stone worktops
- ⑤ Mains connection box

Mains connection cable (1440 mm long), supplied separately

Please observe the detailed diagrams for cut-out dimensions in natural stone worktops.

Flush-fitted hobs

KM 6348

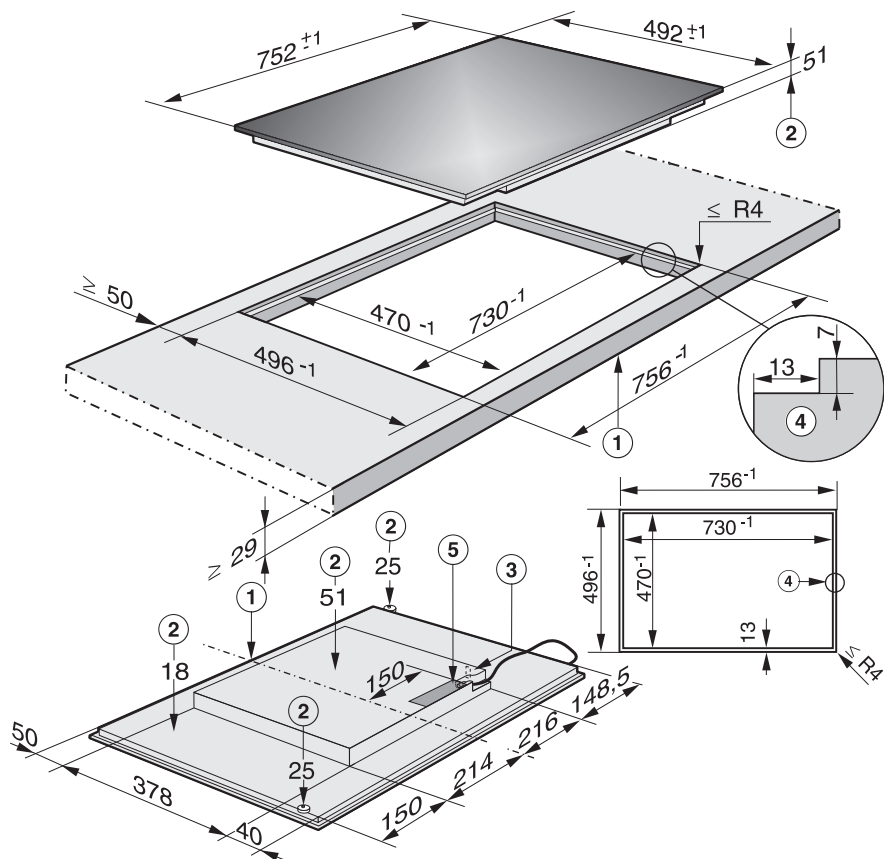


- ① Front
- ② Casing depth
- ③ Miele@home/Con@ctivity connection
- ④ Stepped cut-out for natural stone worktops
- ⑤ Mains connection box

The mains connection cable (1440 mm long) is supplied separately with the hob.

Please observe the detailed diagrams for cut-out dimensions in natural stone worktops.

Installation


Natural stone worktops

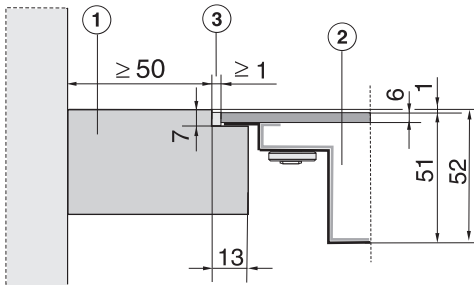

- ① Worktop
- ② Hob
- ③ Gap

As the ceramic glass and the worktop cut-out have a certain dimensional tolerance, the size of gap ③ can vary (min. 1 mm).

Solid wood, tiled and glass worktops

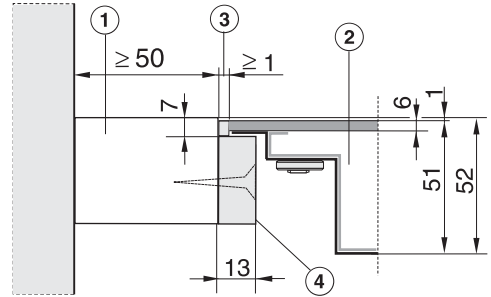

- ① Worktop
- ② Hob
- ③ Gap
- ④ Wooden frame 13 mm (to be provided on site)

As the ceramic glass and the worktop cut-out have a certain dimensional tolerance, the size of gap ③ can vary (min. 1 mm).

Flush-fitted hobs

Prepare the worktop

- Create the worktop cut-out as shown in the hob and inset diagrams. Remember to maintain the minimum safety distances (see "Safety distances").
- Solid wood, tiled and glass worktops: Fix a wooden frame ④ 7 mm below the top edge of the worktop (see diagram).

Connect the mains connection cable to the appliance

The mains connection cable must only be connected by a suitably qualified and competent person.

- Follow the instructions in the wiring diagram (see "Electrical connection - Wiring diagram").

Install the hob

- Feed the mains connection cable down through the cut-out.
- Centre the hob in the cut-out.
- Connect the hob to the mains.
- Check that the hob works.
- Seal the remaining gap ③ with a silicone sealant that is heat-resistant to at least 160°C.

Unsuitable sealant can damage natural stone.

For natural stone worktops and natural stone tiles, only use silicone sealant that is specially formulated for natural stone.

Please follow the manufacturer's instructions.



Danger of injury.

Miele cannot be held liable for unauthorised installation, maintenance and repair work as this can be dangerous to users.

Miele cannot be held liable for damage or injury caused by incorrect installation, maintenance or repair work, or by an inadequate or faulty earthing system (e.g. electric shock).

This hob must be connected to the mains electrical supply by a suitably qualified and competent person, in accordance with current local and national safety regulations (BS 7671 in the UK).

After installation ensure that all electrical components are shielded and cannot be accessed by users.

Connection

AC 230 V, 50 Hz

The connection data is quoted on the dataplate. It must match the household supply.

Please see wiring diagram for connection. (N.B. This appliance is supplied single phase only in the UK / AUS / NZ).

Residual current device

For extra safety, it is advisable to protect the appliance with a suitable residual current device (RCD) with a trip range of 30 mA.

WARNING


**THIS APPLIANCE MUST BE
EARTHED**

Separators

The appliance must be able to be disconnected from the mains on all poles by disconnecting devices. When switched off there must be an all-pole contact gap of at least 3 mm in the isolator switch. Disconnecting devices include overcurrent protection and circuit breakers.

Electrical connection

Disconnecting from the mains

 **Danger of electric shock.**
After disconnection, ensure the appliance cannot be switched back on by mistake.

To disconnect the appliance from the mains power supply, do one of the following depending on installation:

Safety fuses

- Completely remove fuses

Automatic circuit breakers

- Press the (red) button until the middle (black) button springs out.

Built-in circuit breakers

- Circuit breakers, type B or C: switch the on-off switch from 1 (on) to 0 (off).

Residual current device (RCD)

- Switch the main switch from 1 (on) to 0 (off) or press the test button.



Mains connection cable

The hob must be connected to the electrical supply with a special connection cable, type H 05 VV-F (PVC insulated) with a suitable diameter.

Please see wiring diagram for connection. (N.B. This appliance is supplied single phase only in the UK / AUS / NZ).

See the data plate on the hob for the correct voltage and frequency.


Replacing the mains cable

 **Danger of electric shock.**
The mains connection cable must be replaced by a suitably qualified and competent person in accordance with current local and national safety regulations. (e.g. BS 7671 in the UK).
The earth lead must be connected to the point marked .

If the mains cable needs to be replaced it must be replaced with a special connection cable, type H 05 VV-F (PVC-insulated), available from Miele.

The connection data is quoted on the data plate.

Wiring diagram

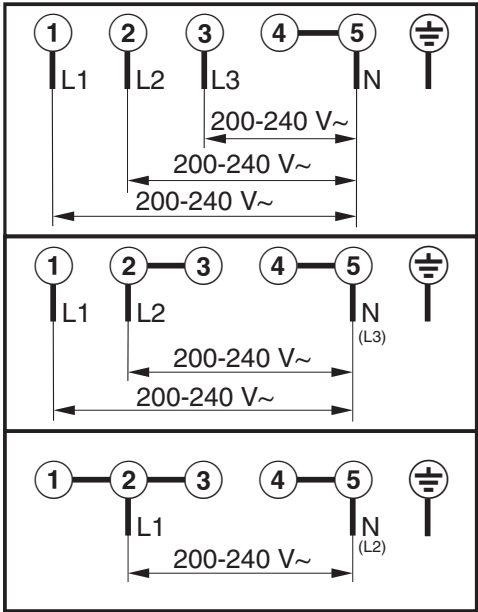

After sales service

Contact in case of malfunction

In the event of any faults which you cannot remedy yourself, please contact your Miele Dealer or Miele Service.

Contact information for Miele Service can be found at the end of this document.

Please note that telephone calls may be monitored and recorded for training purposes and that a call-out charge will be applied to service visits where the problem could have been resolved as described in this booklet.

Please quote the model and serial number of your appliance when contacting Miele. This information can be found on the data plate.

Data plate

Stick the extra data plate supplied with the appliance here. Make sure that the model number matches the one specified on the back cover of this document.



Warranty

The appliance warranty is valid for 2 years from date of purchase. In the UK, you must activate your cover by calling 0330 160 6640 or registering online at www.miele.co.uk.

For further information on country specific warranty terms and conditions, please refer to your warranty booklet or contact Miele Customer Service.

The following data sheets apply to the models described in this operating instruction manual.

Information for domestic electric hobs

In acc. with regulation (EU) No. 66/2014

MIELE	
Model name / identifier	KM 6322
Number of cooking zones and/or areas	4
For circular cooking zones: diameter of useful surface area/cooking zone For non-circular cooking zones or areas: length and width of useful surface area per electric cooking zone or area	1. = Ø 140-200 mm 2. = Ø 100-160 mm 3. = 230x390 mm 4. = 5. = 6. =
Energy consumption per cooking zone or area calculated per kg (EC _{electric cooking})	1. = 177,1 Wh/kg 2. = 185,3 Wh/kg 3. = 193,6 Wh/kg
Energy consumption for the hob calculated per kg (EC _{electric hob})	185,3 Wh/kg

Information for domestic electric hobs

In acc. with regulation (EU) No. 66/2014

MIELE	
Model name / identifier	KM 6323
Number of cooking zones and/or areas	4
For circular cooking zones: diameter of useful surface area/cooking zone For non-circular cooking zones or areas: length and width of useful surface area per electric cooking zone or area	1. = Ø 140-200 mm 2. = Ø 100-160 mm 3. = 230x390 mm 4. = 5. = 6. =
Energy consumption per cooking zone or area calculated per kg (EC _{electric cooking})	1. = 177,1 Wh/kg 2. = 185,3 Wh/kg 3. = 193,6 Wh/kg
Energy consumption for the hob calculated per kg (EC _{electric hob})	185,3 Wh/kg

Product data sheets

Information for domestic electric hobs

In acc. with regulation (EU) No. 66/2014

MIELE	
Model name / identifier	KM 6347
Number of cooking zones and/or areas	4
For circular cooking zones: diameter of useful surface area/cooking zone For non-circular cooking zones or areas: length and width of useful surface area per electric cooking zone or area	1. = Ø 160-230 mm 2. = Ø 100-160 mm 3. = 230x390 mm 4. = 5. = 6. =
Energy consumption per cooking zone or area calculated per kg (EC _{electric cooking})	1. = 168,9 Wh/kg 2. = 185,3 Wh/kg 3. = 193,6 Wh/kg
Energy consumption for the hob calculated per kg (EC _{electric hob})	182,6 Wh/kg

Information for domestic electric hobs

In acc. with regulation (EU) No. 66/2014

MIELE	
Model name / identifier	KM 6348
Number of cooking zones and/or areas	4
For circular cooking zones: diameter of useful surface area/cooking zone For non-circular cooking zones or areas: length and width of useful surface area per electric cooking zone or area	1. = Ø 160-230 mm 2. = Ø 100-160 mm 3. = 230x390 mm 4. = 5. = 6. =
Energy consumption per cooking zone or area calculated per kg (EC _{electric cooking})	1. = 168,9 Wh/kg 2. = 185,3 Wh/kg 3. = 193,6 Wh/kg
Energy consumption for the hob calculated per kg (EC _{electric hob})	182,6 Wh/kg

United Kingdom

Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
Customer Contact Centre Tel: 0330 160 6600
E-mail: mielecare@miele.co.uk
Internet: www.miele.co.uk

Australia

Miele Australia Pty. Ltd.
ACN 005 635 398
ABN 96 005 635 398
1 Gilbert Park Drive, Knoxfield, VIC 3180
Tel: 1300 464 353
Internet: www.miele.com.au

China

Miele (Shanghai) Trading Ltd.
1-3 Floor, No. 82 Shi Men Yi Road
Jing' an District
200040 Shanghai, PRC
Tel: +86 21 6157 3500, Fax: +86 21 6157 3511
E-mail: info@miele.cn, Internet: www.miele.cn

Miele (Hong Kong) Limited

41/F - 4101, Manhattan Place
23 Wang Tai Road
Kowloon Bay, Hong Kong
Tel: (852) 2610 1025, Fax: (852) 3579 1404
Email: customerservices@miele.com.hk
Website: www.miele.hk

India

Miele India Pvt. Ltd.
Ground Floor, Copia Corporate Suites
Plot No. 9, Jasola, New Delhi - 110025
Tel: 011-46 900 000, Fax: 011-46 900 001
E-mail: customercare@miele.in, Internet: www.miele.in

Ireland

Miele Ireland Ltd.
2024 Bianconi Avenue
Citywest Business Campus, Dublin 24
Tel: (01) 461 07 10, Fax: (01) 461 07 97
E-Mail: info@miele.ie, Internet: www.miele.ie

Manufacturer: Miele & Cie. KG

Carl-Miele-Straße 29, 33332 Gütersloh, Germany

Miele

Malaysia

Miele Sdn Bhd
Suite 12-2, Level 12
Menara Sapura Kencana Petroleum
Solaris Dutamas No. 1, Jalan Dutamas 1
50480 Kuala Lumpur, Malaysia
Phone: +603-6209-0288
Fax: +603-6205-3768

New Zealand

Miele New Zealand Limited
IRD 98 463 631
Level 2, 10 College Hill
Freemans Bay, Auckland 1011, NZ
Tel: 0800 464 353
Internet: www.miele.co.nz

Singapore

Miele Pte. Ltd.
163 Penang Road
04 - 03 Winsland House II
Singapore 238463
Tel: +65 6735 1191, Fax: +65 6735 1161
E-Mail: info@miele.com.sg
Internet: www.miele.sg

South Africa

Miele (Pty) Ltd
63 Peter Place, Bryanston 2194
P.O. Box 69434, Bryanston 2021
Tel: (011) 875 9000, Fax: (011) 875 9035
E-mail: info@miele.co.za
Internet: www.miele.co.za

United Arab Emirates

Miele Appliances Ltd.
Gold & Diamond Park
Office No. 6-217, Sheikh Zayed Road
P.O. Box 11 47 82 - Dubai
Tel. +971 4 3044 999
Fax. +971 4 3418 852
800-MIELE (64353)
E-Mail: info@miele.ae
Website: www.miele.ae

KM 6322 / KM 6323 / KM 6347 / KM 6348



en-GB

M.-Nr. 09 524 040 / 03