


Charlotte wardrobe

Stock number: 324 41203/324 41204

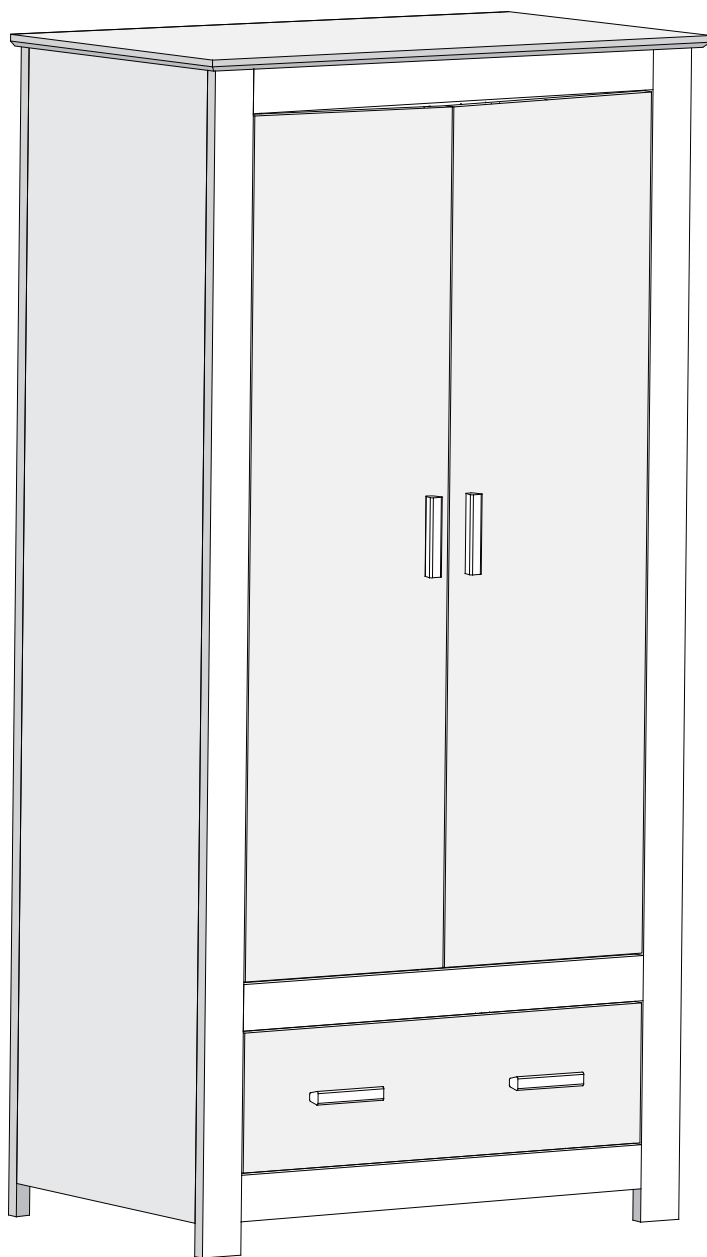


IMPORTANT RETAIN FOR FUTURE REFERENCE READ CAREFULLY

H180 W 91 D 52cm

Introduction Thank you for purchasing this Charlotte wardrobe.
Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.
This wardrobe is suitable for children in the range 3-12 years old.
Maximum loadability is 5kg for the drawer and 10kg for the wardrobe shelf.

Tools required

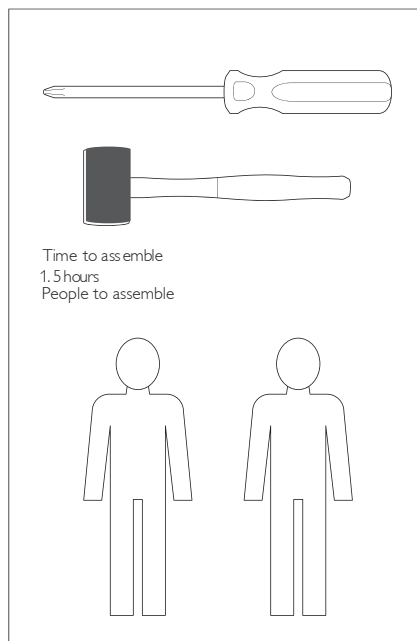

Important safety information

⚠ Warning: In order to prevent overturning, this product must be used with the wall attachment device provided.

Serious or fatal crushing injuries can occur from furniture tipping over.
To help prevent toppling over, please observe the following:

1. Use the wall attachment device provided
2. Never allow children to climb or hang on drawers, doors or shelves.
3. Place heaviest items in the lower drawers or shelves.
4. Never open more than one drawer at a time.

An attachment device is provided with your product; however, you will need to source suitable fixings for your wall type. If in doubt, please consult a qualified tradesperson.

Always ensure the wall to be drilled is free from hidden electrical wires, water and gas pipes.

Warnings







- ⚠ The product should only be used on firm, level ground.
- ⚠ Keep small parts out of reach of children.
- ⚠ Ensure the product is fully assembled as illustrated before use.
- ⚠ Care should be taken that no screws are loose because a child could trap parts of their body, or clothing (e.g. strings, necklaces, ribbons, dummies, etc) which could pose a risk of strangulation.
- ⚠ Ensure that the wall strap is used to securely attach the wardrobe to the wall to prevent tipping.
- ⚠ Any additional or replacement parts must only be obtained from John Lewis & Partners.
- ⚠ During assembly children should be kept away from the product due to possible risk of injury.
- ⚠ Do not use this item if any components are missing or damaged.

Do's


- ✓ Check the pack and make sure you have all the parts listed.
- ✓ Check all screws or bolts are tightened and inspect regularly.
- ✓ Make sure the legs remain in contact with the ground at all times.

Don'ts

- ✗ Do not over tighten screws or bolts.
- ✗ Do not stand on the product.
- ✗ Do not use power tools to construct as over tightening and panel failure may occur.

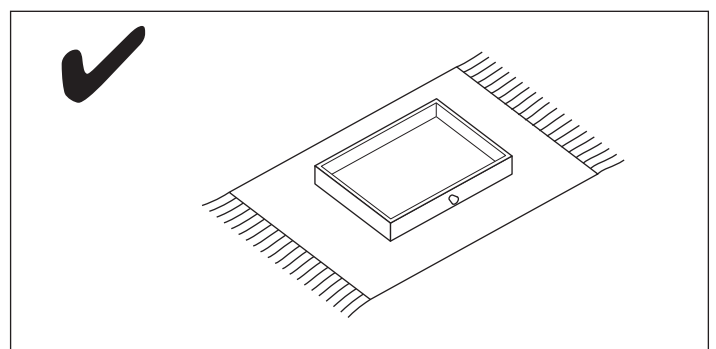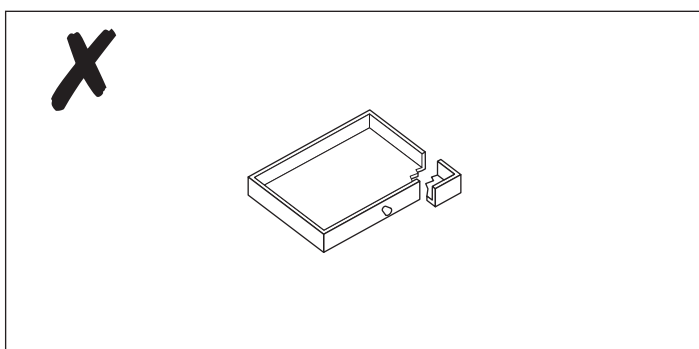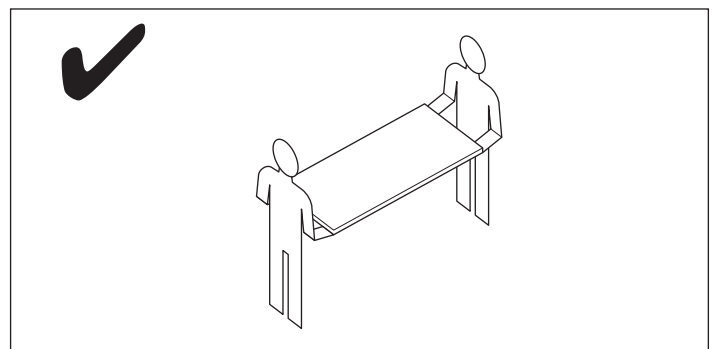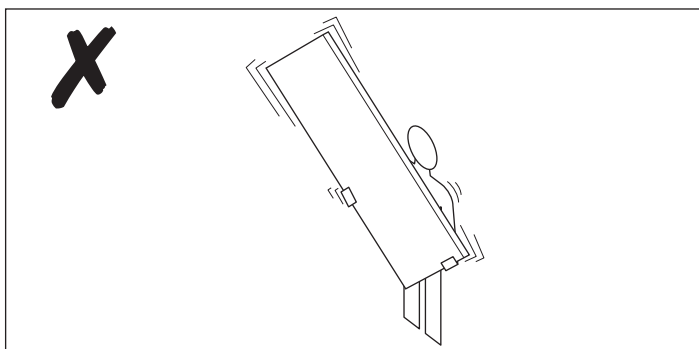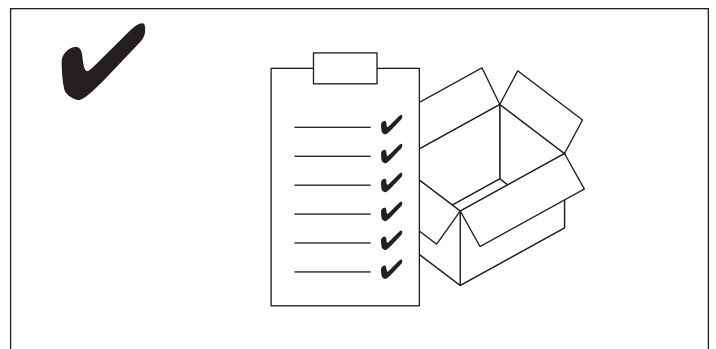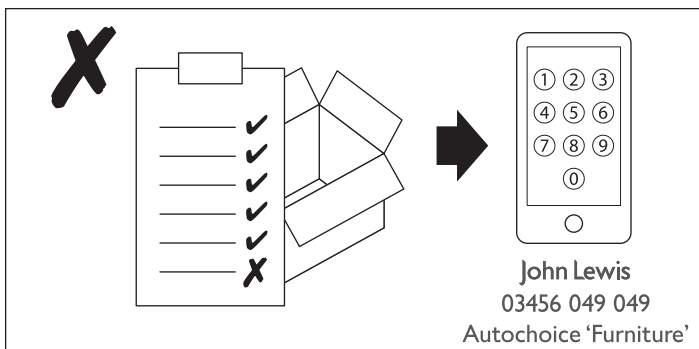

Your wardrobe

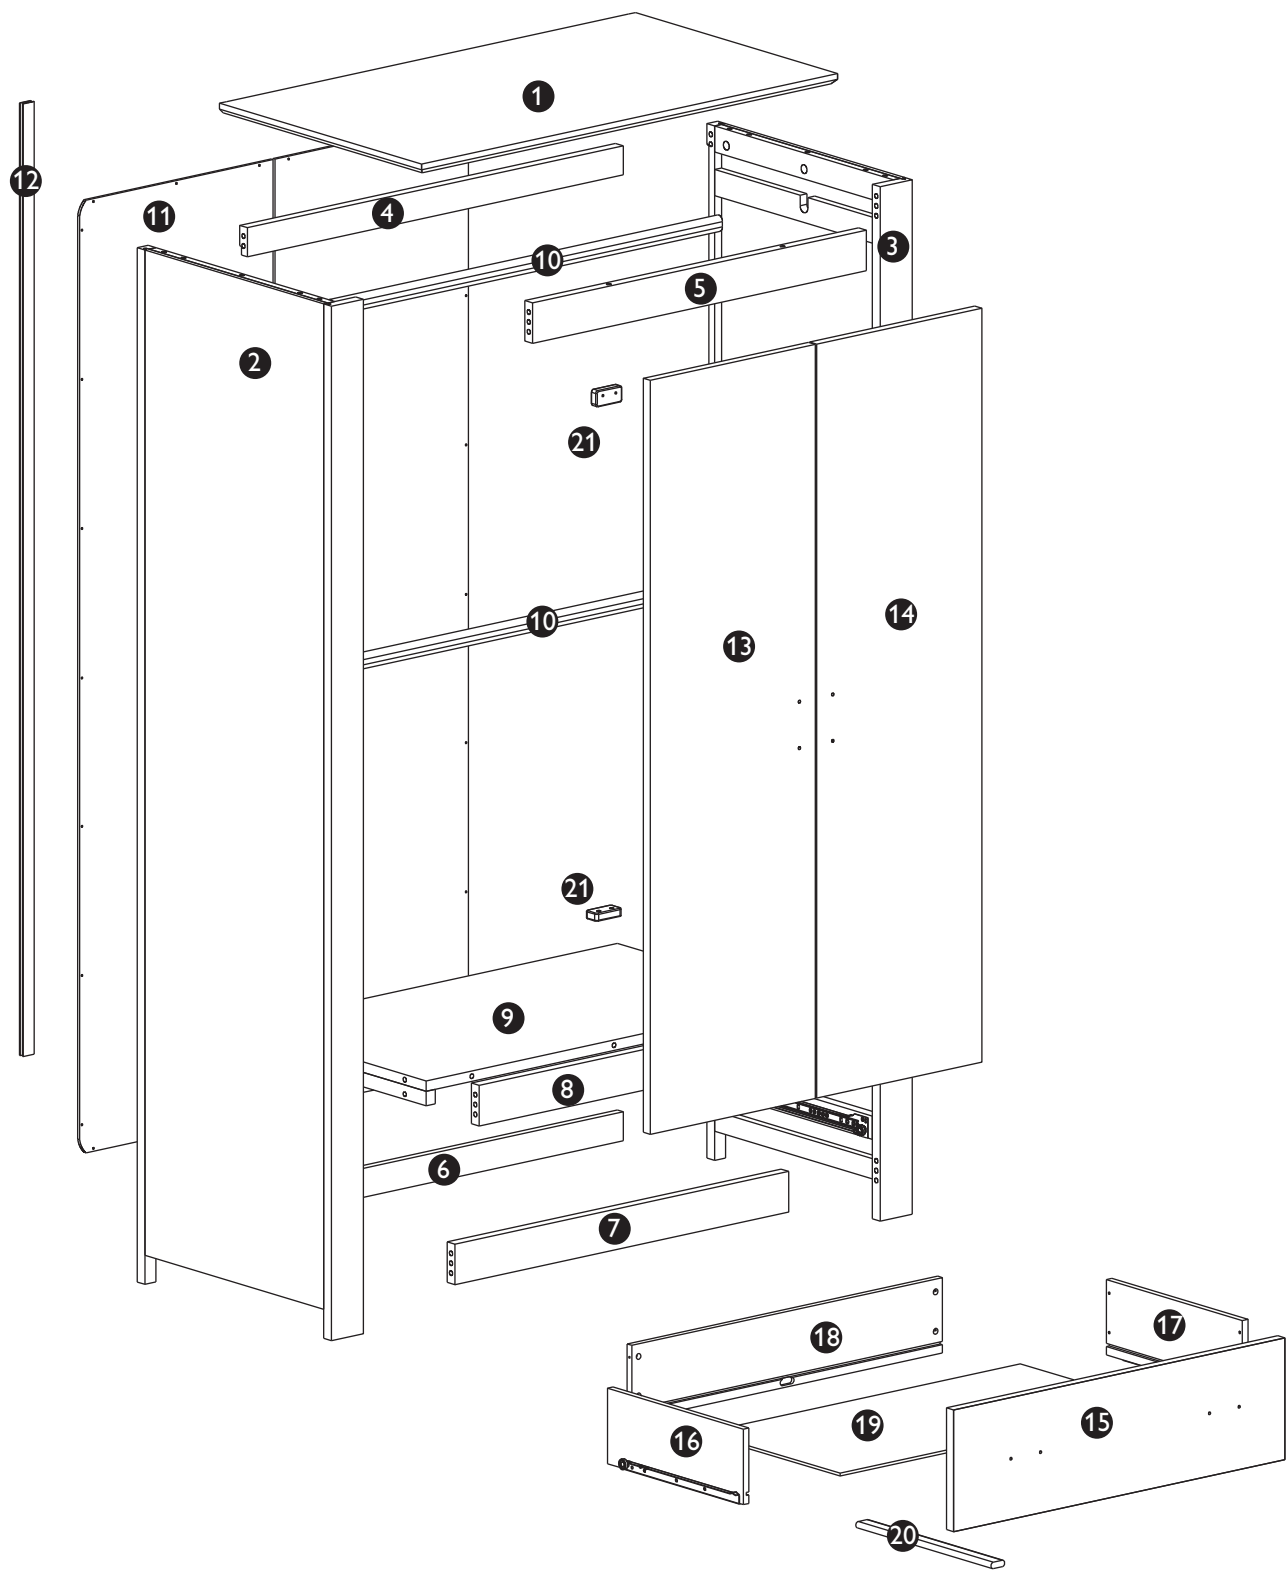

Your wardrobe

Ref	Description	Dimensions	Qty
①	Top panel	910mm x 520mm x 18mm	1
②	L/H side panel	1782mm x 500mm x 80mm	1
③	R/H side panel	1782mm x 500mm x 80mm	1
④	Top Back Rail	822mm x 50mm x 20mm	1
⑤	Top Front Rail	730mm x 70mm x 20mm	1
⑥	Bottom Back Rail	822mm x 50mm x 20mm	1
⑦	Bottom Front Rail	730mm x 70mm x 20mm	1
⑧	Middler layer Rail	730mm x 70mm x 20mm	1
⑨	Middle layer	822mm x 475mm x 43mm	1
⑩	Clothes Rail	848mm x 28mm x 19mm	2
⑪	Back Panel	1641mm x 423mm x 5mm	2
⑫	Back Divider	1636mm x 15mm x 7mm	1
⑬	L/H Door panel	1299mm x 361mm x 18mm	1
⑭	R/H Door panel	1299mm x 361mm x 18mm	1
⑮	Drawer Front	725mm x 210mm x 18mm	1
⑯	L/H drawer side panel	352mm x 128mm x 12mm	1
⑰	R/H drawer side panel	352mm x 128mm x 12mm	1
⑱	Drawer Back	681mm x 128mm x 12mm	1
⑲	Drawer Base	691mm x 347mm x 5mm	1
⑳	Drawer Brace	347mm x 35mm x 11mm	1
㉑	Door Stop	60mm x 30mm x 15mm	2

Internal dimensions

Stock number : 324 41203/324 41204


Wardrobe overall size: H180 W91 D52 cm

Drawer size: H21 W72.5 D39cm













Door size: H1.8 W36.1 D129.9cm

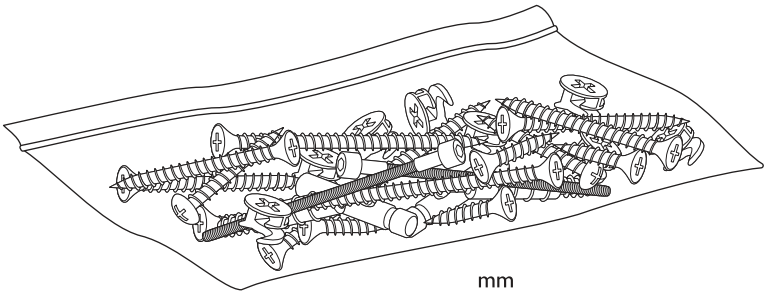Middle layer size: H4.3 W82.2 D47.5cm




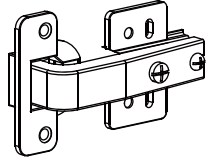


Fixtures and fittings



Fixtures and fittings
supplied (actual size)

Ref	Description	Dimensions	Qty	mm
				0 10 20 30 40 50 60 70
A	Cam heads	15mm x 11mm	11	
B	Cam rods	5mm x 35mm	11	
C	Wooden dowels	8mm x 30mm	24	
D	Screw	4.0mm x 45mm	4	
E	Screw	3.5mm x 25mm	8	
F	Screw	3.5mm x 16mm	28	
G	Allen head screw	6mm x 40mm	10	
R	Allen head screw	6mm x 25mm	4	
H	Knob Screw	4mm x 26mm	8	
I	Plastic Barrel Nut	9mm x 9mm	4	
P	Screw	3.5mm x 16mm	36	
U	Screw	4.2mm x 18mm	4	

Fixtures and fittings
supplied (not actual size)

Ref	Description	Dimensions	Qty	
J	Allen key M4	M4 x 106mm	1	
K	Crescent Washer	25mm x 15mm x 6mm	10	
M	Handle	120mm x 21mm x 21mm	4	
N	Hinge	96mm x 62mm x 22mm	6	
S	Bracket	48mm x 21mm x 10mm	4	
T	Nylon strap	250mm x 4.8mm x 1.3mm	2	



Product assembly

Charlotte wardrobe

Step 1

Parts, fittings and tools



N C P 2 3

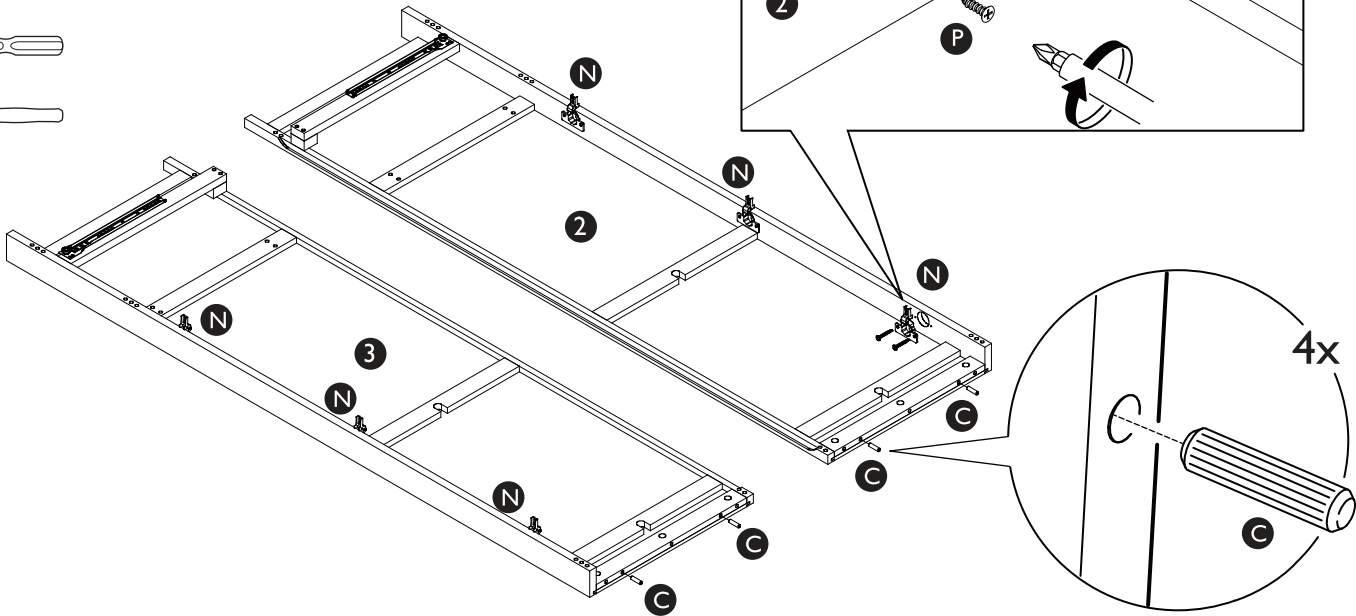

Step 2

Parts, fittings and tools



8 9 A B

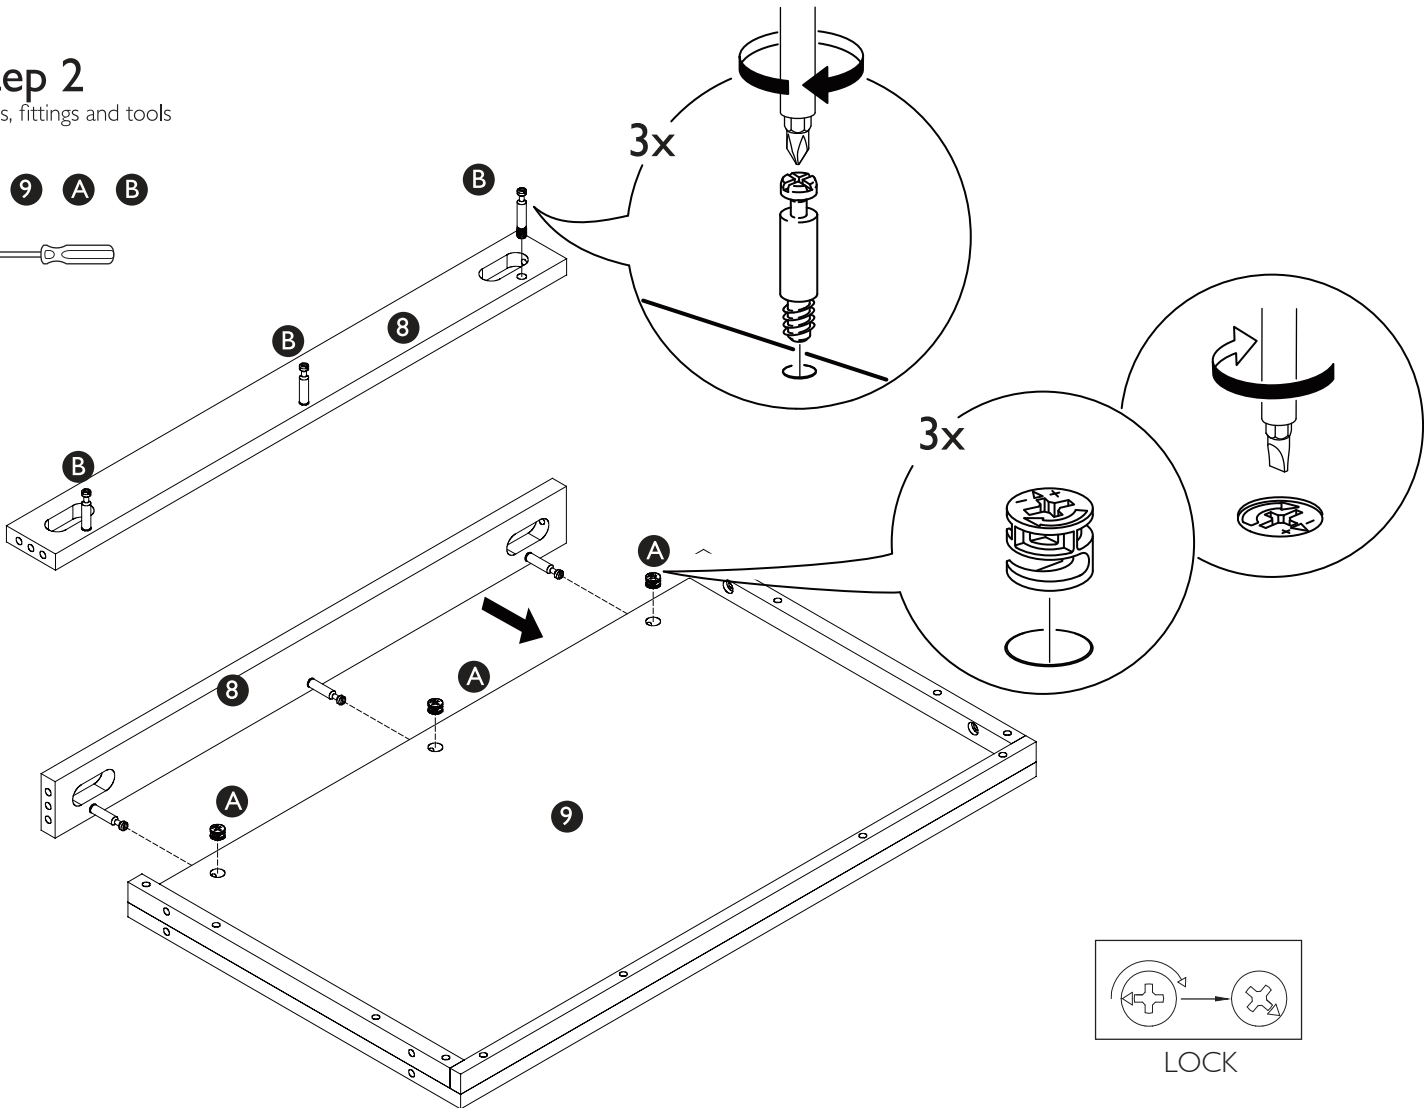

Step 3

Parts, fittings and tools

9 5 21 E

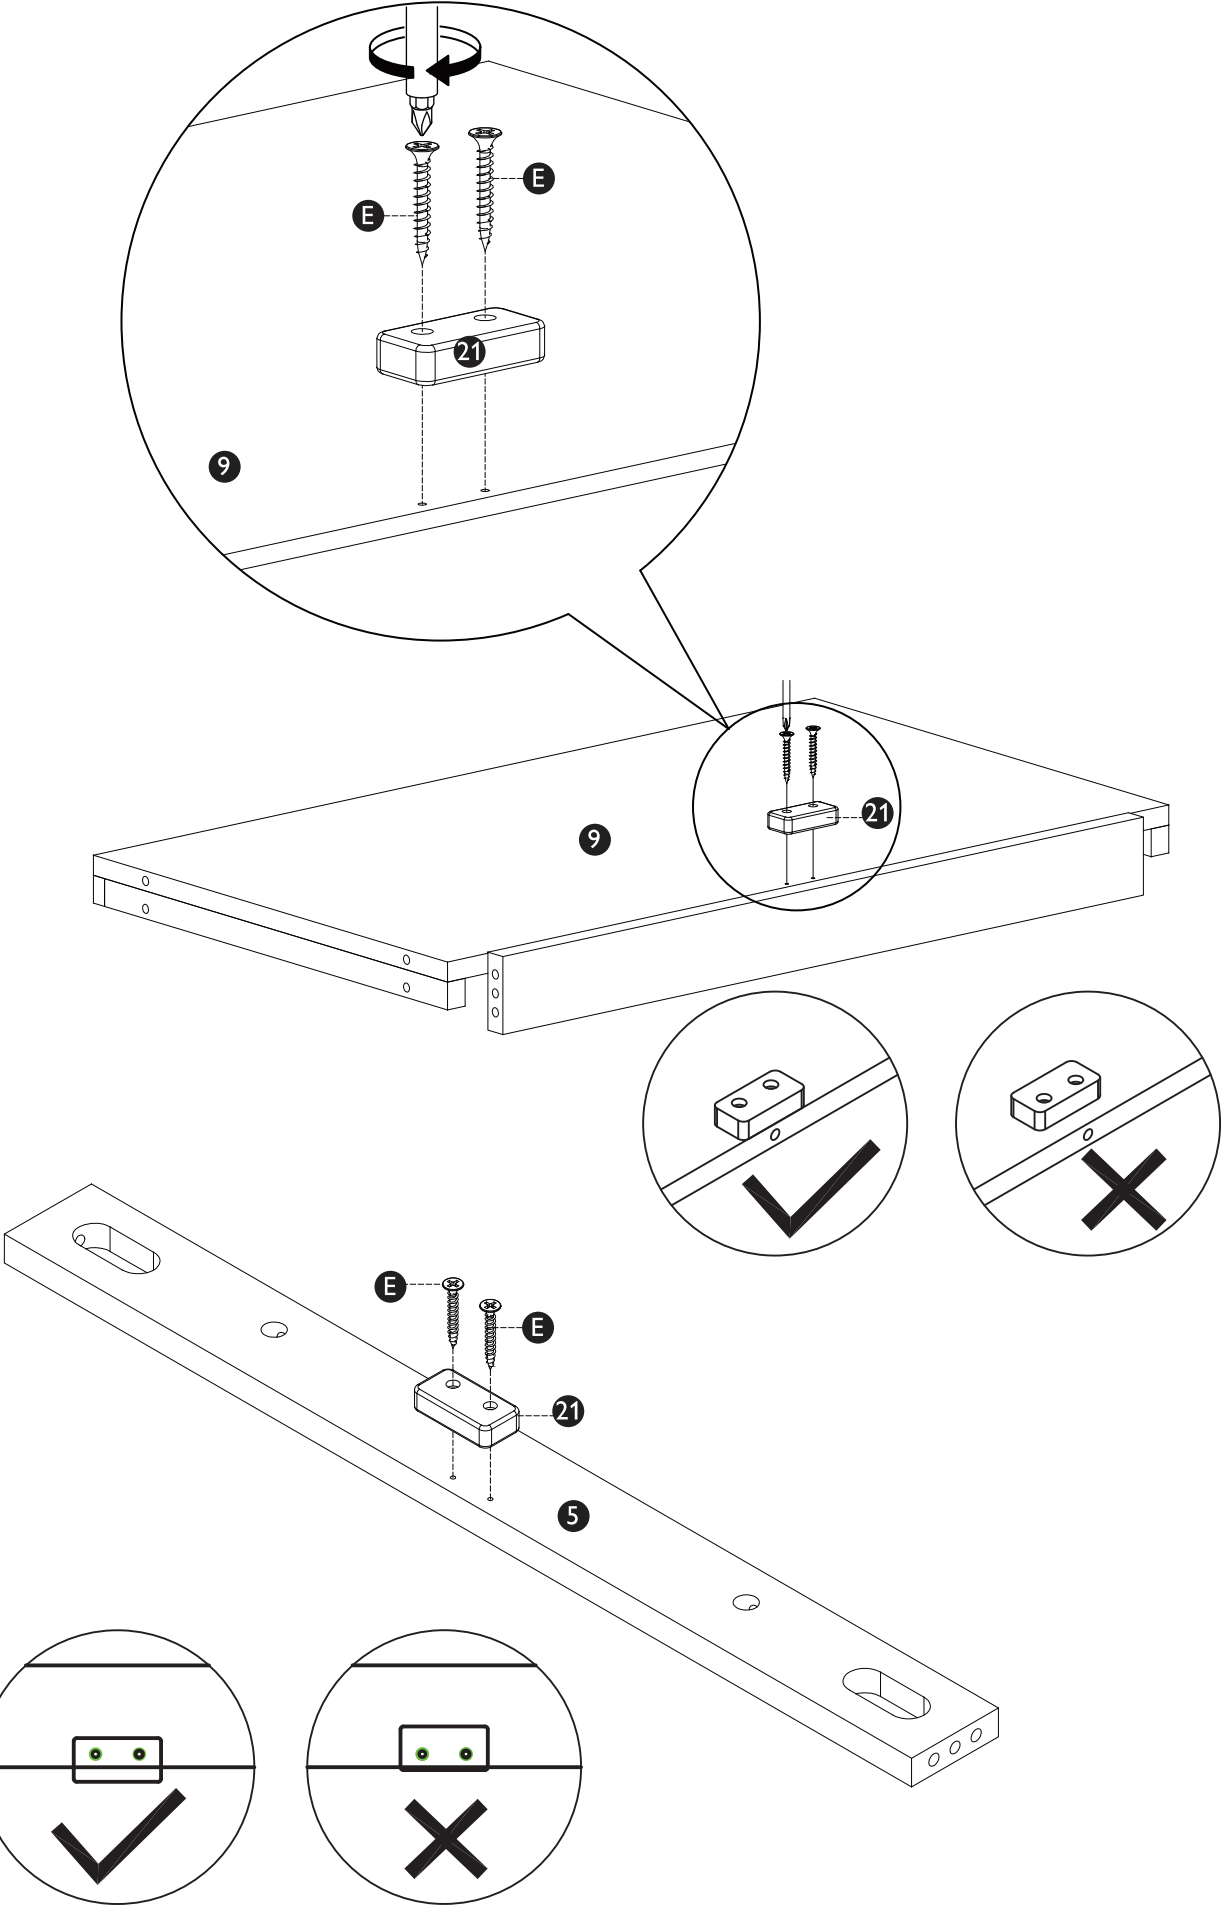


Step 4

Parts, fittings and tools

C G R K J


2 4 5 6 7 8 9

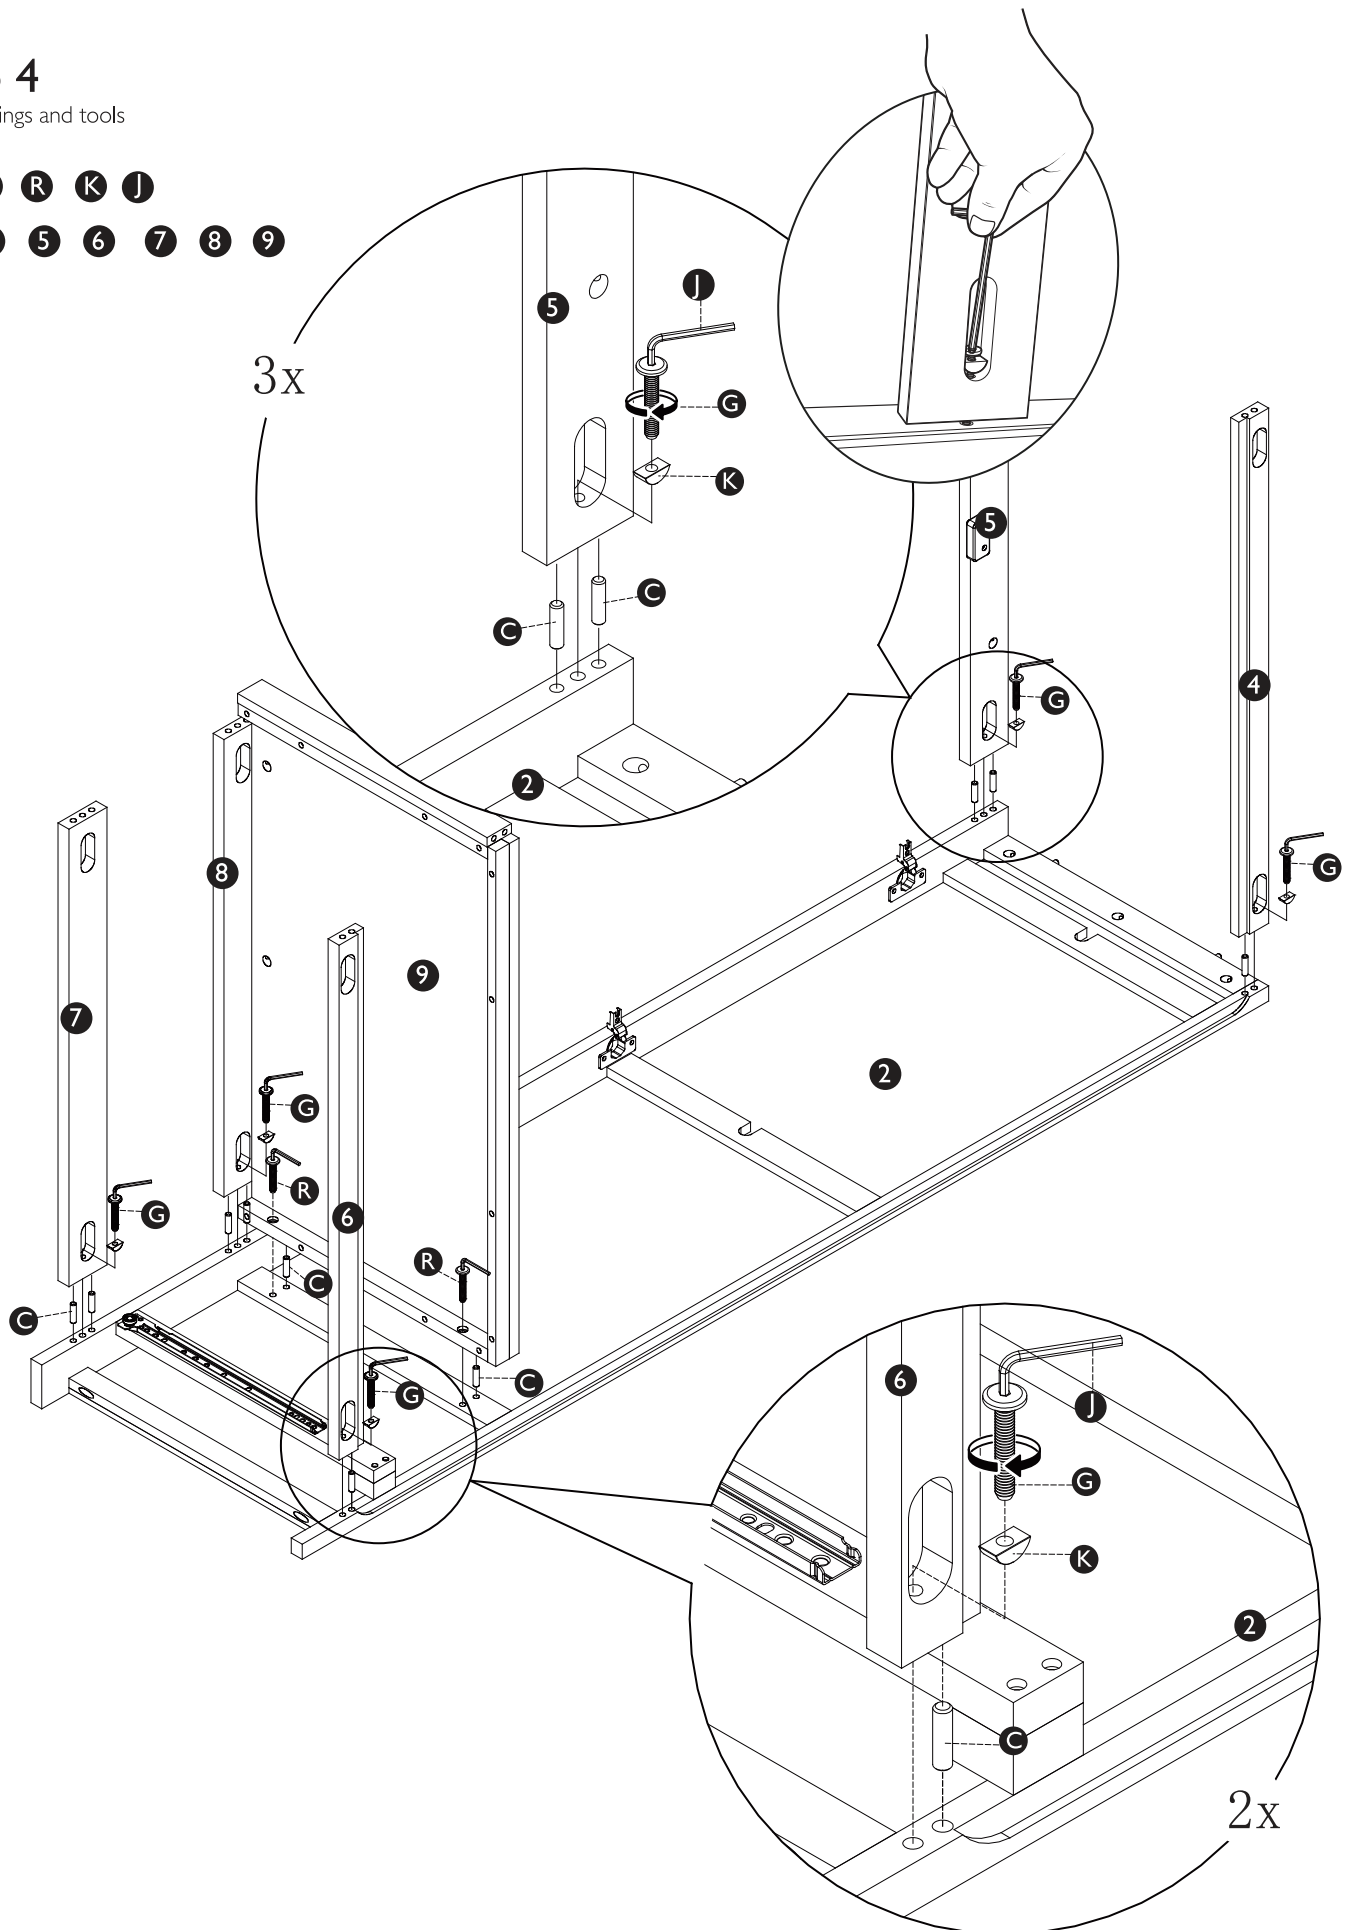

Step 5


Parts, fittings and tools

- C G R K J
- 2 4 5 6
- 7 8 9 3

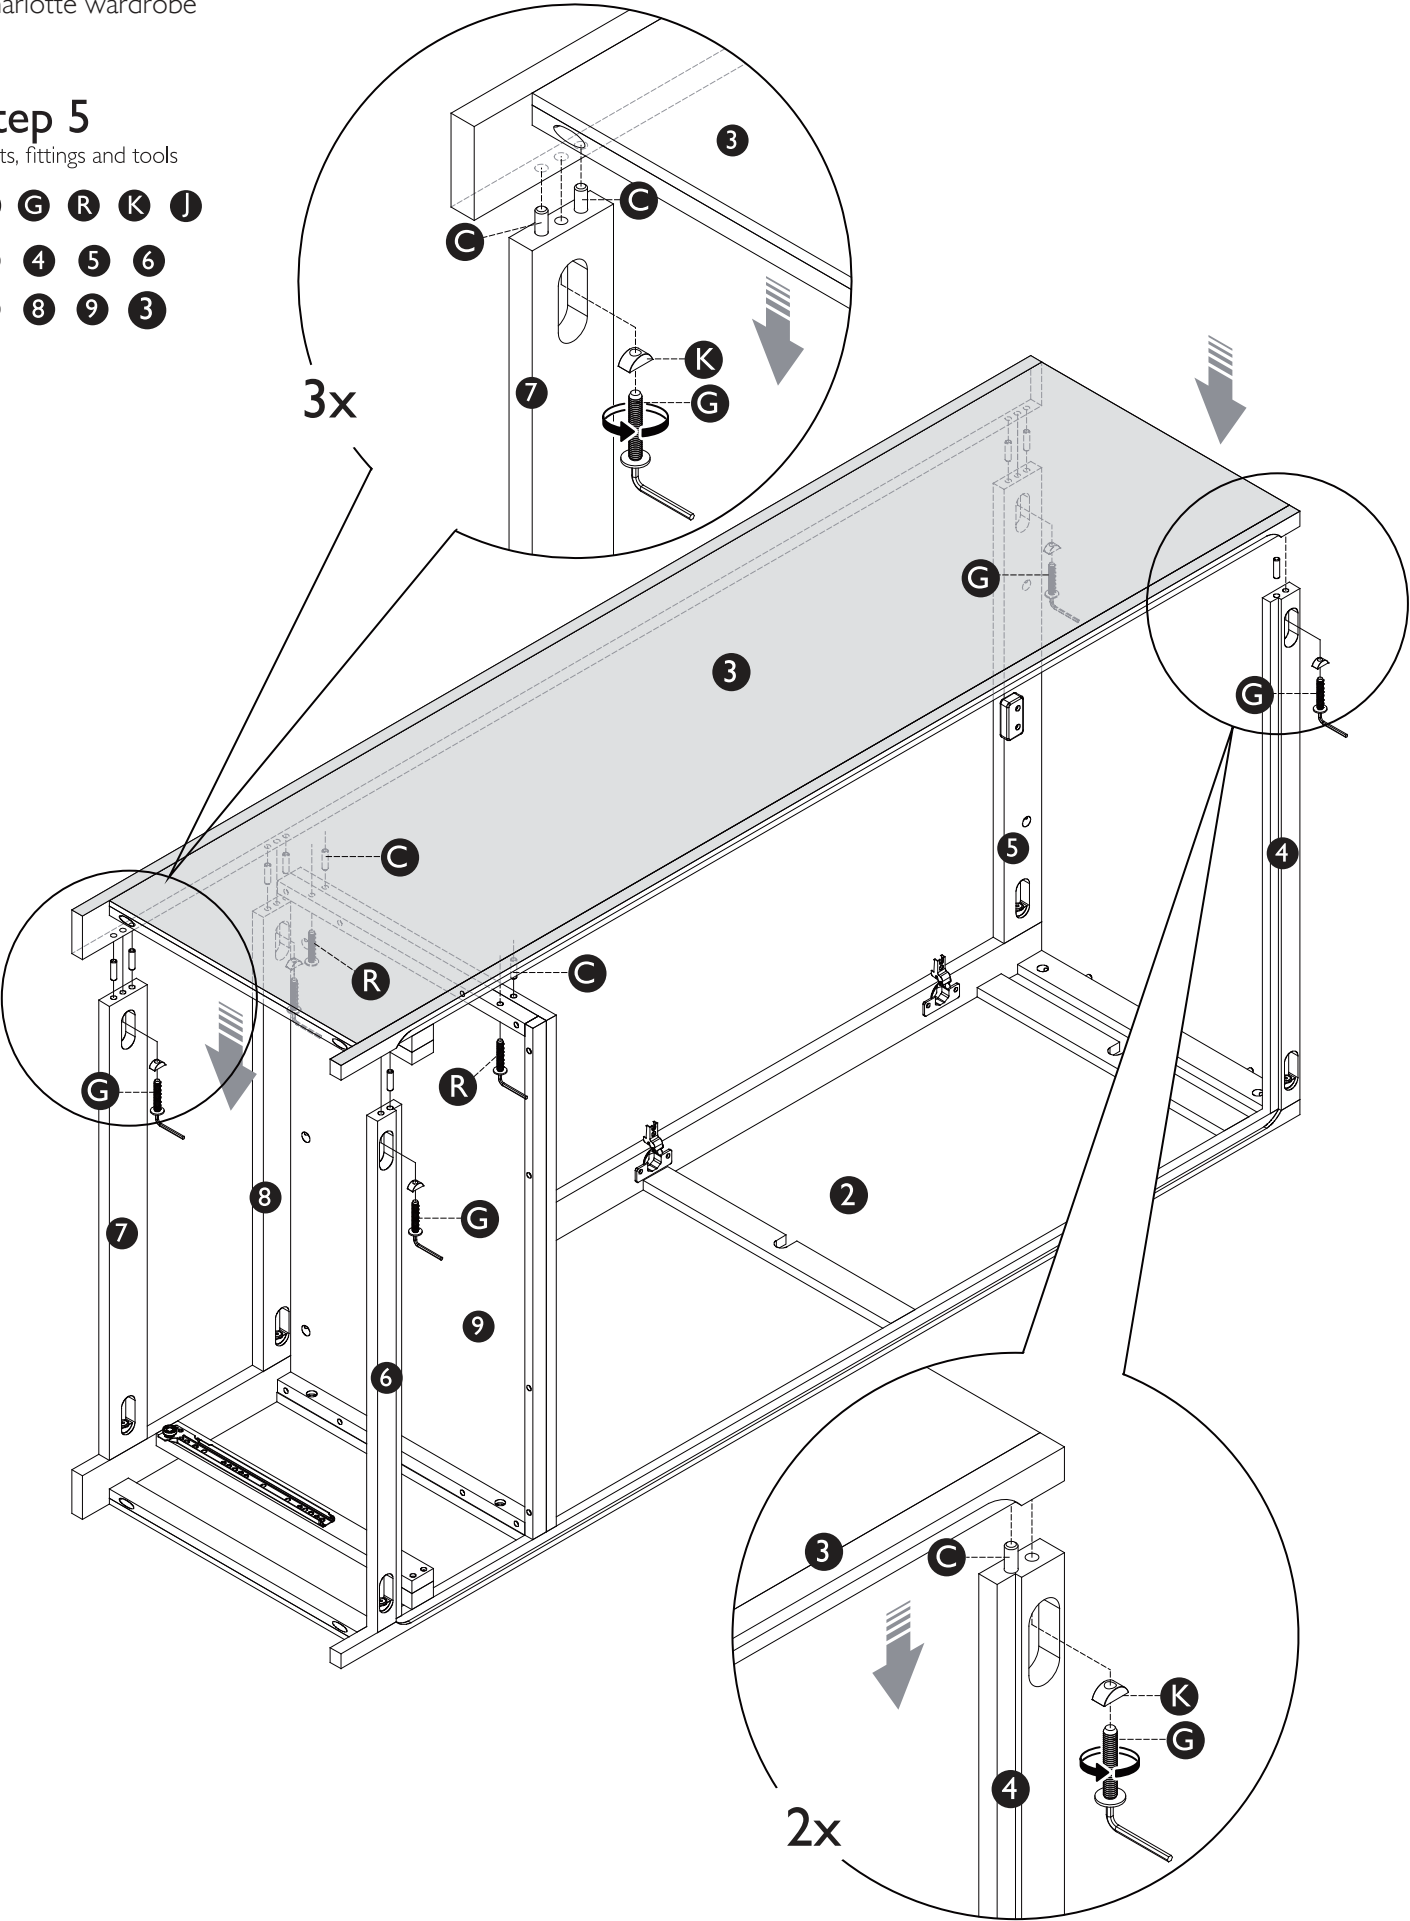


Step 6

Parts, fittings and tools

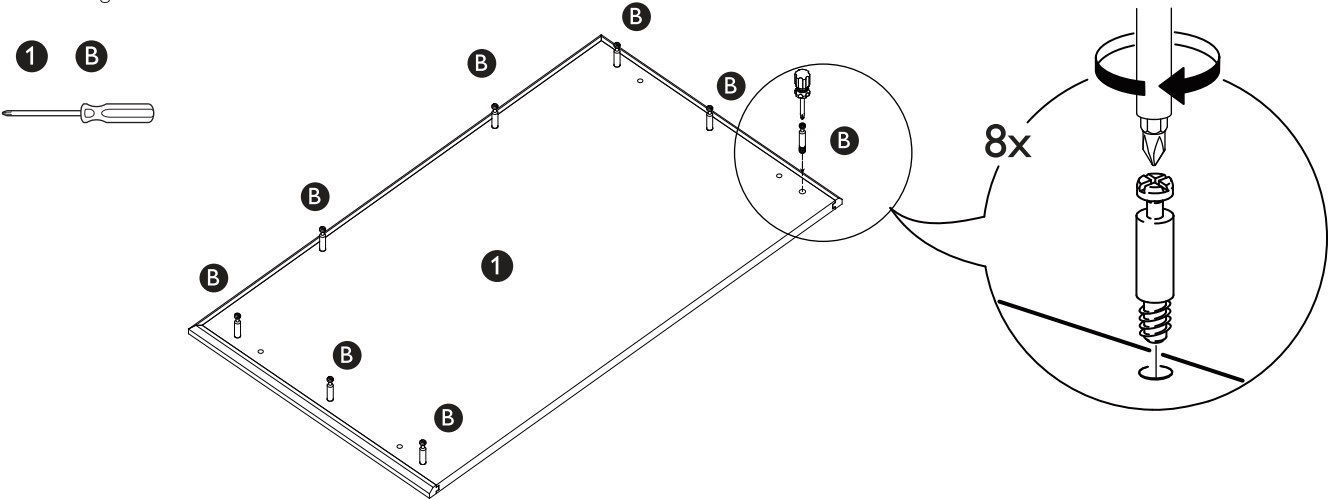

Step 7



Parts, fittings and tools

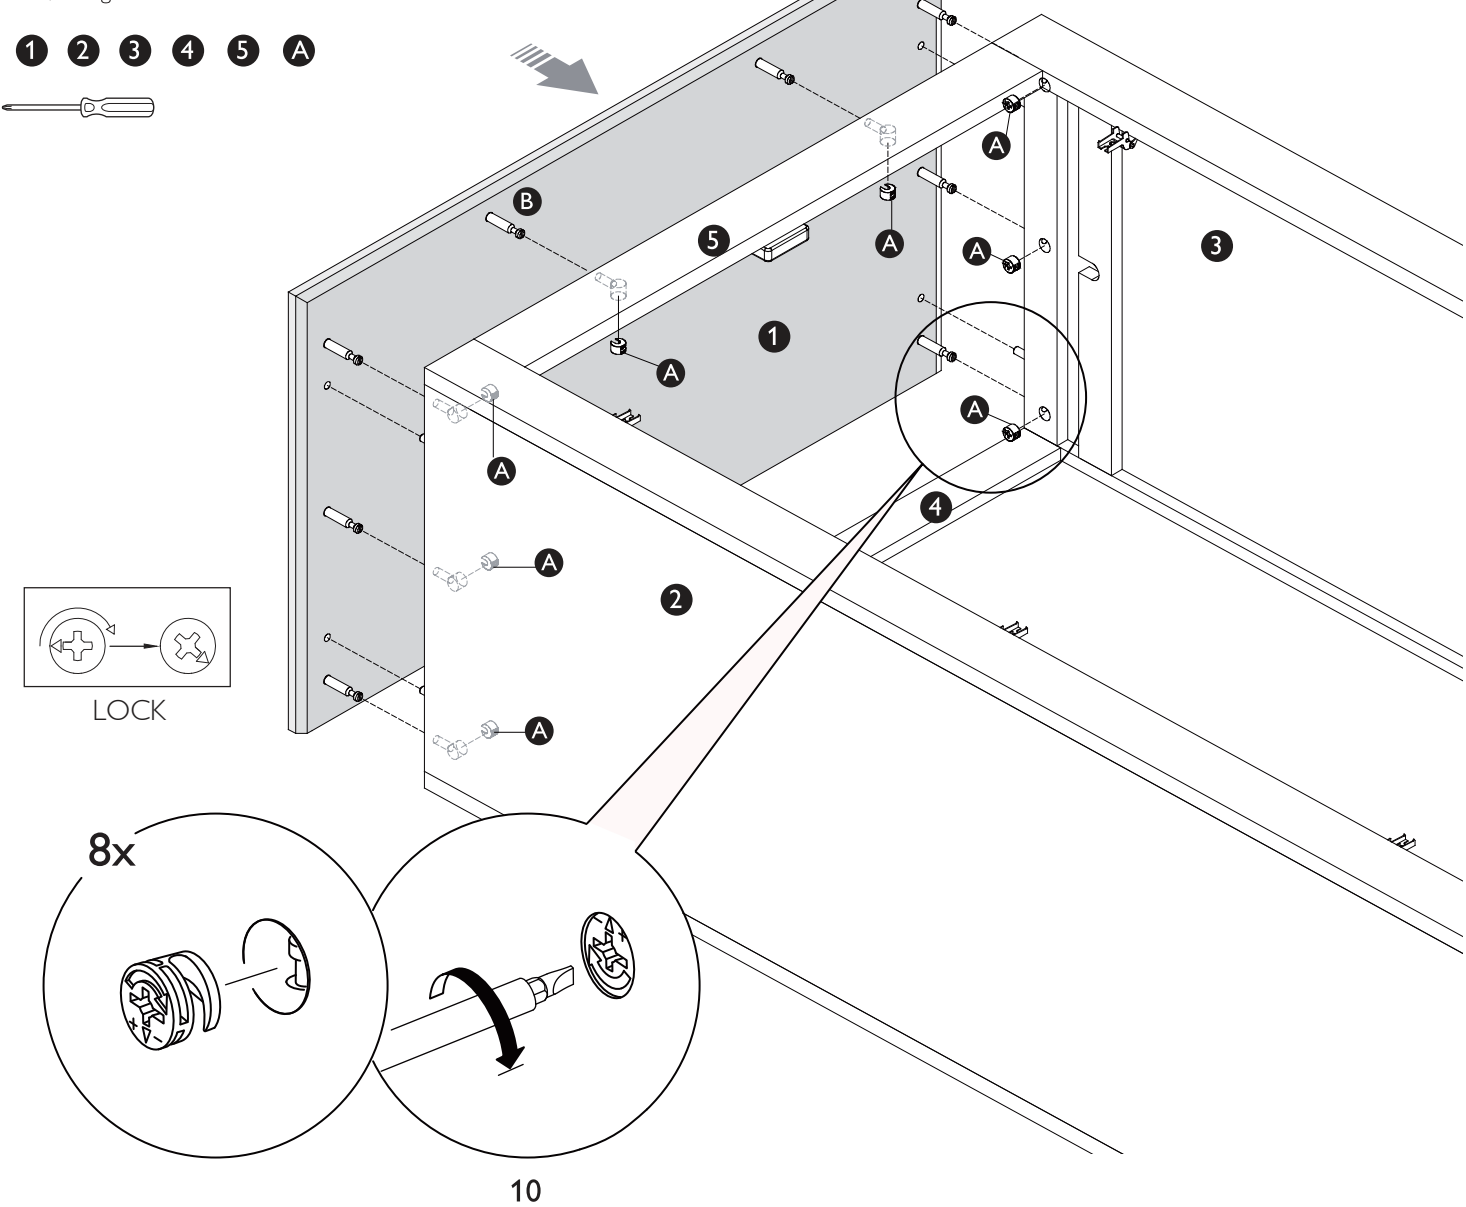

Step 8

Parts, fittings and tools


- 1 2 3 6 11 12 F

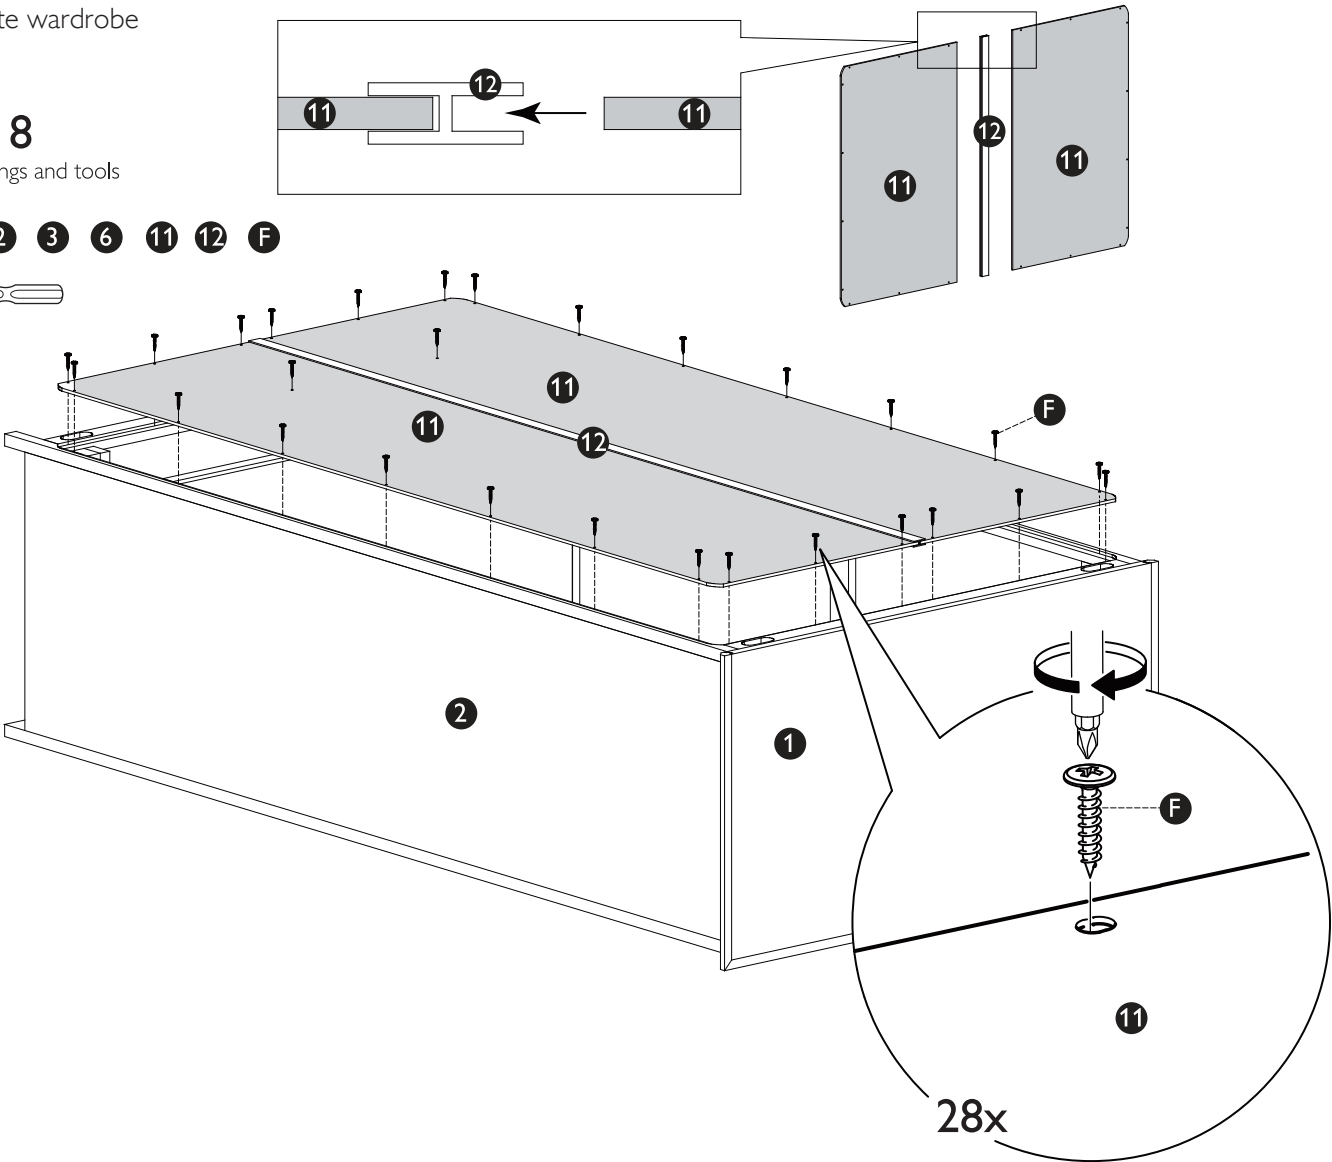

Step 9

Parts, fittings and tools






- 10

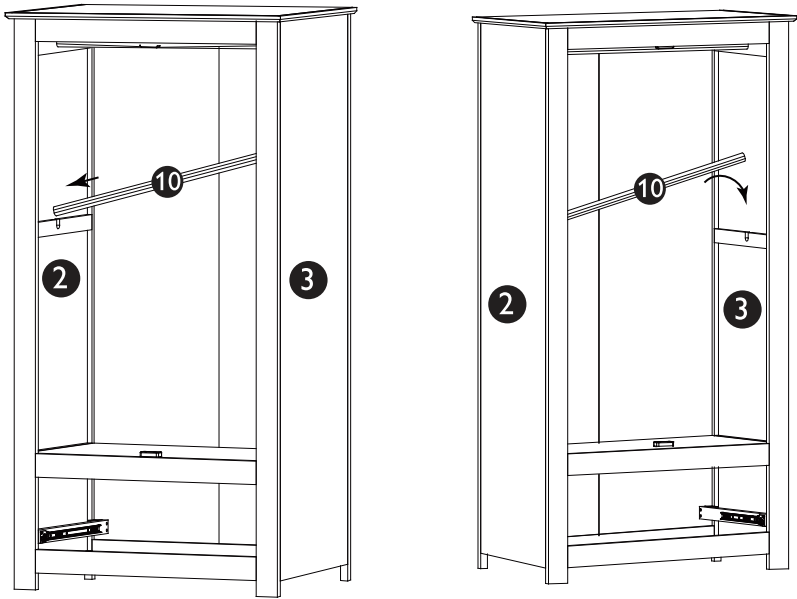

Step 10

Parts, fittings and tools

P 13 14

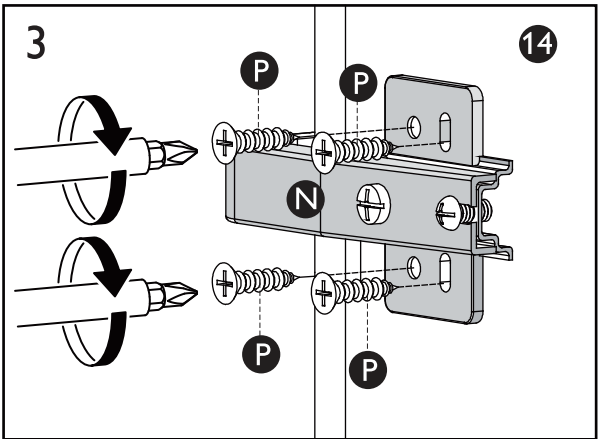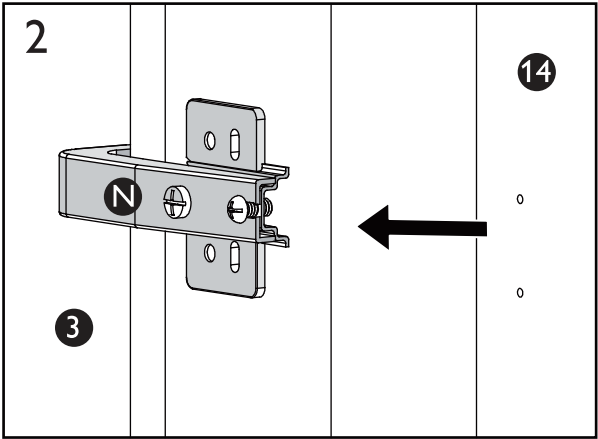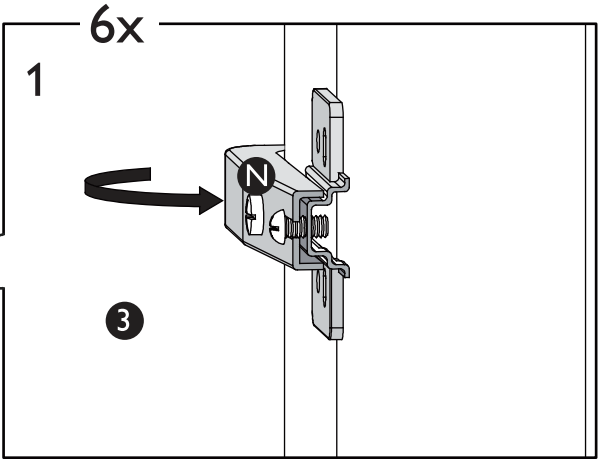
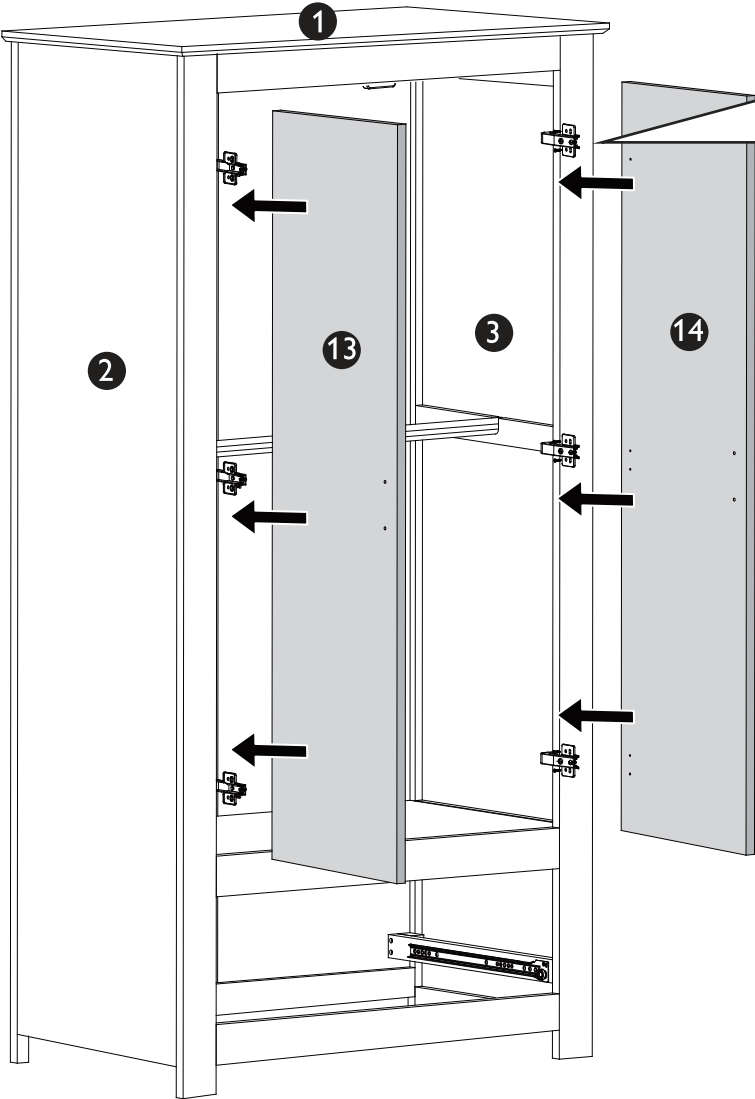



Step 11

Parts, fittings and tools

15 16 17 18 19 20



D E H I M

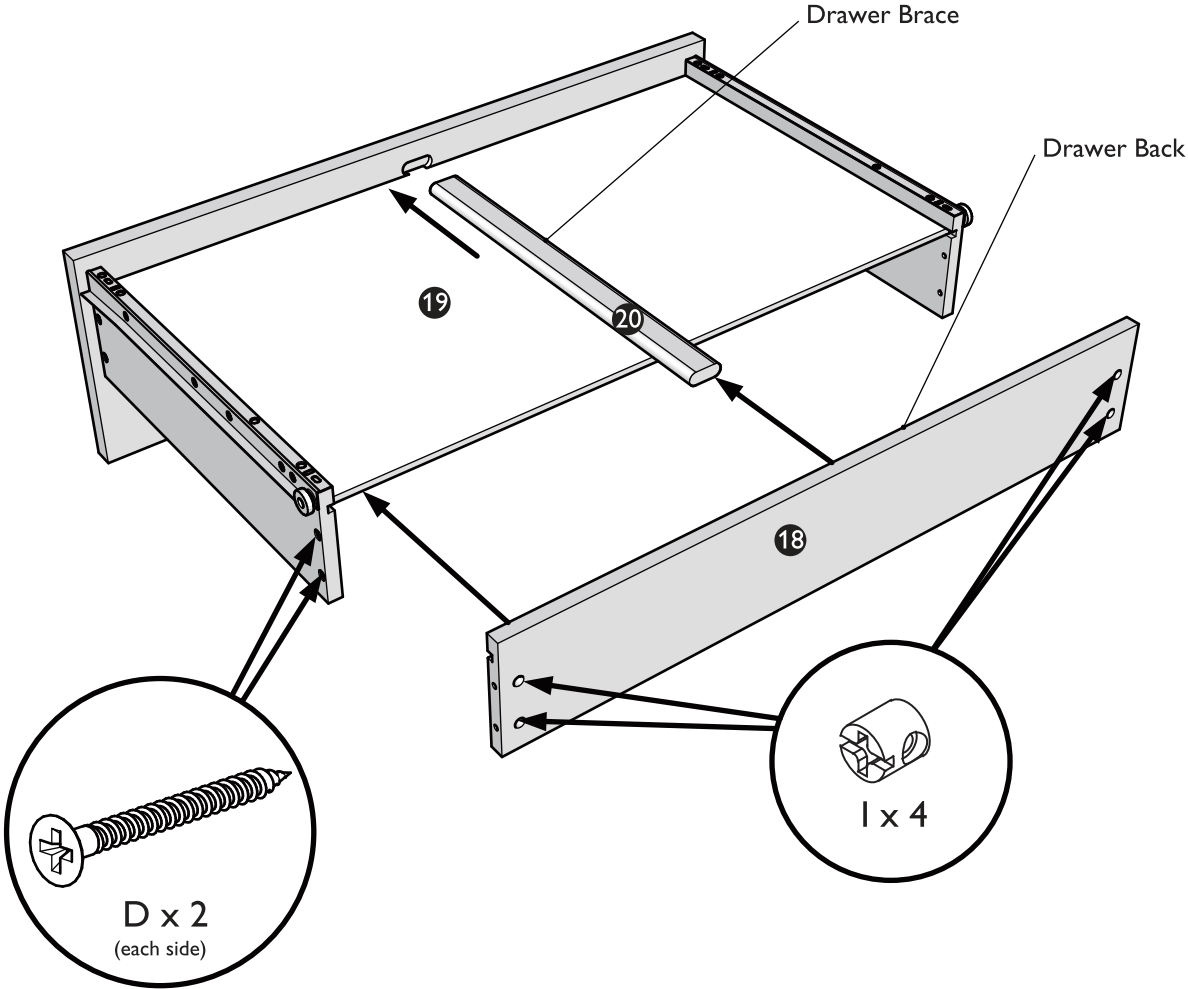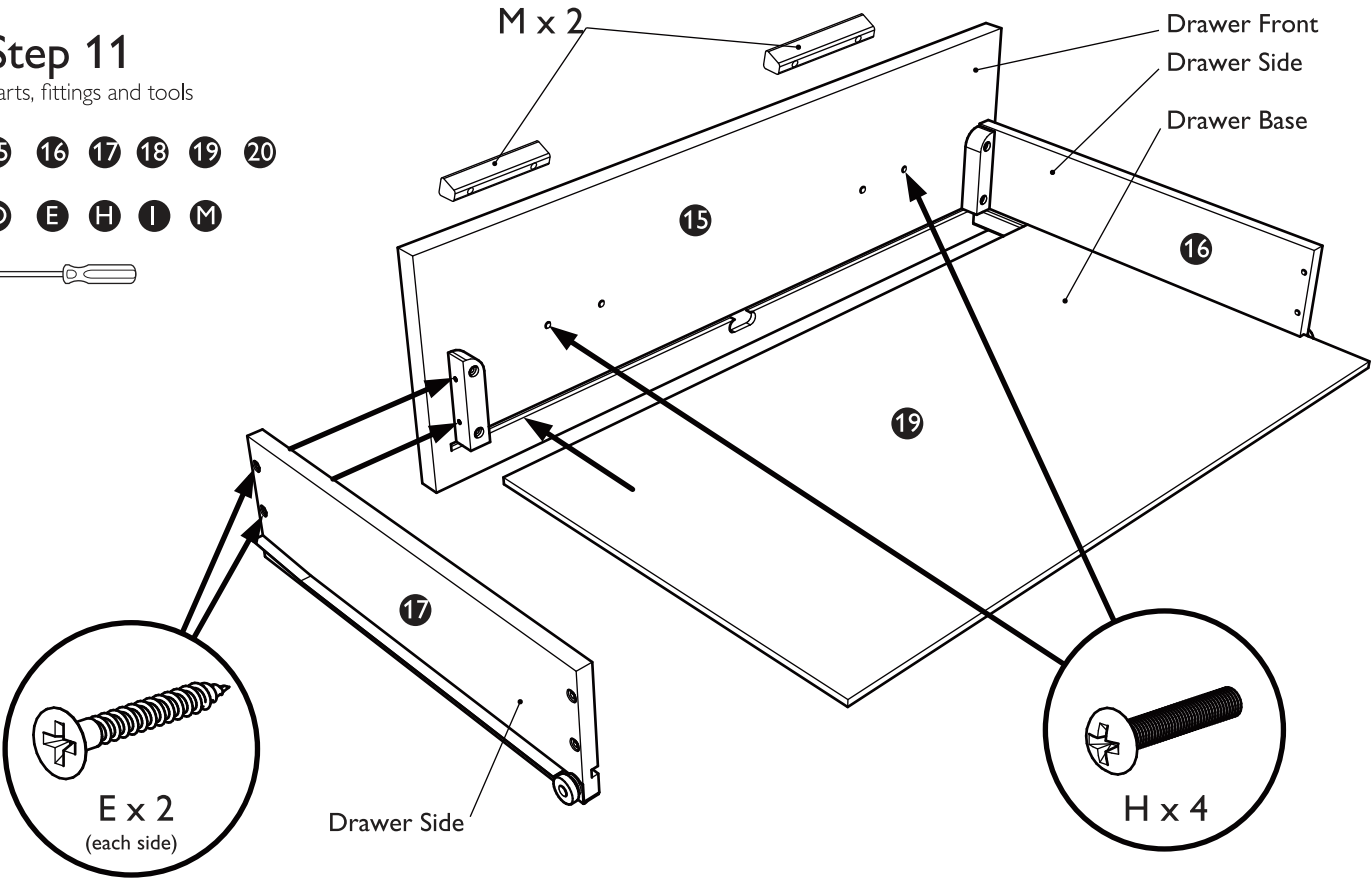







Step 12

Parts and fittings


M H

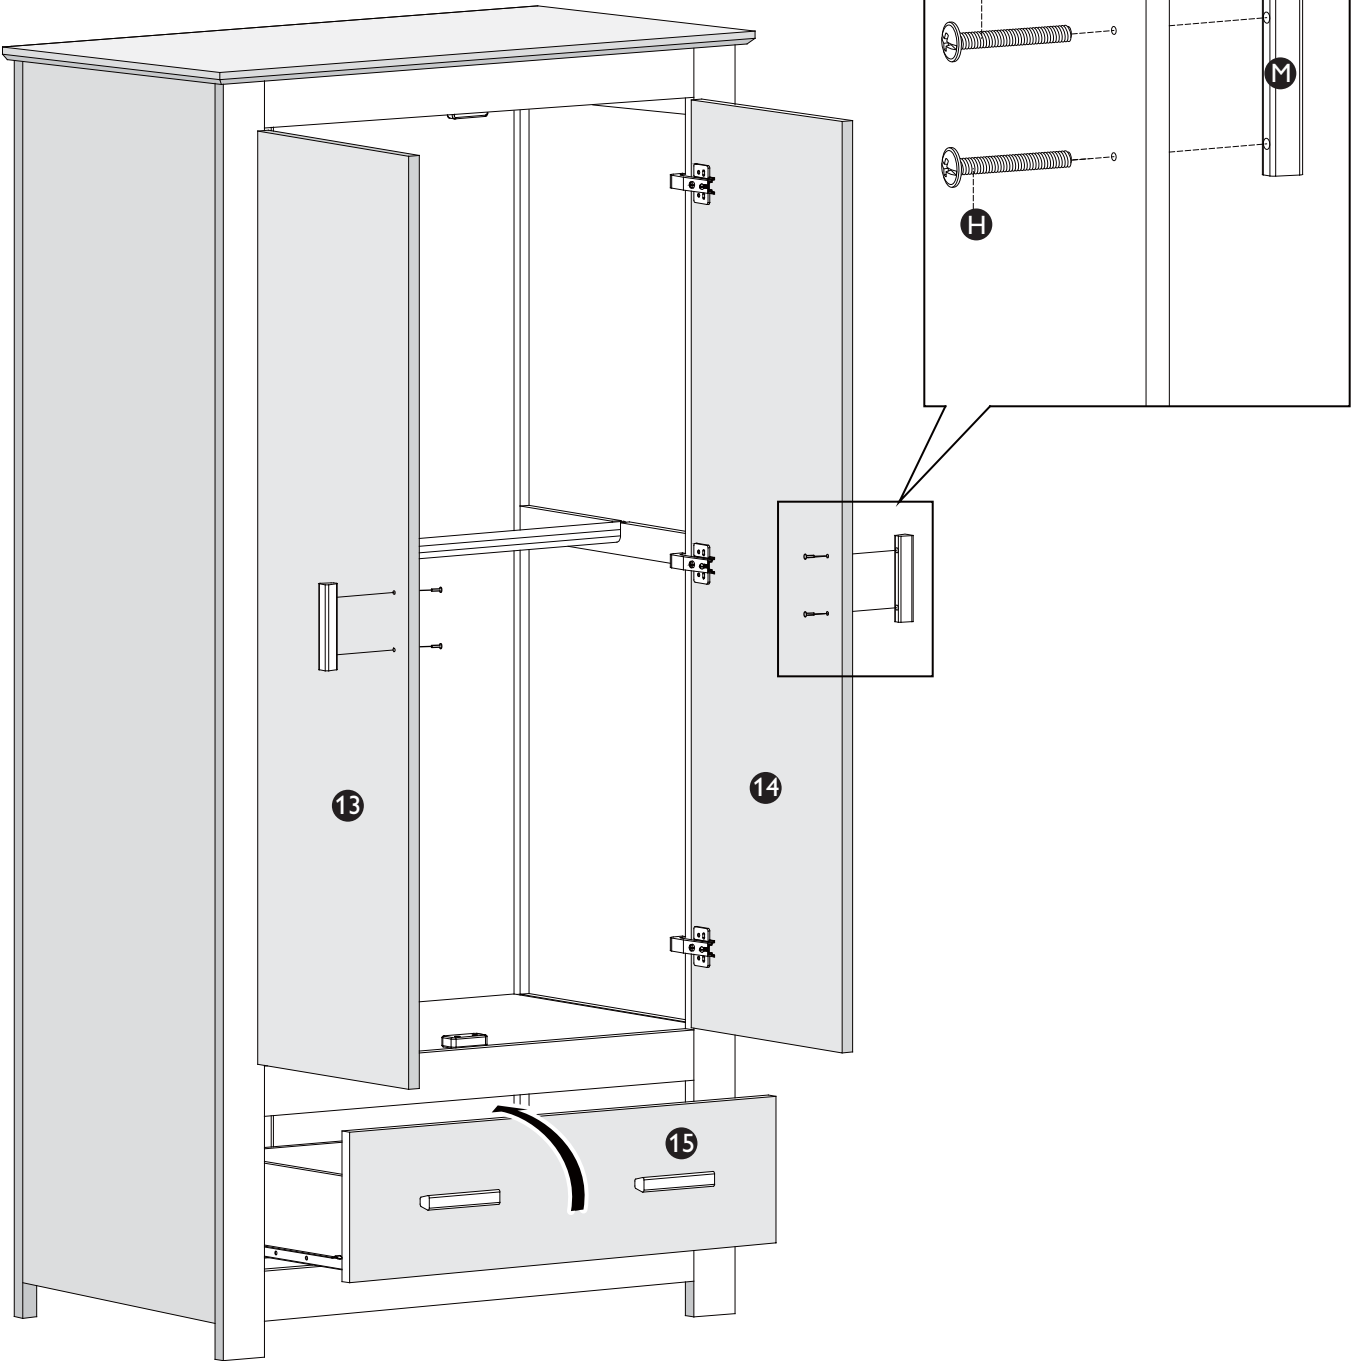

Step 13

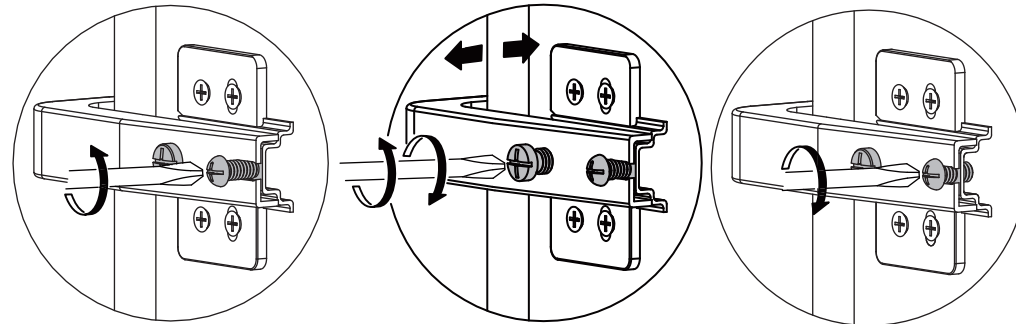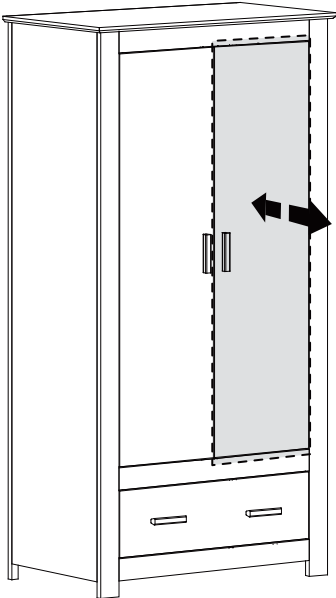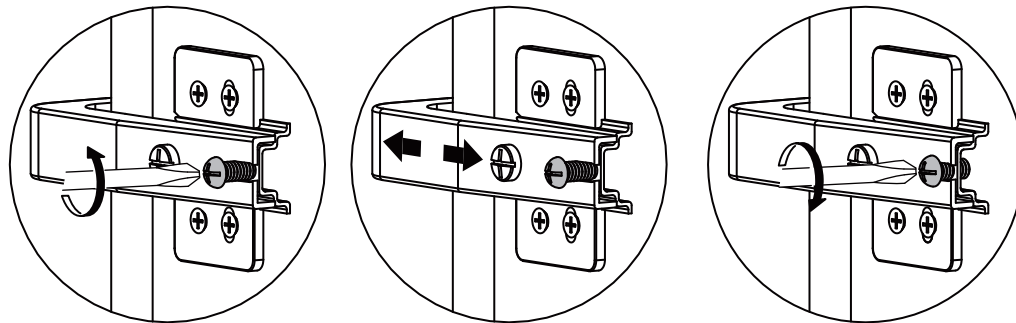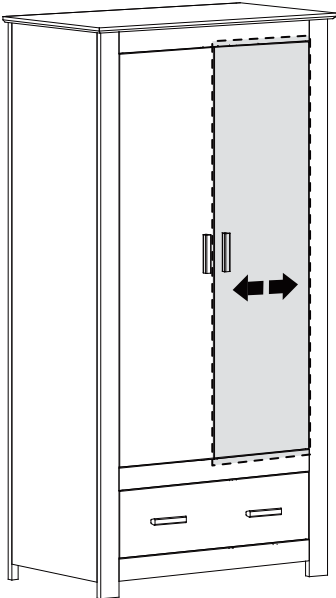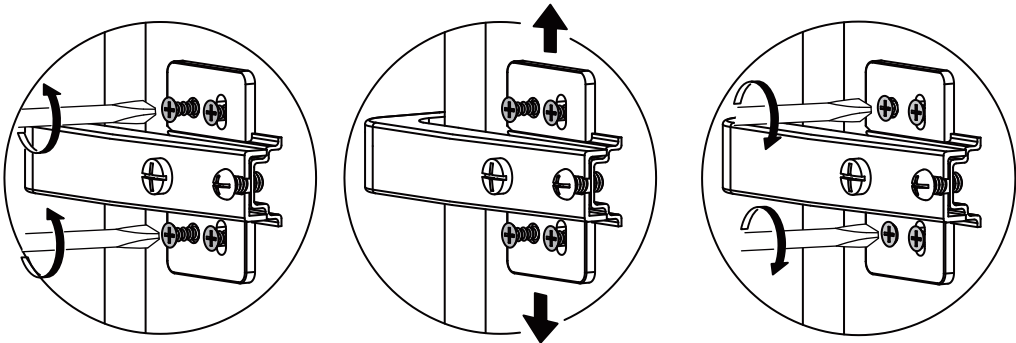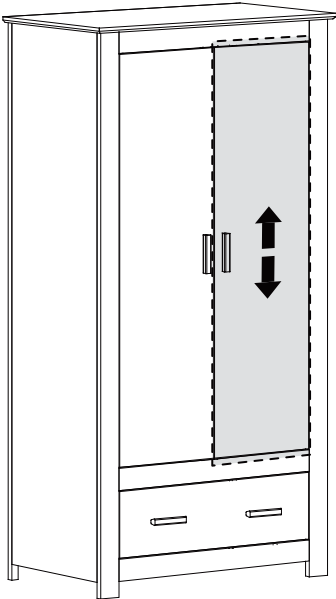







Step 14

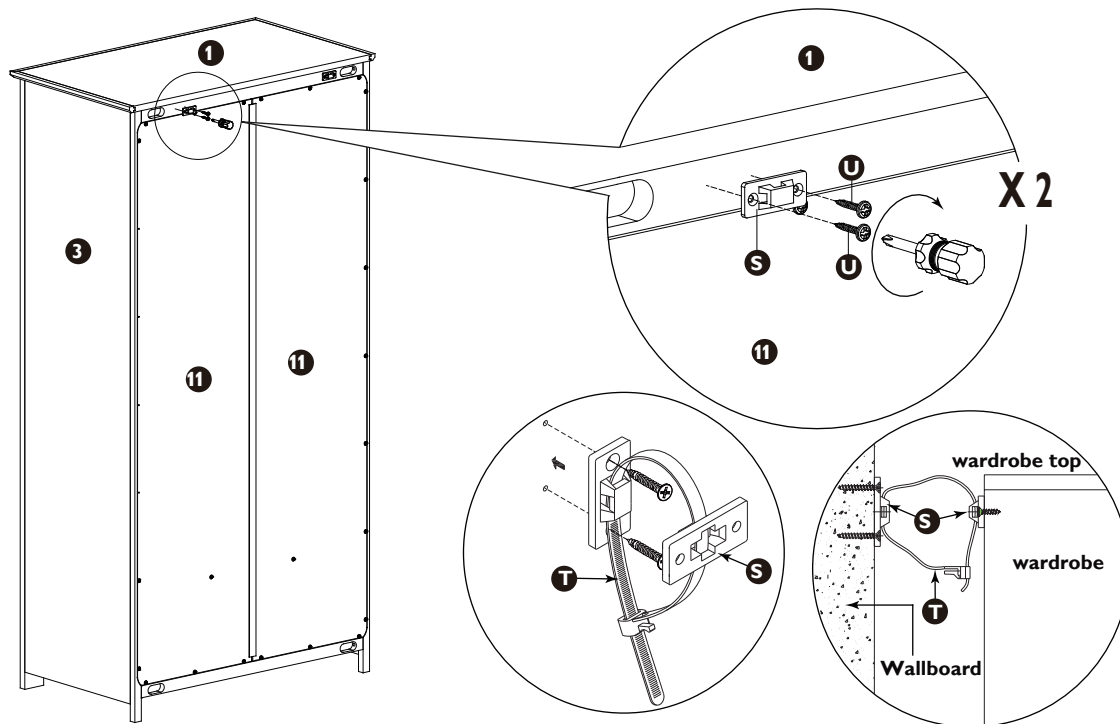

Wall mounting and fixings

⚠ Warning In order to prevent overturning this product must be used with the wall attachment device provided. Wall fixing screws are not included, since different wall materials require different types of screws/ fixings. Please ensure you use the correct screws/fixings for your type of walls and seek professional advice if you are not sure. Installation shall be carried out exactly according to the instructions provided -otherwise a safety risk can occur if incorrectly installed. Failure of the product due to incorrect fixings is the responsibility of the installer.

Important: When drilling into the walls always check that there are no hidden wires or pipes etc.

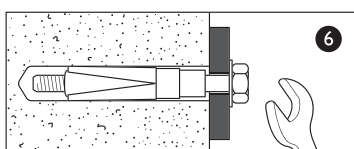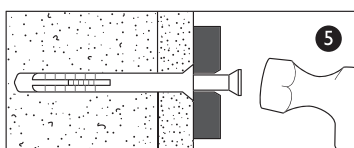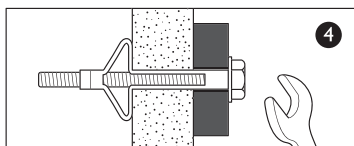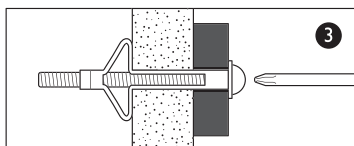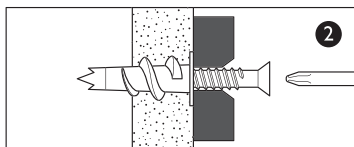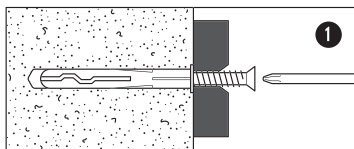

Types of walls

You can use one of the following types of wall plug if your walls are made of brick, breezeblock, concrete, stone or wood.

1. General Purpose wall plug

Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general - purpose wall plugs can be used.

2. Plasterboard wall plug

For use when attaching light loads on to plasterboard partitions.

3. Cavity Fixing wall plug

For use with plasterboard partitions or hollow wooden doors.

4. Cavity Fixing- Heavy Duty wall plug

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

5. Hammer Fixing wall plug

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

6. Shield Anchor wall plug - Heavy loads

For use with heavier loads such as 1V and Hi-Fi speakers and satellite dishes etc.

⚠ Care and maintenance

Safety: Periodically check all fittings and wall fixings to ensure they have not come loose and retighten as necessary.

Care guide

Care and maintenance

Wood furniture

Wood displays different grain patterns depending on which way they are cut – for example, the ‘medullary ray’ which can appear on oak furniture is a mark of good quality timber – these are just characteristics of the natural beauty of the wood. Some furniture is also deliberately aged and rustic.

Wood veneers also allow a distinctive pattern to be created on some surfaces, such as tabletops and drawer fronts by the way slivers are arranged.

All timber and veneer surfaces will change colour and mellow over time. New furniture will initially vary in shade from items that have been previously purchased.

How to care for your wood furniture

Furniture with a hard lacquer, wax polish or painted surface should be dusted with a dry cloth.

Waxed furniture will need to be given a coat of beeswax a couple of times a year to help maintain its lustre.

Spray polishes are best avoided as they contain silicones which may spoil the furniture’s surface when building up over time.

Make sure all surfaces are protected from heat and liquids by mats and coasters. Wipe up spills immediately and ensure that a mat or pad is placed under paper if you are writing.

Our furniture will endure most temperatures in the home, but it is best to avoid placing furniture next to heat sources such as radiators or fires. Be particularly careful with solid wood as the lack of humidity caused by home heating can cause damage such as warping.

Safety instructions

Never drag furniture when moving it, always lift it.

Periodically check all fixings to ensure none have come loose and retighten when necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

Retain these instructions for future reference.